



User Guide

Copyright Notice

© 2010 All Rights Reserved

Daxesoft Ltd.

Distribution Limited to Authorized Persons Only.

Trade Secret Notice

The PipeFlow.co.uk and Daxesoft Ltd. name and logo and all related product and service names, design marks, logos, and slogans are either trademarks or registered trademarks of Daxesoft Ltd. All other product names and trademarks contained herein are the trademarks of their respective owners.

Printed in the United Kingdom - March 2010

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement. The software may be used only in accordance with the terms of the license agreement. It is against the law to copy the software on any medium except as specifically allowed in the license agreement. No part of this document may be reproduced or transmitted in any form or by any means electronic or mechanical, including photocopying, recording, or information recording and retrieval systems, for any purpose without the express written permission of Daxesoft Ltd.

Version 5.12

Table of Contents

Table of Contents	3
Table of Figures	9
Introduction.....	13
Welcome to Pipe Flow Expert.....	13
Pipe Flow Expert Overview.....	13
Minimum Operating System Requirements	14
Registration and Licensing Information	15
Contacting PipeFlow.co.uk	17
Additional PipeFlow.co.uk Products	17
Interface and Menus	18
Menu Bar.....	18
File Menu	19
Edit Menu.....	20
Units Menu.....	21
Fluid Menu	21
Drawing Menu.....	22
Tools Menu	23
License Menu	23
Documentation Menu.....	23
Help Menu	24
Tool Bar.....	25
Tool Bar Buttons	25
Keyboard Shortcuts	28
Node Pane	29
Node Types	29
Tank Node Data.....	30
End Pressure Data	31
Join Point Data	32
Set Flow Demands Dialog	33
Pipe Pane	33
Pipe Features	34
Pipe Material data Dialog.....	35
Pipe Diameter Size Data Dialog	37
Pipe fitting friction coefficients Dialog	38
Set Component Pressure Loss Dialog	39
Set Control Data Dialog	40
Pump Data Dialog.....	41

Drawing Pane	43
Configuration Options Screen.....	44
Labeling Tab	45
Units Tab	46
Pipe Settings Tab	47
Node Updates Tab.....	49
Results Colors Tab	50
Calculations Tab	51
Results Tables	53
Viewing Individual Results	54
File and Design Operations.....	56
Creating a New Pipe System	56
Isometric System Options	56
Designing a Pipe System.....	57
Saving a System	57
Change the System View - Isometric Mode Toggle	58
Sending a System via E-mail	59
Printing a System.....	59
Saving a Screen Image.....	60
Saving a Drawing to an EMF Image	60
Emailing a Screen Image.....	60
System Options	61
Choosing Units (imperial/metric).....	61
Choosing Item Labeling	62
Choosing the System Units.....	63
Choosing Pipe Drawing Defaults	64
Change attributes of more than one pipe	68
Node Updates	69
Results Colors.....	70
Configuring the Calculation Parameters	71
Fluid Zones.....	73
Defining Fluid Zones	73
Properties of Mixed Fluids	74
Two Phase Flow – Additional Pressure Drop	74
Fluids Database	75
Adding Fluids to the Fluid Database	76
Adding Gas Data to the Fluid Database	77
Tanks.....	78
Add a Tank.....	78

Nodes (Join Points).....	80
Adding a Node	80
Pipes	82
Adding a Pipe.....	82
Adding a Pipe Material to the Database	85
Adding Pipe Size Data to the Database	85
Reversing the Pipe Flow	86
Shutting Off a Pipe in the System.....	86
Using the Pipe Sub-menu while drawing	87
Preventing Backflow in a pipe.....	88
Using the Default Pipe feature while drawing	88
Fittings and Valves	89
Adding a Fitting to a pipe	89
Adding a Fitting to the Database	91
Components.....	94
Adding a Component with a pressure loss	95
Cv and Kv Flow Coefficients	97
Adding a component/valve with a Cv or Kv value	97
Control Valves (FCV, PRV, BPV)	99
Adding a Flow Control Valve.....	101
Adding a Pressure Reducing Valve	101
Adding a Back Pressure Valve	102
Pumps	103
Adding a Pump	104
Working with the Pump Curve Graph	106
Adding a Fixed Flow Rate Pump	106
Note about fixed flow rate pumps	107
Adding a Fixed Head / Pressure Rise Pump	107
Example Pumps (with Flow versus Head curve)	108
Demand Flows	109
Adding a Demand Flow at a join point	109
Demand Pressures	111
Adding a Demand Pressure at an end node.....	111
Text Items.....	113
Adding Text to the drawing	113
Viewing, Modifying, and Deleting Items	114
Zooming in or Out in the Drawing Pane.....	114
Zooming in to a selected area	114
Viewing the whole System in the Drawing Pane	115

Panning a System in the Drawing Pane	115
Finding a Pipe or a Node	115
Mirror View of the Pipe System	115
Inverted View of the Pipe System	116
Viewing and Modifying System Data	116
Individual Item Viewing and Modifying.....	117
Moving Components in a System	117
Cutting, Copying, and Pasting Nodes & Pipes	118
Rotating selected items.....	119
Copying between drawings.....	120
Moving a Pipe to link at a new position.....	120
Using the Undo and Redo Functions.....	120
Deleting Components in a System	120
Deleting a Node or Pipe.....	121
Deleting a Group of Components	121
Deleting a Demand Flow.....	122
Deleting Fittings	122
Deleting a Component Pressure Loss	122
Deleting a Control Valve	123
Deleting a Pump	123
Calculations and Results.....	124
Calculating and Solving a System	125
Configuring the System Results	128
Viewing the System Results	130
Saving the System Results	130
Exporting the System Results.....	131
Redesigning the System	132
Amending the System.....	132
Create a PDF Report of the System Results	134
Example Systems	136
Example 01: Three Reservoirs	137
Example 01: Three Reservoirs	137
Example 02: Tank to Joint Outflow	138
Example 03: Gravity Flow to Three Outlet Points.....	139
Example 04: Fixed Flow Pumping to Three Tanks.....	140
Example 05: Fixed Head Pumping to Three Tanks.....	141
Example 06: Fixed Speed Pumping -Chemical Transfer System.....	142
Example 07: Pressurized Pumping Stations.....	143
Example 08: Water Circulation System	144

Example 09: Cooling – 12 Air Handling Units	145
Example 10: Compressed Air Distribution	146
Example 11: HVAC System	147
Example 12: Reverse Pipe	148
Example 13: Energy Recovery with Turbine System	149
Example 14: Top-up Tanks – Pressurized Recirculation System.....	150
Example 15: Replacement Pipe Size	151
Example 16: Step-by-Step - Walkthrough Example	152
Example 17: Pressure Reducing Valves	157
Example 18: Back Pressure Valves.....	158
Example 19: Multiple Fluid Zones.....	159
Example 20: Methane Pipeline Isothermal Flow.....	160
Example 21: Zoned Compressed Air Flow	161
Example Isometric 01: Chilled Water Piping System	162
Example Isometric 02: Three Floor HVAC System	163
Example Isometric 03: Water Circulation System	164
Example Isometric 04: Cooling with AHUs	165
Example Isometric 05: Production Area Cooling Alt Views	166
Example Isometric 06: Compressed Air Fluid Zones	167
Example Isometric 07: Fire Protection Sprinkler System	168
Example Isometric 08: Campus Chilled Water Cooling.....	169
Example Isometric 09: Water Mist Fire Protection	170
Calculation Theory and Method of Solution	171
Fluid flow states	171
Fluid viscosity.....	171
Reynolds numbers	172
Friction factors	172
Colebrook-White Formula	172
Friction Losses (resistance to flow)	172
Darcy-Weisbach Formula	173
Fitting head loss.....	173
'K' Factor fitting head loss calculation.....	173
Calculate total pressure loss.....	174
Energy and Hydraulic Grade Lines.....	174
Balanced flow state.....	175
Loops, Nodes and Pipes.....	175
Solving the unknown values	176
System Calculation Tolerances	177
System Components.....	177

Cv and Kv Flow Coefficients	177
Flow Control Valves	182
Pressure Reducing Valves.....	183
Back Pressure Valves.....	184
Pumps (with Flow versus Head Curve)	185
Fixed Flow Rate Pumps.....	185
Fixed Head / Pressure Rise Pumps.....	186
Net Positive Suction Head available	186
Two Phase Flow	186
Slurries	186
Working with compressible fluids	187
Considerations when using compressible fluids	187
Glossary	189
Index.....	190

Table of Figures

Figure 1 Pipe Flow Expert License Registration	15
Figure 2 Pipe Flow Expert interface	18
Figure 3 Menu bar	18
Figure 4 File menu	19
Figure 5 Edit menu	20
Figure 6 Units menu	21
Figure 7 Fluid menu	21
Figure 8 Drawing menu	22
Figure 9 Tools menu	23
Figure 10 Registration menu	23
Figure 11 Documentation menu	23
Figure 12 Help menu	24
Figure 13 Node pane for tanks	30
Figure 14 Node pane for demand pressures (End Pressure)	31
Figure 15 Node pane for join points	32
Figure 16 Set Flow Demands dialog	33
Figure 17 Pipe pane and Pipe Sub-menu	34
Figure 18 Pipe Material data dialog	35
Figure 19 Pipe diameter data dialog for size	37
Figure 20 Pipe fitting friction coefficients	38
Figure 21 Set Component Pressure Loss dialog	39
Figure 22 Set Control Data dialog	40
Figure 23 Pump Data dialog	41
Figure 24 Drawing Panes Standard or Isometric	43
Figure 25 Configuration Options dialog – Labeling tab	45
Figure 26 Configuration Options dialog – Units tab	46
Figure 27 Configuration Options dialog – Pipe Settings tab	48
Figure 28 Configuration Options dialog – Node Updates tab	49
Figure 29 Configuration Options dialog – Results Colors tab	50
Figure 30 Configuration Options dialog – Calculations tab	51
Figure 31 Results tables	53
Figure 32 View Individual Results	55
Figure 33 Save As dialog	58
Figure 34 Printing Information dialog	59
Figure 35 Configuration Options dialog – Labeling tab	62
Figure 36 Configuration Options dialog – Units tab	63
Figure 37 Configuration Options dialog – Pipe Settings tab	64

Figure 38 Pipe diameter data dialog with materials list	65
Figure 39 Pipe diameter data dialog with materials size	66
Figure 40 Pipe fitting friction coefficients dialog	67
Figure 41 Configuration Options dialog – Pipe Settings tab	68
Figure 42 Configuration Options dialog – Node Updates tab	69
Figure 43 Configuration Options dialog – Results Colors tab	70
Figure 44 Calculation settings	71
Figure 45 Fluid Zone Menu	73
Figure 46 Fluid data dialog	75
Figure 47 Properties of Gases	77
Figure 48 Node pane for tanks	78
Figure 49 Node pane for join points	80
Figure 50 Set Flow Demands dialog	81
Figure 51 Pipe diameter data dialog with materials list	83
Figure 52 Pipe diameter data dialog with materials size	84
Figure 53 Pipe Sub-Menu	87
Figure 54 Pipe fitting friction coefficients dialog	90
Figure 55 Adding a fitting in the Pipe fitting friction coefficients dialog	92
Figure 56 Choose symbol dialog	92
Figure 57 Sudden Contraction K value	93
Figure 58 Set Component Pressure Loss dialog	96
Figure 59 Adding a Cv / Kv flow coefficient value	98
Figure 60 Set Control Valve Data dialog	100
Figure 61 Add Pump Confirm dialog	104
Figure 62 Pump Data dialog	105
Figure 63 Fixed Flow Rate Pump	107
Figure 64 Fixed Head / Pressure Pump	108
Figure 65 Set Flow Demands dialog	110
Figure 66 Node pane for end pressures	111
Figure 67 Add Free Text Label Dialog	113
Figure 68 Network Data – Grid view	116
Figure 69 Result Log dialog	125
Figure 70 Pipe Flow Expert interface in Results mode	126
Figure 71 Results Tables	126
Figure 72 PDF Report Options Dialog	127
Figure 73 PDF Report Pages	127
Figure 74 Configuration Options dialog – Labeling tab	128
Figure 75 Configuration Options dialog – Units tab	129
Figure 76 Results Tables – All Results tab	130

Figure 77 Save Results as Excel File dialog.....	131
Figure 78 pipe system results in Microsoft Excel.....	132
Figure 79 Create PDF Report Options.....	134
Figure 80 PDF Results Report Pages.....	135
Figure 81 Example Systems Dialog	136
Figure 82 Example 01 – Three Reservoirs	137
Figure 83 Example 02 – Tank to Joint Outflow	138
Figure 84 Example 03 – Gravity Flow to 3 Outlet Points	139
Figure 85 Example 04 – Fixed Flow Pumping to 3 Tanks	140
Figure 86 Example 05 – Fixed Head Pumping to Three Tanks.....	141
Figure 87 Example 06 – Fixed Speed Pumping - Chemical Transfer System	142
Figure 88 Example 07 – Pressurized Pumping Stations	143
Figure 89 Example 08 – Water Circulation System	144
Figure 90 Example 09 – Cooling – 12 Air Handling Units.....	145
Figure 91 Example 10 – Compressed Air Distribution	146
Figure 92 Example 11 – HVAC System	147
Figure 93 Example 12 – Reverse Pipe	148
Figure 94 Example 13 – Energy Recovery with Turbine	149
Figure 95 Example 14 – Top-up Tanks – Pressurized Recirculation System	150
Figure 96 Example 15 – Replacement Pipe Size	151
Figure 97 Example 16 – Step-by-Step.....	152
Figure 98 Example 17 – Pressure Reducing Valves	157
Figure 99 Example 18 – Back Pressure Valves.....	158
Figure 100 Example 19 – Multiple Fluid Zones.....	159
Figure 101 Example 20 – Methane Pipeline Isothermal Flow	160
Figure 102 Example 21 – Zoned Compressed Air Flow	161
Figure 103 Example ISO 01 – Chilled Water Piping System.....	162
Figure 104 Example ISO 02 – Three Floor HVAC System.....	163
Figure 105 Example ISO 03 – Water Circulation System.....	164
Figure 106 Example ISO 01 – Cooling With AHUs.....	165
Figure 107 Example ISO 05 – Production Area Cooling Alt Views.....	166
Figure 108 Example ISO 06 – Compressed Air Fluid Zones.....	167
Figure 109 Example ISO 07 – Fire Protection Sprinkler System.....	168
Figure 110 Example ISO 08 – Campus Chilled Water Cooling	169
Figure 111 Example ISO 09 – Water Mist Fire Protection.....	170
Figure 112 Hydraulic Grade Line	174
Figure 113 Flow balance at a join point	175
Figure 114 Pressure balance around a loop.....	175
Figure 115 Pseudo Loop.....	176

Figure 116 Flow Control Valve replacement.....	182
Figure 117 Pressure Reducing Valve replacement	183
Figure 118 Back Pressure Valve replacement.....	184
Figure 119 Fixed Flow Rate Pump replacement.....	186

Introduction

Welcome to Pipe Flow Expert

Pipe Flow Expert is designed to help today's engineers analyze and solve a wide range of problems where the flow and pressure losses throughout a pipe network must be determined.

The Pipe Flow Expert program will allow you to draw a complex pipeline system and analyze the features of the system when flow is occurring.

Pipe Flow Expert calculates the balanced steady flow and pressure conditions of the system.

It will allow you to perform analysis of alternate systems under various operating conditions.

The reported results include:

- flow rates for each pipe
- fluid velocities for each pipe
- Reynolds numbers
- friction factors
- friction pressure losses
- fitting pressures losses
- component pressure losses
- pressures at each node
- HGL (hydraulic grade line) values
- pump operating points
- NPSHa at pump inlet

The input and display of system information on the Pipe Flow Expert drawing and in the results tables can be shown in metric or imperial units to suit your preference and specific units for each item (such as flow rate) can also be configured and set on an individual basis as required.

Pipe Flow Expert has been designed for the professional engineer who needs a powerful tool that has a class leading, easy to use and robust interface that makes it simple to design and analyze pipe networks.

Pipe Flow Expert Overview

Pipeline systems range from very simple ones with a single pipe to very large and complex networks with hundreds of interconnecting pipes. They may be as simple as a single pipe carrying water from one reservoir to another reservoir, or they may be more complex with many pipelines interconnecting to distribute fluid over a large area, or they could fall somewhere in-between such as a system that transfers a chemical from a supply container to various process points.

The pipelines may vary in size and nature and will usually involve changes in elevation from one point to another. These pipeline systems may include reservoirs, pressurized tanks, pumps, valves, flow control devices, heat exchangers and other components that affect flow in the pipelines.

The pipeline system is modeled by drawing the join points and the connecting pipes on a drawing pane. Horizontal, vertical or sloping lines can be used to connect one node to another node. The physical data describing the system is entered by the user and typically includes:

- The internal size, internal roughness and length of each connecting pipe
- The elevation of each join point (node)
- The In-flow and the Out-flow at each join point (if applicable)
- The elevation, liquid level and surface pressure data for each tank
- The performance data for each pump

Data input boxes are located at the left hand side of the drawing pane. These input boxes will display the data for the currently selected node or pipe and may be used to amend the current data. The data for a node, pipe, component, pump, etc. can be amended at any point during the design (drawing) process.

Once the design has been completed, the system can be analyzed and the flow and pressure results can be calculated.

The pressure losses within the system are calculated using friction factors obtained from the Colebrook-White equation, and the friction pressure loss for each pipe is obtained from the Darcy-Weisbach equation.

An initial approximate solution is obtained using Linear Theory methods and an iterative approach to adjust the flow rates until an approximate pressure balance is achieved.

An alternative approach is to use estimates for the out-flows and to use these estimates to set an initial flow rate in each pipe, with the total in-flow to each join point matching the total out-flow from each join point. The initial flow estimates are unlikely to give a balanced pressure result over the whole system and must be further refined using an iterative approach to adjust the flow rates until an approximate pressure balance is achieved.

Pipe Flow Expert defines the elements of the pipeline system in a series of matrix equations and uses the Newton method to adjust the estimates for the flow rate in each pipe.

Once an approximate solution has been obtained, the results are refined using a variation of the Newton method to ensure convergence until a balanced pressure result is obtained.

The results of the flow rates for each pipe, the fluid velocities for each pipe, Reynolds numbers, friction factors, friction pressure losses for each pipe, fittings pressure losses, pressure at join points (nodes), HGL (hydraulic grade line), pump operating points and more can be viewed on the drawing and on the results grid.

Minimum Operating System Requirements

Pipe Flow Expert has been designed to work on Microsoft® Windows 7 (all versions), Microsoft® Windows Vista (all versions), Microsoft® Windows XP Home and Professional, operating systems.

It is recommended that your computer system has at least the following minimum specification:

- Processor: 1.00 GHz Intel® Pentium (or similar).
- Memory: 1.0 GB of RAM.
- Display: Color Monitor with a resolution of 1024 x 768 pixels

Microsoft® Excel will be required if the user wishes to export the results tables to a spreadsheet format.

Registration and Licensing Information

Pipe Flow Expert is a software package that is provided for use on personal computer systems.

Installation

When the program is installed it generates a unique product number that is shown on the registration screen when you run the program. A matching license code must be entered to fully enable and license the software.



Figure 1 Pipe Flow Expert License Registration

Purchasing a License

Each installation of the software requires a license that must be purchased from www.PipeFlow.co.uk - **current prices are shown on the web site.**

Once enabled, the software can be used 'forever' on the machine to which it was installed. You do not require an internet connection when licensing and enabling the software.

Moving a License

We have a method of allowing a user to move the license to another machine and this service is provided free of charge for those users who have an annual support and maintenance agreement. A fee is charged for generating a new license code for users who do not have an annual support package.

Network Licensing

The software can be operated over a network and used by a number of concurrent users. Network installation is simple and only requires that the software is installed to a shared network drive. Each user then runs the program as normal from the shared drive. When licensing the program you will need to purchase a software license that supports the maximum number of concurrent users that you require.

Please email info@pipeflow.co.uk with your network licensing requirements to obtain a competitive quote for your specific needs.

Software Distribution Note

All of our software is provided via download from our web site at www.pipeflow.co.uk. We do not provide the software on CD, since it would be exactly the same as the program that can be downloaded from our web site. This helps to reduce our costs, which allows us to offer lower prices for our customers and also guarantees that the user is always installing the latest version of the software. Users are free to make their own CD copy of the software, however every installation of the program will generate a new product code and a new license code will still be required.

New Customers

Those of you who have previously purchased software from us will already be assured of our reputation and will not be concerned about receiving the software via download. However we understand that as a new customer you may be concerned that you do not get a CD with the software on.

If we provided the software on CD it would be the exact same program that you can download from our web site (in fact the web site will always carry the very latest version of the software). Having a CD would not allow you to install and enable the software on multiple computers, since each installation would still generate a unique product number and would require a matching license code.

When you purchase a program from our web site, you will automatically be emailed with a unique purchase token and an invoice/receipt that confirms your purchase. This is all you need for proof of purchase and we will always be able to confirm your purchase in our database.

We have sold software via download for over 10 years. We are not one of those companies who you will not be able to contact or get a response from. As our existing customers know, our service and assistance with any issues you may have is worth far more than just having the software on CD.

Summary

- Pipe Flow Expert can be downloaded and installed for a free trial.
- A license code can be purchased from our web site that will fully enable the software.
- A user can be up and running with a licensed version of the software within a few minutes.
- 90 days of annual support and maintenance is provided with your purchase of Pipe Flow Expert.
- Ongoing annual support and maintenance can be purchased from our web site (this provides email support and guarantees that you will always be able to use the latest version of the software).

Contacting PipeFlow.co.uk

Email: info@pipeflow.co.uk
Internet: <http://www.pipeflow.co.uk>

UK Telephone: +44 (0)1625 509142
USA Telephone: +1 650-276-3569
+1 650-276-FLOW

PipeFlow.co.uk is a trading name of Daxesoft Ltd (U.K. Registered Company)

Additional PipeFlow.co.uk Products

Pipe Flow Wizard - "What if?" Calculations for Liquids and Gases

Pipe Flow Wizard is able to perform four different calculations depending on the known information. It can calculate:

- Pressure Drops
- Flow Rates
- Size of Internal Diameters
- Pipe Lengths

Pipe Flow Wizard will perform calculations for individual pipes.

Pipe Flow Wizard will calculate results for **LIQUIDS or COMPRESSED GASES**

A Fluid Database is included with viscosity and density of common fluids.

Flow Advisor - for Channels and Tanks

Flow Advisor may be used to estimate water flow rate from various shaped channels and tanks. It can calculate:

- Open Channel Flow
- Water Flow Rates
- Time taken to empty tanks
- Volume, Capacity, Weight and Expansion

A Materials Database is included with density and coefficient of expansion of common materials.

All of our software can be downloaded for a free trial by visiting www.pipeflow.co.uk

Once you have installed a trial version of one of our software products it can be fully enabled and licensed by buying a purchase token / license from our web site. You can be up and running with a fully licensed program within just a couple of minutes.

Interface and Menus

This section details the different features of the Pipe Flow Expert interface. For each feature, there is an explanation, a screen shot and a table providing descriptions for each element of the feature. The sections following this section provide instructions for using the Pipe Flow Expert application.

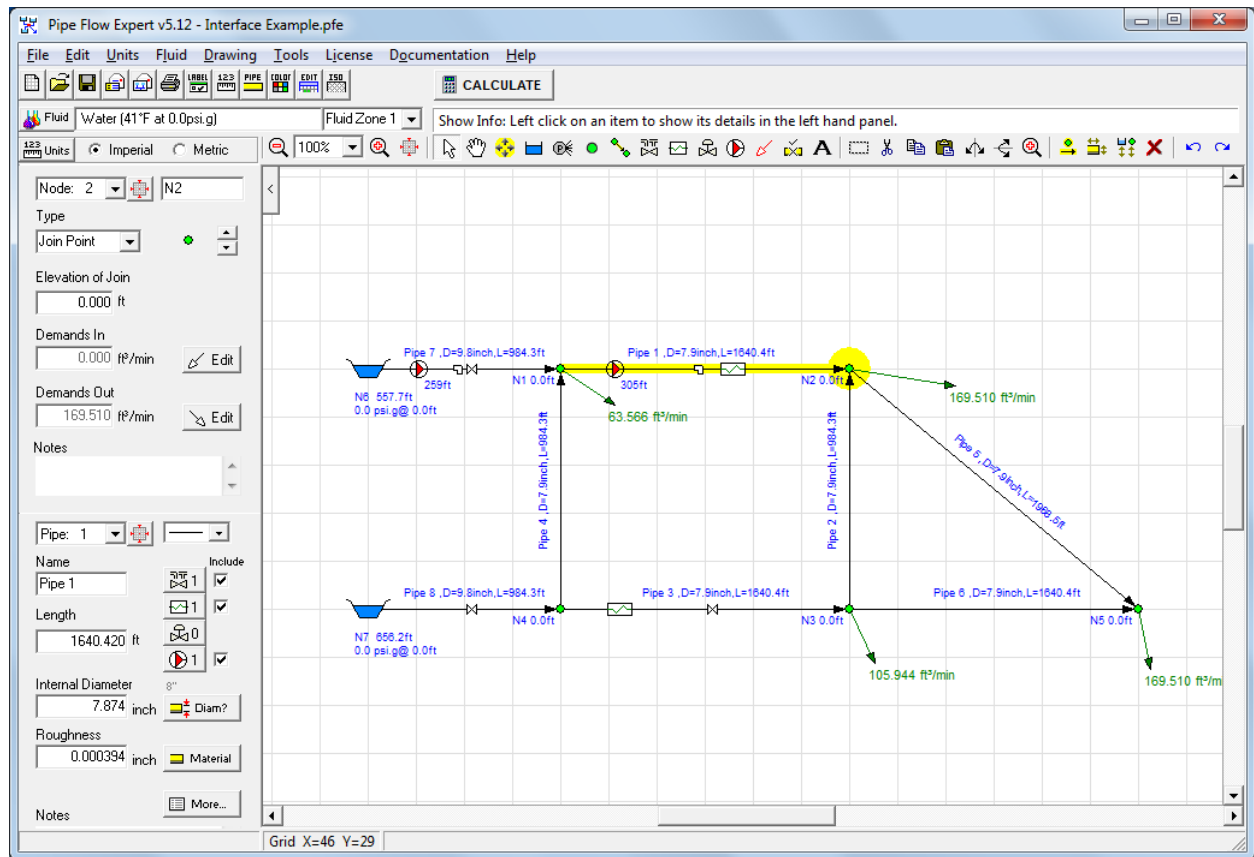


Figure 2 Pipe Flow Expert interface

Menu Bar

The menu bar has nine different menu selections to help you navigate and work in Pipe Flow Expert.

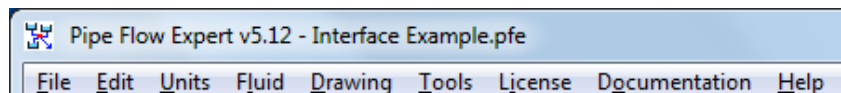


Figure 3 Menu bar

File Menu

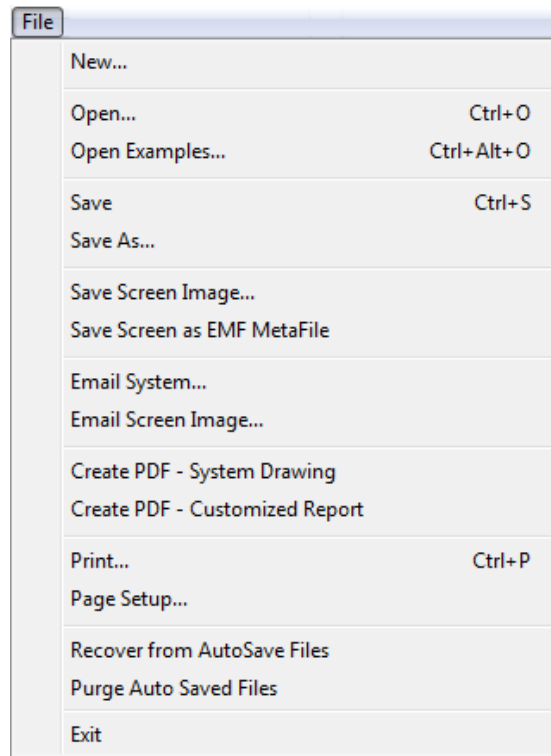


Figure 4 File menu

Menu Items	Description
New	Opens a new drawing grid in the Drawing pane.
Open	Opens the Open dialog. Select a .pfe file and click the Open button to open a pipe system drawing in Pipe Flow Expert.
Open Examples	Opens the Example Systems dialog. . Select an example and click the Load This Example System button to open an example system drawing in Pipe Flow Expert.
Save	Saves your changes to the pipe system drawing.
Save As	Opens the Save As dialog. Browse to where you want to save the pipe system, name the .pfe file, and click Save .
Save Screen Image	Save an image of the visible drawing area as a jpeg file.
Save Screen as EMF Metafile	Save the drawing as an Enhanced Metafile
Email System	Opens a new email message with a .pfe file of your current design attached to an email.
Email Screen Image	Opens a new e-mail message with a jpeg of the screen image attached to the e-mail.
Create PDF – System Drawing	Create a PDF document of the system drawing.
Create PDF – Customized Report	Create a PDF customized report, including cover sheet with logo image, system drawing and results tables.

Print	Opens the Printing Information dialog. Type the page title and click the Print button to print the image currently visible in the Drawing pane.
Page Setup	Opens the Print Setup dialog. Define your printing preferences and click OK
Recover from AutoSave Files	Pipe Flow Expert will automatically save a backup of your current design at approximately 5 minute intervals. In the event of a problem you can try to load the most recent backup file to try and recover your system.
Purge Auto Saved Files	Delete the files created by the auto save feature
Exit	Closes the application.

Edit Menu

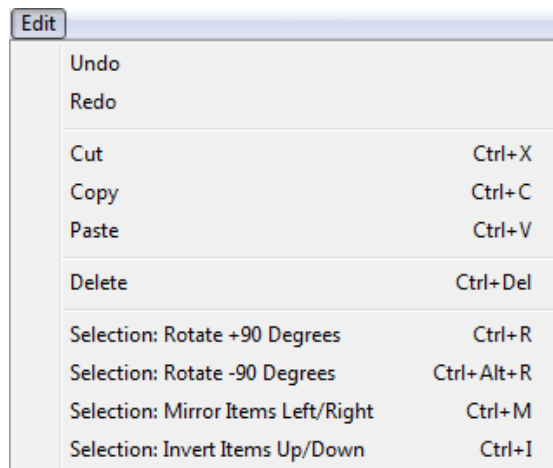


Figure 5 Edit menu

Menu Items	Description
Undo	The last node or pipe action performed in the Drawing pane is undone.
Redo	The last undo action is redone.
Cut	Selected items are cut to the clipboard.
Copy	Selected items are copied to the clipboard.
Paste	Items on the clipboard are pasted in the Drawing pane.
Delete	Selected item(s) are deleted.
Selection: Rotate +90 Degrees	Selected items are rotated 90 degrees clockwise
Selection: Rotate -90 Degrees	Selected items are rotated 90 degrees anticlockwise
Selection: Mirror Items Left/Right	Selected items are mirrored left to right
Selection: Invert Items Up/Down	Selected items are inverted up to down

Units Menu

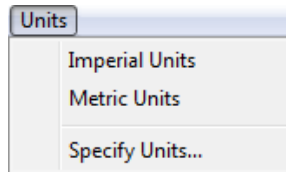


Figure 6 Units menu

Menu Items	Description
Imperial Units	Converts all values to imperial units.
Metric Units	Converts all values to metric units.
Specify Units	Opens the Units tab of the Configurations Options dialog. Use the Units tab to define the units for each element of the pipe system drawing.

Fluid Menu

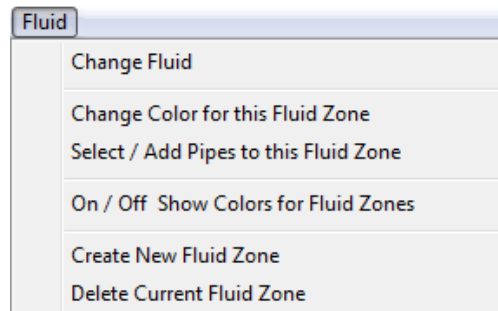


Figure 7 Fluid menu

Menu Items	Description
Change Fluid	Opens the Fluid data dialog. Use the Fluid data dialog to define the fluid for the selected fluid zone.
Change Color for this Fluid Zone	Select a background highlight color for this fluid zone.
Select / Add Pipes to this Fluid Zone	Display the fluid zone selection rectangle. Click and drag the rectangle to enclose the pipes to be set to the current fluid zone
On / Off Show Colors for Fluid Zones	Toggle the fluid zone background highlight colors on or off.
Create New Fluid Zone	Opens the Fluid Manager to select a fluid for a new Fluid Zone
Delete Current Fluid Zone	Delete the current fluid zone from the system. All pipes that previously contained this fluid will now contain the fluid from zone 1.

Drawing Menu

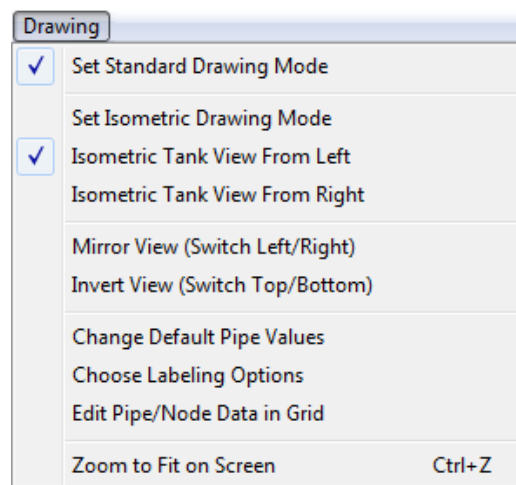


Figure 8 Drawing menu

Menu Items	Description
Set Standard Drawing Mode	Set rectangular grid drawing mode
Set Isometric Drawing Mode	Set isometric grid drawing mode
Isometric Tank View From Left	Show isometric tanks viewed from left
Isometric Tank View From Right	Show isometric tanks viewed from right
Mirror View (Switch Left/Right)	Mirror the complete drawing
Invert View (Switch Top/Bottom)	Invert the complete drawing
Change Default Pipe Values	Opens the Default Values tab of the Configurations Options dialog. Use the Default Values tab to define default values for the next pipe to be drawn in the pipe system.
Choose Labeling Options	Opens the Labeling tab of the Configurations Options dialog. Use the Labeling tab to define how the pipe system drawing is labeled.
Edit Pipe/Node Data in Grid	Opens a grid view of the data for pipes, tanks, end pressures and join points in the pipeline system. The current values in the grid may be amended to change the system data . The drawing will be updated immediately as the changes are made.
Zoom to Fit on Screen	Resize the drawing and centre in the visible drawing area

Tools Menu

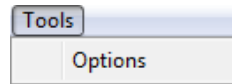


Figure 9 Tools menu

Menu Items	Description
Options	Opens the Configuration Options dialog. Use the Configuration Options dialog to configure the pipe system.

License Menu

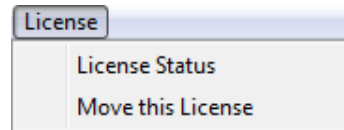


Figure 10 Registration menu

Menu Items	Description
License Status	Displays the current license status and registration information.
Move this License	Displays instructions that explain how to move the license from one computer to another.

Documentation Menu

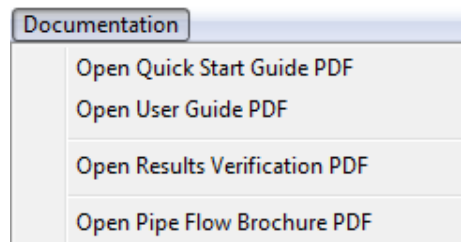


Figure 11 Documentation menu

Menu Items	Description
Open Quick Start Guide PDF	Open the Quick Start Guide PDF document
Open User Guide PDF	Open the full User Guide PDF document
Open Results Verification PDF	Open the Calculation Results Verification PDF document
Open Pipe Flow Brochure PDF	Open the Pipe Flow Expert PDF Brochure.

Help Menu

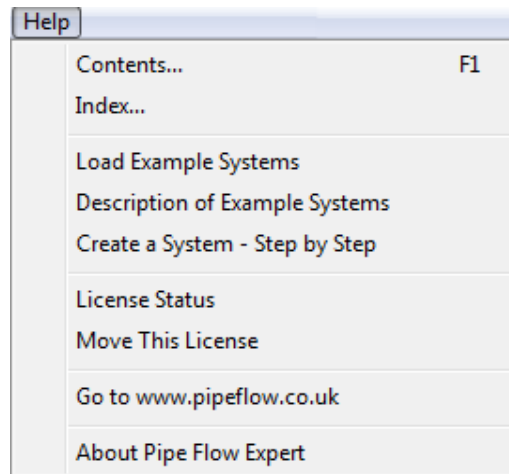


Figure 12 Help menu









 


 
Menu Items	Description
Contents	Displays the Help information starting at the contents page.
Index	Displays the Help information starting at the index page.
Load Example Systems	Lists the examples systems that can be loaded, viewed, and the results calculated.
Description of Example Systems	Displays the Help information about the example systems.
Create a System – Step by Step	Displays the Help information starting at the page that describes how to create a system using a step by step walkthrough of each operation.
License Status	Displays the current license status and registration information.
Move This License	Displays instructions that explain how to move the license from one computer to another.
Go to www.pipeflow.co.uk	Launches an internet browser window to view the Pipe Flow web site.
About Pipe Flow Expert	Displays a pop-up window that shows details about the software.

Tool Bar

Most of the Pipe Flow Expert functions can be performed by using a button on the tool bar. The Re-Design and Show Log buttons are only available on the tool bar after you click the Calculate button on the tool bar.

The tool bar also contains a field for determining whether the unit values displayed in Pipe Flow Expert and the pipe system are imperial or metric. The first step in creating a pipe system is to select the Imperial or Metric option. You can define whether imperial or metric values are used from the tool bar, the Units menu, or from the Units tab in the Configuration Options dialog. Inches, feet, and gallons are examples of imperial units. Centimeters, meters, and liters are examples of metric units.

Tool Bar Buttons

Button	Name and Description
	New Grid – Opens a new drawing grid.
	Open File – Opens the Open dialog. Select a .pfe file and click the Open button to open an existing pipe system drawing in Pipe Flow Expert.
	Save File – Saves your changes to the pipe system drawing.
	Email System Information – Opens a new e-mail message with the pipe system .pfe file attached to the e-mail.
	Email Screen Image – Opens a new e-mail message with a jpeg of the screen image attached to the e-mail.
	Print – Opens the Printing Information dialog. Type the page title and click the Print button to print the image currently visible in the Drawing pane.
	Choose Labeling – Opens the Labeling tab of the Configurations Options dialog. Use the Labeling tab to define how the pipe system is labeled in the Drawing pane.
	Choose Units – Opens the Units tab of the Configurations Options dialog. Use the Units tab to define the units for each element of the pipe system.
	Set Pipe Default Drawing Values – Opens the Pipe Settings tab of the Configurations Options dialog. Use the Pipe Settings tab to define the pipe default values for drawing or to copy some of the pipe attributes to selected pipes in the system.
	Adjust Colors on Results Screen – Opens the Results Colors tab of the Configurations Options dialog. Use the Results Colors tab to display a range of colors for a chosen results category.
	Network Grid View – Opens a grid to display details of pipes, tanks, end pressures and nodes. The data displayed in the grid may be edited to change the network data. Any changes are applied immediately to the drawing.
	Toggle Isometric Grid – Switch to Isometric Drawing Grid, or back to Standard Grid.

The **Hint** pane displays tips for using the button currently selected on the tool bar. The **Hint** pane displays tips for the following buttons:

Show Info:



Node 5, 2.10

In **Results** mode the **Hint** pane is used to display information about the flow rates in pipes, velocities in pipes, pressure drop in pipes, pressures at join points, HGL (hydraulic grade line), elevations of tanks and nodes, and fluid heads in the pipeline system. Items are highlighted by moving the cursor around the drawing pane. Data for the highlighted item is displayed in the hint pane.



Fluid – Opens the **Fluid menu**, select change fluid to open the **Fluid data** dialog. Use the **Fluid data** dialog to define the fluid for the currently selected fluid zone. Select other fluid menu options to change the **fluid zone color** or to **create a new fluid zone** or to **delete a fluid zone**.



Zoom Out – Moves the focus of the pipe system out to see more of the drawing at a reduced size in the Drawing pane.



Zoom In – Moves the focus of the pipe system in to get a close-up view in the Drawing pane.



Move to Centre of Grid – Centers the pipe system on the drawing grid.



Show Item Info – Select the show information cursor. Click an item in the Drawing pane to display its details in the Node pane, Pipe pane, or dialog associated with the selected component.



Pan the Drawing – Select the move grid cursor. Click in the Drawing pane, and while holding down the left mouse button, move the mouse to pan the drawing.



Drag and Move Items – Highlights all items on the drawing. Select a highlighted object, and while holding down the left mouse button, drag the object to its new position.



Add Tank – Select the tank cursor. Click where you want to add a tank in the Drawing pane. Use the Node pane to enter the Elevation, Liquid level and Fluid surface pressure for the tank.



Add Demand (Pressure) – Select the end pressure cursor. Click where you want to add a fixed pressure demand in the Drawing pane. Use the **Node pane** to enter the pressure and elevation for this fixed pressure demand.



Add Join Point – Select the join point (node) cursor. Click where you want to add a pipe join point in the Drawing pane.



Add Pipes – Select the draw pipes cursor. Click on a node in the Drawing pane where you want to add a pipe, and then click where you want the pipe to end. Right-click to turn off the rubber banding.



Add Fittings – Select the valve and fittings cursor. Click on the pipe on which you want to add valves or fittings. Use the **Pipe fittings friction coefficients dialog** to select the valves or fitting to be added.



Add Component Pressure Loss – Select the component cursor. Click on the pipe on which you want to add a component. Use the **Component pressure loss dialog** to enter the pressure loss characteristics of the component.



Add Control Valve – Select the control valve cursor. Click on the pipe on which you want to add a control valve. Use the **Control data dialog** to choose a flow valve type. Choose a Flow Control Valve (FCV) to set the flow rate required in the pipe, or a Pressure Reducing Valve (PRV) to set the pressure required at the end of the pipe, or a Back Pressure Valve (BPV) to set the pressure required at the start of the pipe.



Add Pump – Select the pump cursor. Click on the pipe on which you want to add a pump. Use the **Pump data dialog** to enter the pump performance characteristics.



Add Demand (Flow) – Select the add demand flow cursor. Click on a node in the Drawing pane where you want to set a demand flow. Use the **Flow demands dialog** to set the **In-flows** or **Out-flows** at the selected node.



Toggle to Open/Close a Pipe – Select the open/close pipe cursor. Click on a pipe in the Drawing pane where you want to close a pipe or to re-open a pipe that has been closed previously.



Add Text – Add Free text labels to the drawing.



Selection Tool – Select the selection rectangle cursor. Click in the Drawing pane, and while holding down the left mouse button, drag the mouse to create a rectangle around the item(s) you want to select for cutting, copying, pasting, deleting or moving. You can select multiple items to cut, copy, paste, delete or move as a group. Click the right mouse button to exit from selection mode.



Cut – Selected items are cut to the clipboard.



Copy – Selected items are copied to the clipboard.



Paste – Items on the clipboard are pasted in the Drawing pane.



Mirror – Selected items are mirrored left / right.



Invert – Selected items are inverted up / down.



Zoom Selected Area – Displays the selection area in a close-up view in the centre of the Drawing pane.



Select Individual Pipes and Nodes – Use the Adjust attributes of Selected Pipes tool button to display the Pipe Settings tab to make changes to all selected pipes. Use the Adjust attributes of Selected Nodes tool button to display the Node Settings tab to make changes to all selected nodes.



Adjust Attributes of Selected Pipes – Opens the **Pipe Settings** tab of the **Configurations Options** dialog. Use the **Pipe Settings** tab to copy various attributes of the default pipe to each of the pipes selected. The **Selection Tool** may be used to Select a group of pipes prior to opening the **Pipe Settings** tab. Individual pipes can be added or removed from the selected list by checking or un-checking the box adjacent to the pipe description.



Adjust Attributes of Selected Nodes – Opens the **Node Updates** tab of the **Configurations Options** dialog. Use the **Node Updates** tab to copy node elevation and images to each of the nodes selected. The **Selection Tool** may be used to Select a group of nodes prior to opening the **Node Updates** tab. Individual nodes can be added or removed from the selected list by checking or un-checking the box adjacent to the node description.




Delete – Selected item(s) are deleted. If a selected item is a node then all pipes which connect to the node will also be deleted.



Undo last action – The last add pipe or node action performed in the Drawing pane is undone.




Redo last undo action – The last undo action is redone.

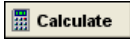


Calculate – Calculates the flow and pressure at each node of the pipe system drawing. The calculation results are displayed on the **Results** window.



Re Design – Changes the view back to the design mode. The pipe system is displayed in drawing mode again. This button is only visible on the tool bar after clicking the **Calculate** button.

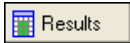

Results – Opens the **Results** window. This button is only visible on the tool bar after clicking the **Calculate** button.

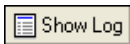

Show Log – Opens the **Results Log** dialog. The **Results Log** dialog indicates whether the pipe system was solved. This button is only visible on the tool bar after clicking the **Calculate** button.

Keyboard Shortcuts

Various keyboard shortcuts are provided which duplicate the actions of some Menu system options and some of the Tool Bar buttons.

- CTRL+X, for Cut
- CTRL-C, for Copy
- CTRL-V for Paste
- CTRL-DEL key for delete operations.
- CTRL+O for Open.
- CTRL+S for Save.
- CTRL+P for Print.
- CTRL+ALT+O for Open Examples.
- CTRL+R for Rotate +90 Degrees
- CTRL+ALT+R for Rotate -90 Degrees
- CTRL+M for Mirror Items Left/Right.
- CTRL+I for Invert Items Up/Down.
- CTRL+Z for Zoom to fit on screen

Node Pane

The Node pane displays the properties of the node selected on the pipe system in the Drawing pane. The type of node selected in the Type field determines which features are available in the Node pane.

 
Node Types

A node can be a join point, tank, or demand pressure—referred to as End Pressure in the Node pane. The type of node selected is shown in the Type field.

The type of node can be changed by selecting from the options shown in drop down type list.

Nodes are located at the beginning and end of a pipe and at the junction of pipes in a pipe system.

You can use the drop down Node Id list next to the Node name field to select an individual node or to scroll through each of the nodes in the pipe system.

Click the zoom button, , next to the drop down Node Id list to redisplay the drawing with the selected node at the center of the visible drawing area.

The Node pane is also used to enter and edit the specific details for the selected node.

The values and units displayed in the node pane are determined by the units selected on the Units tab in the Configuration Options dialog. The selected units can also be switched on mass between a predefined set of imperial and metric units.

Tank Node Data

Node: 6 N6

Type
Tank ▲ ▼

Surface Pressure
0.000 psi.g

Liquid Level
0.000 ft

Bottom Elevation
557.743 ft

Notes
Supply Tank 1 ▲ ▼

Figure 13 Node pane for tanks

Feature	Description
Node	The name of the node currently selected in the Drawing pane. Use the Node field to edit the node name.
Node Id List	Use the Node Drop Down List to select a node or to scroll through each of the nodes in the pipe system.
Type (Tank)	The type of node currently selected in the Drawing pane. Use the Type field to modify the node type. There are three types of nodes – join point, tank, or fixed pressure demand (End Pressure).
Type (Tank) Scroll buttons	Displays the image representing the selected tank in the Drawing pane. Use the Tank Scroll Up and Scroll Down buttons to select the tank image you want displayed on the pipe system drawing. The image you select does not affect any of the tank's properties or values.
Surface Pressure (Tank)	The surface pressure of the fluid in the tank expressed in the units displayed.
Liquid Level (Tank)	The amount of fluid in the tank expressed in the units displayed.
Bottom Elevation (Tank)	The elevation at the base of the tank expressed in the units displayed.
Notes	Notes about the node currently selected in the Drawing pane. Notes can be up to 200 characters.

 
End Pressure Data


The image shows a software interface for configuring a node. At the top, there is a 'Node' dropdown menu set to '5' and a text field containing 'N5'. Below this is a 'Type' dropdown menu set to 'End Pressure', accompanied by a circular icon with a 'P' and a pressure symbol. The 'Pressure' field is set to '0.0000' with the unit 'psi.g' to its right. The 'Elevation' field is set to '500.000' with the unit 'ft' to its right. To the right of these fields is a small diagram of a vertical pipe with a downward arrow and a green dot. At the bottom, there is a 'Notes' text area with up and down scroll buttons.

Figure 14 Node pane for demand pressures (End Pressure)

 
Feature	Description
Node	The name of the node currently selected in the Drawing pane. Use the Node field to edit the node name.
Node Id List	Use the Node Drop Down List to select a node or to scroll through each of the nodes in the pipe system.
Type (End Pressure)	The type of node currently selected in the Drawing pane. Use the Type field to modify the node type. There are three types of nodes – join point, tank, or demand pressure (End Pressure).
Type (End Pressure) Scroll buttons	Displays the image representing the selected demand pressure in the Drawing pane. Use the End Pressure Scroll Up and Scroll Down to select the demand pressure image you want displayed on the pipe system drawing. The image you select does not affect any of the demand pressure's properties or values.
Pressure (End Pressure)	The required pressure for the demand pressure expressed in the units displayed.
Elevation (End Pressure)	The elevation of the demand pressure expressed in the units displayed.
Notes	Notes about the node currently selected in the Drawing pane. Notes can be up to 200 characters.

 
Join Point Data

Node: 2  N2

Type
Join Point 

Elevation of Join
0.000 ft

Demands In
0.0000 ft³/sec 

Demands Out
2.8250 ft³/sec 


Notes


Figure 15 Node pane for join points

Feature	Description
Node Identification Number	Use the Node Drop Down List to select a node or to scroll through each of the nodes in the pipe system.
Node	The name of the node currently selected in the Drawing pane. Use the Node field to edit the node name.
Type (Join Point)	The type of node currently selected in the Drawing pane. Use the Type field to modify the node type. There are three types of nodes – join point, tank, or demand pressure (End Pressure).
Elevation of Join (Join Point)	The elevation of the join point expressed in the units displayed.
Demands In (Join Point)	View the In Flow to the system at this node. Click edit to change.
Demands Out (Join Point)	View the Out Flow from the system at this node. Click edit to change.
Edit buttons (Join Point)	Opens the Set Flow Demands dialog. This dialog is used to set a demand flow on the join point.
Notes	Notes about the node currently selected in the Drawing pane. Notes can be up to 200 characters.

Set Flow Demands Dialog

Flow demands can only be added at a node if the type selected is a Join Point.

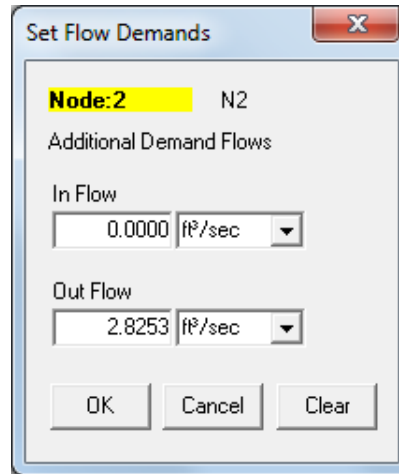


Figure 16 Set Flow Demands dialog

Feature	Description
In Flow Entering The System	The flow rate entering the system at this node expressed in the units displayed.
Out Flow Leaving The System	The flow rate leaving the system at this node expressed in the units displayed.
OK	Confirm any changes that have been made.
Cancel	Close the dialog without making any changes.

Pipe Pane

A pipe can have many features, such as name, length, internal diameter, roughness, nominal size, material, schedule or class reference, internal volume and surface area.

The data for some of these features, such as name, length, internal diameter and roughness can be entered directly into the pipe pane input boxes (other features would be left unchanged and may have to be amended at a later time).

To set all the features of a pipe use the Diameter and Material buttons to access the selection dialogs.

Pipe Flow Expert allows fittings and valves, components, flow control valves and pumps to be added to a pipe. The selection dialogs to add or change the data for these items can be accessed by clicking on the appropriate button in the pipe pane.

Pipe Features

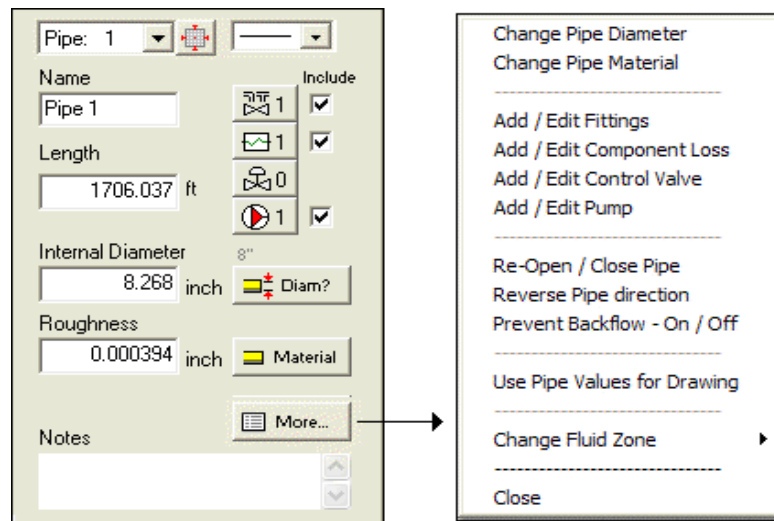


Figure 17 Pipe pane and Pipe Sub-menu

Feature	Description
Pipe Identification Number	Use the Pipe Drop Down List to select a pipe or to scroll through each of the pipes in the pipe system.
Name	The name of the pipe currently selected in the Drawing pane. Use the Name field to edit the pipe name.
Length	The length of the pipe currently selected in the Drawing pane. Use the length field to change the length of the pipe.
Internal Diameter	The internal diameter of the pipe currently selected in the Drawing pane. Use the internal diameter field to change the internal size of the pipe. Click the Diam? button to display the Pipe Diameter Data Dialog for Sizes.
Roughness	The internal roughness of the pipe currently selected in the Drawing pane. Use the roughness field to change the internal roughness of the pipe. Click the Material button to display the Pipe Data Dialog for Materials.
Notes	Notes about the pipe currently selected in the Drawing pane. Notes can be up to 200 characters.
Pipe Color and Line Width	Set the color and line width of the pipe currently selected in the Drawing pane.
Add/Change Fittings button	Opens the Pipe fitting friction coefficients dialog. Use the dialog to add and maintain fittings on a pipe. The number of fittings on the pipe is displayed next to the fitting image on the Add/Change Fitting button .
Add/Change Component Pressure Loss button	Add a component to the pipe currently selected in the Drawing pane. Change the Pressure Loss characteristics for the component. A number is displayed next to the Component image to indicate if the component is active.

Add/Change Control Valve button	Add a control valve to the pipe currently selected in the Drawing pane. Set the maximum flow rate in the pipe by using a flow Control Valve (FCV), or set the pressure at the end of the pipe by using a Pressure Reducing Valve (PRV), or set the pressure at the start of the pipe by using a Back Pressure Valve (BPV). A number is displayed next to the Control Valve image to indicate if the Control Valve is active.
Add/Change Pump button	Add a pump to the pipe currently selected in the Drawing pane. Enter the flow rate and head characteristics for various points on the pump performance curve. A number is displayed next to the Pump image to indicate if the Pump is active.
Include check boxes	Include/Exclude status for various items added to the pipe currently selected in the Drawing pane.
Diam?	Display the Pipe Diameter Data Dialog for Sizes.
Material	Display the Pipe Data Dialog for Materials.
More....	Opens the pipe sub menu which provides further options to: Re-Open / Close Pipe Reverse Pipe Direction Prevent Backflow – On / Off Move / Unlink end of Pipe Use Pipe Values for Drawing (default for the next pipe to be drawn) Change Fluid Zone (for pipe) Close sub menu

Pipe Material data Dialog

Pipe diameter data (Pipe Id: 1)

Material	Schedule / Class	Internal roughness (inch)
Steel (ANSI)	Sch. 40	0.001811

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
4"	4.026	0.237	4.500	10.802	8.8405	117.8097

Save Data to Pipe
Cancel

Choose new pipe material: Double click on the material list to select a new pipe material.

Material	Schedule / Class	Internal roughness	Pipe size range
PVC (Sewer pipe)	SDR 35	0.000197 (inch)	4" - 24"
Stainless Steel (ANSI)	Sch. 5S	0.001811 (inch)	0.500" - 36"
Stainless Steel (ANSI)	Sch. 10S	0.001811 (inch)	0.500" - 36"
Stainless Steel (ANSI)	Sch. 40S	0.001811 (inch)	0.500" - 24"
Steel (ANSI) Galvanised	Sch. 40	0.005906 (inch)	0.125" - 36"
Steel (ANSI) Galvanised	Sch. 80	0.005906 (inch)	0.125" - 24"
Steel (ANSI) Galvanised	Sch. 160	0.005906 (inch)	0.500" - 26"
Steel (ANSI)	Sch. 10	0.001811 (inch)	14" - 30"
Steel (ANSI)	Sch. 20	0.001811 (inch)	8" - 30"
Steel (ANSI)	Sch. 30	0.001811 (inch)	8" - 30"
Steel (ANSI)	Sch. 40	0.001811 (inch)	0.125" - 36"
Steel (ANSI)	Sch. 60	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 80	0.001811 (inch)	0.125" - 24"
Steel (ANSI)	Sch. 100	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 120	0.001811 (inch)	4" - 24"
Steel (ANSI)	Sch. 140	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 160	0.001811 (inch)	0.500" - 26"

Select
Cancel

Add new material
Remove material data

Figure 18 Pipe Material data dialog

Feature	Description
Material	The material description of the pipe currently selected in the Drawing pane.
Schedule/Class	The Schedule/Class description of the pipe currently selected in the Drawing pane.
Internal Roughness	The internal roughness of the pipe currently selected in the Drawing pane.
Nominal Size	The Nominal Size description of the pipe currently selected in the Drawing pane.
Internal Diam.	The internal diameter of the pipe currently selected in the Drawing pane.
Wall Thick	The wall thickness of the pipe currently selected in the Drawing pane.
Outside Diam	The outside diameter of the pipe currently selected in the Drawing pane.
Weight	The weight per unit length of the pipe currently selected in the Drawing pane.
Internal Vol.	The internal volume (ft ³ /100 ft or m ³ /100m) of the pipe currently selected in the Drawing pane.
Surface Area	The external surface area (ft ² /100 ft or m ² /100m) of the pipe currently selected in the Drawing pane.
Save Data to Pipe button	This button is not available during pipe material selection.
Cancel (pipe diameter pane)	This button is not available during pipe material selection.
Choose new pipe material	Listing of available pipe data.
Select	Show size data for selected material.
Cancel	Revert to previously selected size listing.
Add new material	Create a new material category to which new pipe sizes can be added.
Remove material data	Remove a material category.

Pipe Diameter Size Data Dialog

Pipe diameter data

Pipe data: P1 (Pipe Id: 1)

Material	Schedule / Class	Internal roughness (inch)
Steel (ANSI)	Sch. 40	0.001811

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
1"	1.049	0.133	1.315	1.681	0.6002	34.4266

☒ Save Data to Pipe

Steel (ANSI) Sch. 40 Internal roughness 0.001811 inch

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
0.125"	0.269	0.068	0.405	0.245	0.0395	10.6029
0.250"	0.364	0.088	0.540	0.425	0.0723	14.1372
0.375"	0.493	0.091	0.675	0.568	0.1326	17.6715
0.500"	0.622	0.109	0.840	0.852	0.2110	21.9911
0.750"	0.824	0.113	1.050	1.132	0.3703	27.4889
1"	1.049	0.133	1.315	1.681	0.6002	34.4266
1-1/4"	1.380	0.140	1.660	2.275	1.0387	43.4587
1-1/2"	1.610	0.145	1.900	2.721	1.4138	49.7419
2"	2.067	0.154	2.375	3.657	2.3303	62.1774
2-1/2"	2.469	0.203	2.875	5.799	3.3248	75.2673
3"	3.068	0.216	3.500	7.584	5.1338	91.6298
3-1/2"	3.548	0.226	4.000	9.119	6.8659	104.7198
4"	4.026	0.237	4.500	10.802	8.8405	117.8097
5"	5.047	0.258	5.563	14.633	13.8929	145.6390
6"	6.065	0.280	6.625	18.995	20.0627	173.4421
8"	7.981	0.322	8.625	28.585	34.7410	225.8020

☐ Metric ☒ Imperial

Figure 19 Pipe diameter data dialog for size

Feature	Description
Material	The material description of the pipe currently selected in the Drawing pane.
Schedule/Class	The Schedule/Class description of the pipe currently selected in the Drawing pane.
Internal Roughness	The internal roughness of the pipe currently selected in the Drawing pane.
Nominal Size	The Nominal Size description of the pipe currently selected in the Drawing pane.
Internal Diam.	The internal diameter of the pipe currently selected in the Drawing pane.
Wall Thick	The wall thickness of the pipe currently selected in the Drawing pane.
Outside Diam	The outside diameter of the pipe currently selected in the Drawing pane.
Weight	The weight per unit length of the pipe currently selected in the Drawing pane.
Internal Vol.	The internal volume (ft ³ /100 ft or m ³ /100m) of the pipe currently selected in the Drawing pane.
Surface Area	The external surface area (ft ² /100 ft or m ² /100m) of the pipe currently selected in the Drawing pane.
Save Data to Pipe button	Confirm the attributes of the pipe currently selected in the Drawing pane.

Cancel	Close the dialog without making any changes.
Use selected size	Copy size data from data listing to entry boxes.
Size database	Listing of pipe sizes.
Metric or Imperial	Display size data in metric or imperial units.
Change Material	Display data dialog for pipe material.
Add new size	Display input boxes for new pipe size data.
Remove entry	Remove a pipe size.

Pipe fitting friction coefficients Dialog

Pipe fitting friction coefficients

Fittings on: P1, Steel, 4" 102.260 mm (Pipe Id 1)

Symbol	Type	Metric	Imperial	Description	K value	Qty
	Gate	25 mm	1"	Gate Valve	0.1800	1
	SB	25 mm	1"	Standard Bend	0.6900	1
	LB	25 mm	1"	Long bend	0.3700	1
	PB	25 mm	1"	Pipe bend	0.2800	1

Total K = 1.52

Save Clear Cancel

Fitting Database: Double click on a fitting below to add the item to the pipe fittings.

Symbol	Type	Metric	Imperial	Description	K
	SB	25 mm	1"	Standard Bend	0.6900
	LB	25 mm	1"	Long bend	0.3700
	PB	25 mm	1"	Pipe bend	0.2800
	E45	25 mm	1"	Elbow 45°	0.3700
	RB	25 mm	1"	Return bend	1.1500
	MB45	25 mm	1"	Mitre bend 45°	0.3500
	MB90	25 mm	1"	Mitre bend 90°	1.3800
	Gate	25 mm	1"	Gate Valve	0.1800
	Globe	25 mm	1"	Globe Valve	7.8000
	Angle	25 mm	1"	Globe Valve Angled	3.4500
	Plug	25 mm	1"	Plug Valve Straightway	0.4100
	Btly	25 mm	1"	Butterfly Valve	1.1000
	BallFB	25 mm	1"	Ball Valve Full Bore	0.0700
	BallRB	25 mm	1"	Ball Valve Reduced Bore	2.4000
	LiftCh	25 mm	1"	Lift Check Valve	13.8000
	AngCh	25 mm	1"	Lift Check Angled	1.3000
	ChSw	25 mm	1"	Check Swing Valve	4.1000

Add selection to pipe

Move to fitting size: 25 mm 1"

Calculate K value

entrance rounded

gradual enlargement

gradual contraction

sudden enlargement

sudden contraction

long pipe bend

Create new fitting

Remove entry

Figure 20 Pipe fitting friction coefficients

Feature	Description
Symbol	Fitting type symbol.
Type	Fitting type short code.
Metric	Nominal metric fitting size.
Imperial	Nominal imperial fitting size.
Description	Fitting description.
K value	Local loss coefficient of fitting.
Qty	Quantity of fittings.
Save	Confirm the fitting selections for the pipe currently selected in the Drawing pane.

Clear	Clear the fitting selections.
Cancel	Close the dialog without making any changes.
Fitting Database	Listing of friction coefficients.
Add selection to pipe button	Copy fitting data from listing to the list on the currently selected pipe.
Move to fitting size	Display fitting listing for selected metric or imperial size.
Calculate K value	Calculate local loss coefficient for: entrance rounded, gradual enlargement, gradual contraction, sudden enlargement, sudden contraction or long pipe bend.
Create new fitting	Create data for non standard fittings.
Remove entry	Remove data from fittings database.

Set Component Pressure Loss Dialog

Figure 21 Set Component Pressure Loss dialog

Feature	Description
Component Name	Name of the component.
Pressure Loss Scroll buttons	Choose symbol for the component.
Fixed Loss	Pressure loss will be fixed.
Curve Loss	Pressure loss will be calculated from component flow / head data.

Flow	Flow rate values for operating range of component.
Pressure Loss	Pressure loss for each of the flow rate entries.
Generate Curve	Create a set of curve points from first three data points.
Cv Flow Coefficient Value	Model pressure loss through a valve with a Cv flow coefficient
Kv Flow Coefficient Value	Model pressure loss through a valve with a Kv flow coefficient
OK	Add the component to the pipe currently selected in the Drawing pane.
Cancel	Close the dialog without making any changes.
Clear	Clear the pressure loss data.
Delete	Remove the component from the pipe currently selected in the Drawing pane.
Save To File	Save the component details to a file.
Load From File	Load the component details from a file.

Set Control Data Dialog

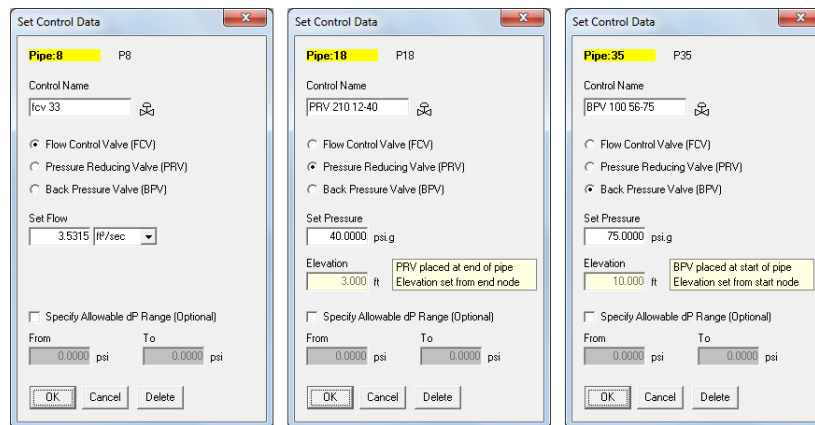


Figure 22 Set Control Data dialog

Feature	Description
Control Name	Name of the control valve or P&ID number.
Flow Control Valve	Set control flow rate in the units displayed.
Pressure Reducing Valve	Set pressure required at the end of the pipe.
Back Pressure Valve	Set back pressure required at the start of the pipe.
Specify Allowable dP Range	Set allowable dP Range, a warning will be issued if the actual dP is outside the lower and upper values.
OK	Add the control valve type to the pipe currently selected in the Drawing pane.
Cancel	Close the dialog without making any changes.
Delete	Remove the control valve from the pipe currently selected in the Drawing pane.

Pump Data Dialog

Pump Data

Pump Information

Details of pump on pipe 3, P3

Name: Pump st.01a Along Pipe: 5.000 ft at Elevation: 150.000 ft Symbol:

Pump Type

☐ Fixed Flow Rate Set to: 270.00 l/min

☐ Fixed Head Increase: 0.000 m Fluid

☒ Fixed Speed, Running at: 1700 rpm

Flow	Head	Efficiency	NPSHr
US gpm	ft Fluid	%	ft.hd Fluid
0	150.000	0	0.670
50.00	146.000	66	0.670
100.00	138.500	70	1.900
150.00	125.000	75	6.000
200.00	100.000	72	14.800
250.00	60.000	65	28.000

Preferred Operating Region

From: 75 % To: 125 % of Flow at Best Effic Point

Save To Pipe Clear Curve Delete Pump Exit/No Save

Save To File Load File Print Page Draw Graph

Notes

Pump Curve based on fixed speed pump characteristics

☒ Head ☒ NPSHr ☒ Efficiency

☒ Pref. Region ☒ Grid Lines

Preferred Operating region between 112.50 and 187.50 US gpm

Show Point For

Flow US gpm	Head ft.hd Fluid	NPSHr	Effic. %	Power HP
132.66	130.98	4.58	73.3	5.998

Calculate

Note: The pump curve may be specified in one of a number of different units. Where a height of water is used to specify the head it is assumed that the density of the water is 1000kg/m³. Some water entries in the fluid database have a density of 998kg/m³.

Figure 23 Pump Data dialog

Feature	Description
Name	Name of the pump.
Distance Along Pipe	Location of the pump from start of the pipe currently selected in the Drawing pane.
at Elevation	Elevation of the pump.
Pump Scroll buttons	Choose symbol for the pump.
Fixed Flow Rate Set To	Enter flow rate to model a pump with a fixed flow rate
Fixed Head / Pressure Rise	Enter a pressure to model the additional motive force from a pump
Fixed Speed, running at (rpm)	Operating speed of a pump with a performance curve.
Flow	Flow rate values for operating range of pump.
Head	Head generated for each of the flow rate entries.
Efficiency	Efficiency of the pump at each of the operating data points.
NPSHr	The Net Positive Static Head requirement at the inlet of the pump.

From	Start of preferred operating region.
To	End of preferred operating region.
Save	Add the pump to the pipe currently selected in the Drawing pane.
Clear	Clear the pump data.
Delete	Remove the pump from the pipe currently selected in the Drawing pane.
Exit/No Save	Close the dialog without making any changes.
Save To File	Save the pump details to a file.
Load File	Load the pump details from a file.
Print Page	Print the pump details.
Draw Graph	Generate a graph of the pump performance from the Flow/Head data points.
Graph Options	Choose the options to be displayed on the pump curve graph.
Show Point For Flow	Enter flow rate value and click the calculate button to display the operating point on the pump performance graph.
Show Point For Head	Enter generated head value and click the calculate button to display the operating point on the pump performance graph.
Calculate	Calculate corresponding flow rate / head value from entered data.
Pump Curve Graph	Pump curve graph based on the data points entered.
Notes	Notes about the pump. Notes can be up to 200 characters.

Drawing Pane

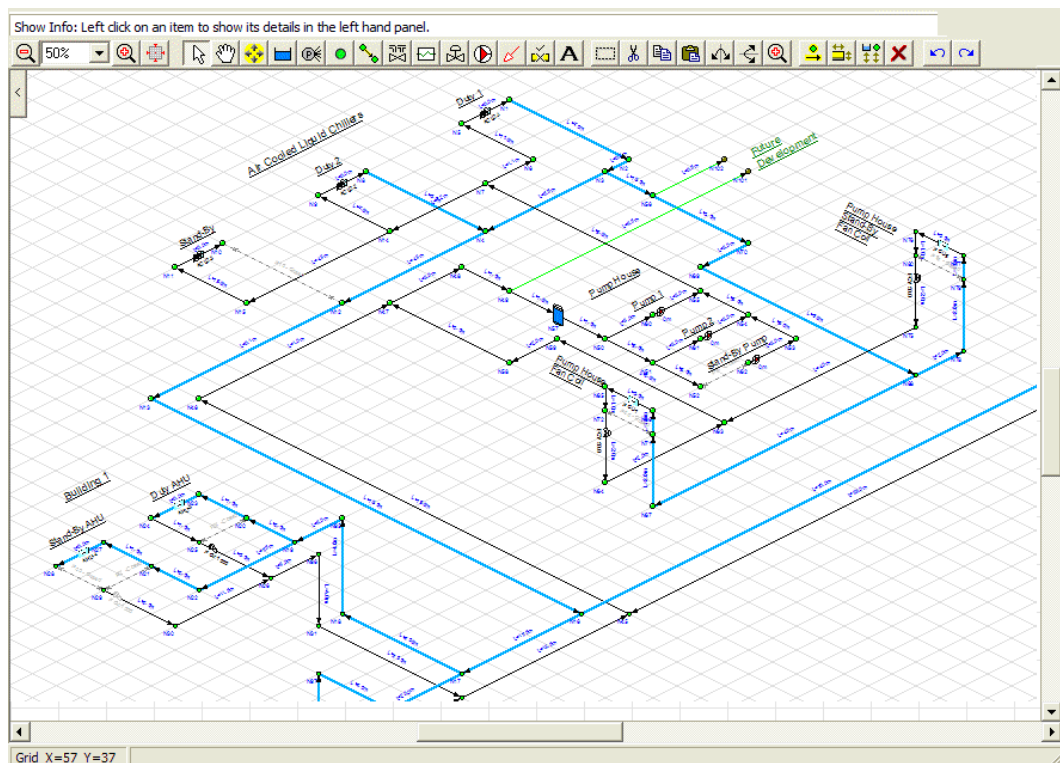
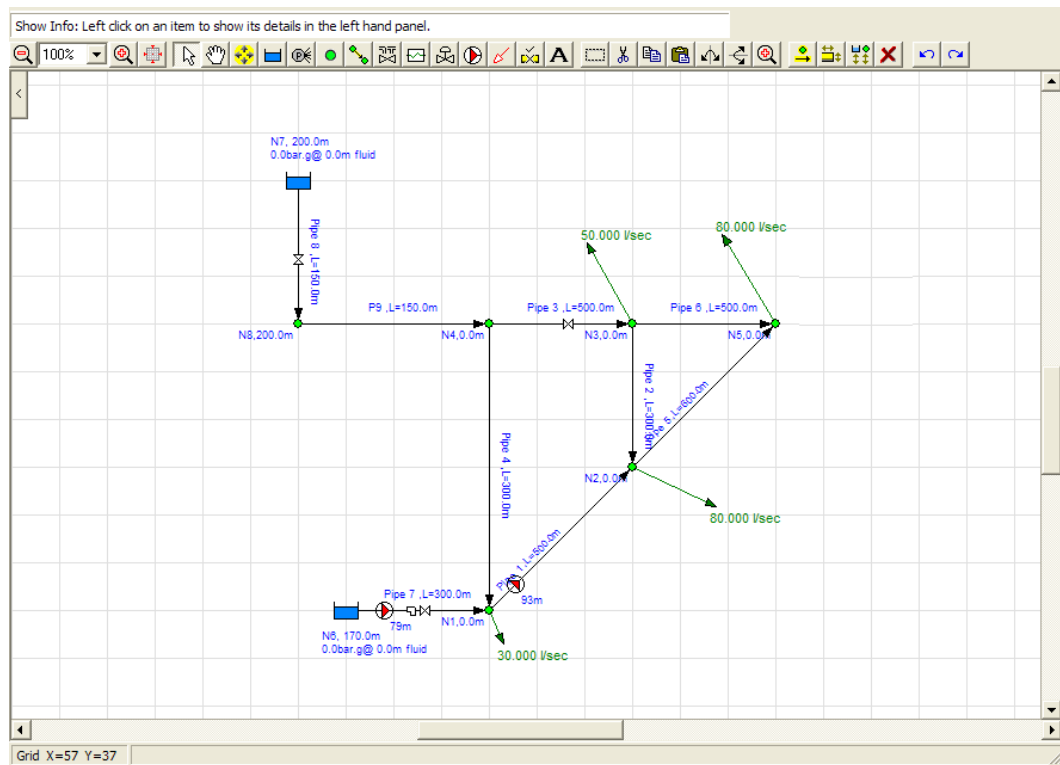


Figure 24 Drawing Panes Standard or Isometric

Feature	Description
Drawing Grid	The drawing grid shows details of the pipeline system. The information to be displayed, such as size, length, elevation, flow rate etc. can be selected from the configuration options labeling tab .
Hint Feature	The Hint pane, located above the tool bar, displays tips for using the button currently selected on the tool bar.
Zoom Feature	If your mouse is suitable the drawing size can be zoomed larger or smaller using the mouse scroll wheel.
Drawing Size Display	The drawing size can be selected from the drop down listing between the Zoom Out and the Zoom In buttons.
Zoom Out Button	Click to make the drawing size smaller by one step.
Zoom In Button	Click to make the drawing size larger by one step.
Zoom drawing to fit on screen	Click to fit all of the drawing on the screen.

Pipe Flow Expert offers a choice of a drawing grid with square increments for standard designs or an isometric grid for use where it is desirable to create an isometric view.

It is possible to toggle between standard / isometric design grids.

Moving from a standard grid to an isometric grid transposes the standard drawing on to a flat isometric plane. A user can then adjust/move the nodes as necessary to produce a drawing that looks 3D.

Moving from an isometric grid to a standard grid transposes the isometric drawing to a flattened view that produces a near plan view (except that PipeFlow Expert does not allow nodes to appear at the same point on the grid and therefore nodes directly above or below each other on the isometric grid are offset at a diagonal angle when transposed to the flat view).

The system design can be amended in either drawing mode.

Configuration Options Screen

Pipe Flow Expert can be configured to suit your requirements.

- The labeling to show on the drawing can be selected.
- The units in which to display lengths, diameters, head loss, velocity etc. can be chosen.
- The details of a default pipe can be chosen – these details will be used to draw any new pipes.
- Various pipe attributes may be copied to a range of selected pipes.
- An elevation value and a node image may be copied to a range of selected nodes.
- The results screen drawing can be displayed using a color gradient, to indicate the range of flow rates, fluid velocities, friction loss, hydraulic gradient line and elevations etc.
- The calculation tolerances can be changed.

Labeling Tab

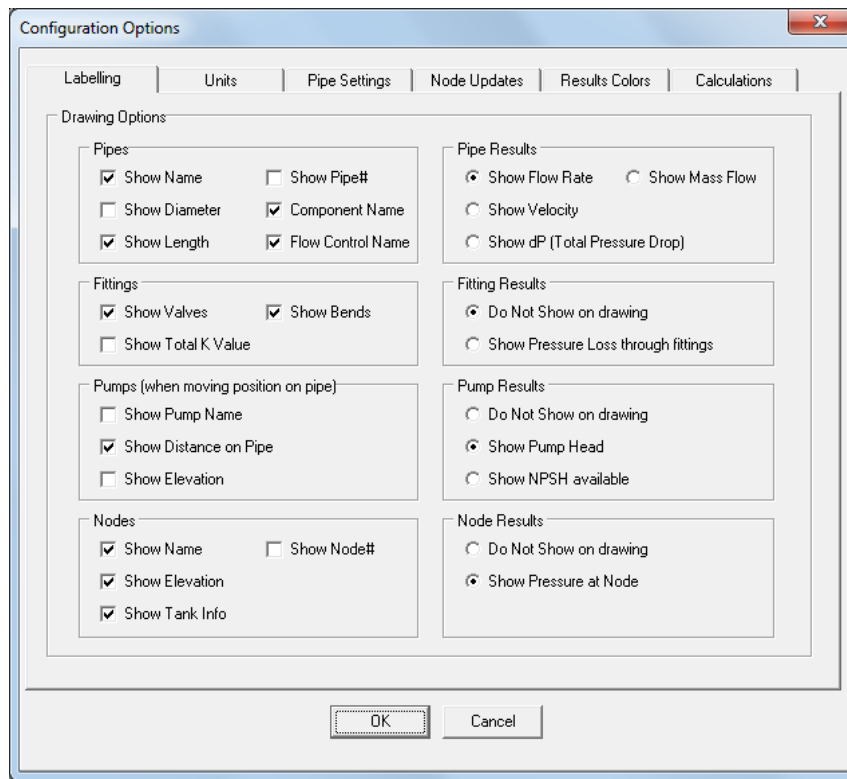


Figure 25 Configuration Options dialog – Labeling tab

Feature	Description
Show Name (Pipes)	Show name of the pipe on the drawing.
Show Diam	Show diameter of the pipe on the drawing.
Show Length	Show length of the pipe on the drawing.
Show Pipe #	Show the pipe number on the drawing.
Show Values	Show valve symbol on the drawing, if valve is present on pipe.
Show Total K Value	Show total K value on the drawing, for all fittings on the pipe.
Show Bends	Show bend symbol on the drawing, if bend is present on pipe.
Show Pump Name	Show pump name on the drawing.
Show Distance on Pipe	Show the pump position along pipe on the drawing.
Show Elevation (Pump)	Show the pump elevation on the drawing.
Show Name (Node)	Show the name of node on the drawing.
Show Elevation (Node)	Show the node elevation on the drawing.
Show Tank Info	Show the Tank Information on the drawing.
Show Node #	Show the pipe number on the drawing.
Pipe Results	
Show Flow Rate	Show the volume flow rate on drawing.
Show Mass Flow	Show the mass flow rate on drawing.

Show Velocity	Show the fluid velocity on the drawing.
Show Total Pressure Drop	Show the total pressure drop of the pipe, the fittings and the component on the drawing.
Fitting Results	
Do Not Show on drawing	Do not show the total pressure drop of the fittings on the drawing.
Show Pressure Loss through fittings	Show the pressure drop of the fittings on the drawing.
Pump Results	
Do Not Show on drawing	Do not show the pump results data on the drawing.
Show Pump Head	Show the pump head on the drawing.
Show NPSH available	Show the net positive static head available at the pump inlet on the drawing.
Show Pump Efficiency	Show the pump efficiency on the drawing.
Node Results	
Do Not Show on drawing	Do not show the pressure at the nodes.
Show Pressure at Node	Show the pressure at the nodes on the drawing.
OK	Confirm changes to configuration options.
Cancel	Close the dialog without making any changes.

Units Tab

Configuration Options

Labelling | **Units** | Pipe Settings | Node Updates | Results Colors | Calculations

Units Settings

Pipes

Length: feet
Diameter: inches
Roughness: inches
Head Losses: ft fluid
Flow Rate: gallons/min (USA)
Mass Flow: lb/min
Velocity: ft/sec
Weight: lbs
Volume: ft³
Surface Area: ft²
Energy: HorsePower

Tanks and Nodes

Surface Press.: psi g
Liquid Level: feet
Elevation: feet

System and Fluids

Atmosphere: 14.695949 psi.a
Pressure Ref: ☒ Gage ☐ Absolute
Pressure: psi g
Temperature: °F - Fahrenheit
Density: lb/ft³

Change All Units

☒ Imperial ☐ Metric

OK Cancel

Figure 26 Configuration Options dialog – Units tab

Feature	Description
Length	Select the units for display of the pipe lengths.
Diameter	Select the units for display of the pipe internal diameters.
Roughness	Select the units for display of the pipe internal roughness.
Head Losses	Select the units for display of the head losses
Flow Rate	Select the units for display of the flow rates.
Mass Flow	Select the units for display of the mass flow rates
Velocity	Select the units for display of the fluid velocities.
Pipe Losses	Select the units for display of the pipe friction losses.
Weight	Select the units for display of the pipe weights.
Volume	Select the units for display of the internal pipe volumes.
Surface Area	Select the units for display of the surface areas of the pipes.
Energy	Select the units for display of the energy usage
Surface Press.	Select the units for display of the fluid surface pressure.
Liquid Level	Select the units for display of the fluid liquid level.
Elevation	Select the units for display of the elevations of the nodes.
Atmosphere	Value of standard atmosphere in absolute pressure units.
Pressure Ref.	Select Gage or Absolute pressure units.
Pressure	Select the units for display of the pressures at join points (nodes).
Temperature	Select option for display of the fluid temperatures.
Density	Select the units for display of the fluid density
Imperial or Metric	Select general option for Imperial or Metric displays.
OK	Confirm changes to configuration options.
Cancel	Close the dialog without making any changes.

Pipe Settings Tab

If you will be using the same type of pipe throughout the pipe system, you can define the default pipe type using the **Pipe Settings** tab in the **Configuration Options** dialog. When the default pipe values are set, each time you add a pipe to the system, the pipe type and values are automatically defined for the pipe. You can customize the values for an individual pipe in the system by editing its values in the Pipe pane or in the **Pipe diameter data** dialog. The **Pipe diameter data** dialog contains a list of the pipe materials and sizes available in the pipe database and additional properties specific to a pipe in the system.

NOTE: Be sure to enter the value for the pipe's properties in the units displayed next to the field. For example, if you are using metric units, and *m* for meter is displayed next to the Length field, enter the pipe length value in meters.

Various attributes of the default pipe may be copied to the list of selected pipes.

The **Selection Tool** may be used to Select a group of pipes prior to opening the **Pipe Settings** tab. Individual pipes can be added or removed from the selected list by checking or un-checking the box adjacent to the pipe description.

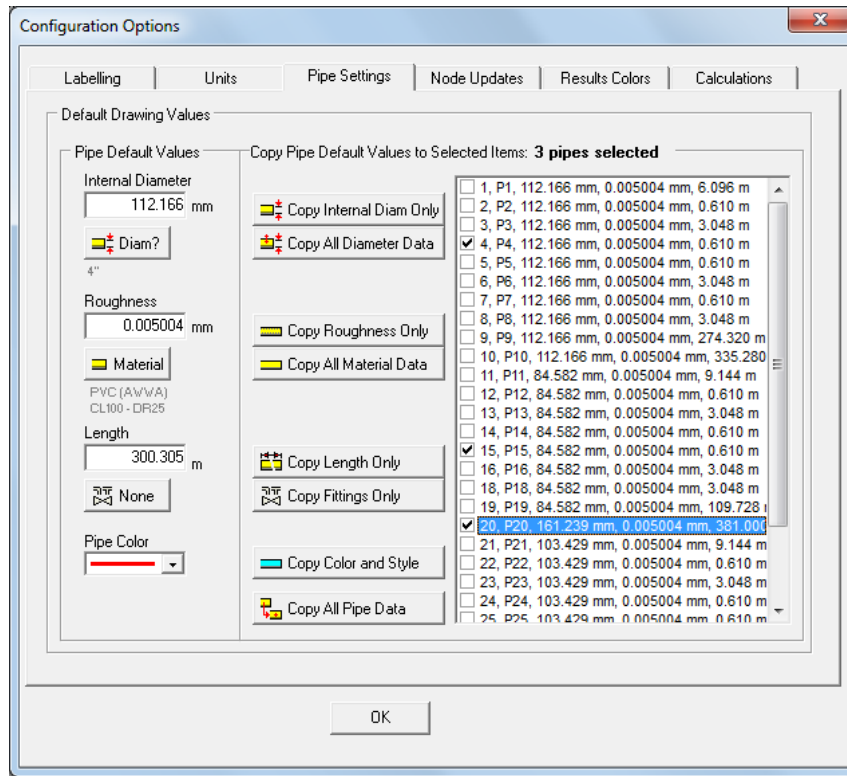


Figure 27 Configuration Options dialog – Pipe Settings tab

Feature	Description
Internal Diameter	Set the default internal diameter for the next pipe to be added to the drawing.
Diam?	Display the Pipe Diameter Data Dialog for Sizes.
Roughness	Set the default internal roughness for the next pipe to be added to the drawing.
Material	Display the Pipe Data Dialog for Materials.
Length	Set the default pipe length for the next pipe to be added to the drawing.
Add/Change Fittings	Select the default fittings for the next pipe to be added to the drawing.
Pipe Color	Select the pipe color and line width for the default pipe.
Copy Internal Diameter Only	Copy the internal diameter data to the pipes selected in the listing.
Copy All Diameter Data	Copy the internal and outer diameter data to pipes selected in the listing.
Copy Roughness Only	Copy the internal roughness to the pipes selected in the listing.
Copy All Material Data	Copy the pipe material, schedule/class and internal roughness to the pipes selected in the listing.
Copy Length Only	Copy the default pipe length to the pipes selected in the listing.
Copy Fittings Only	Copy the default pipe fittings to the pipes selected in the listing.
Copy Color and Style	Copy the line color and line width to the pipes selected in the listing.
Copy All Pipe Data	Copy the default pipe values, including fittings and valves, component and pumps to the pipes selected in the listing.
OK	Confirm changes to configuration options.

Node Updates Tab

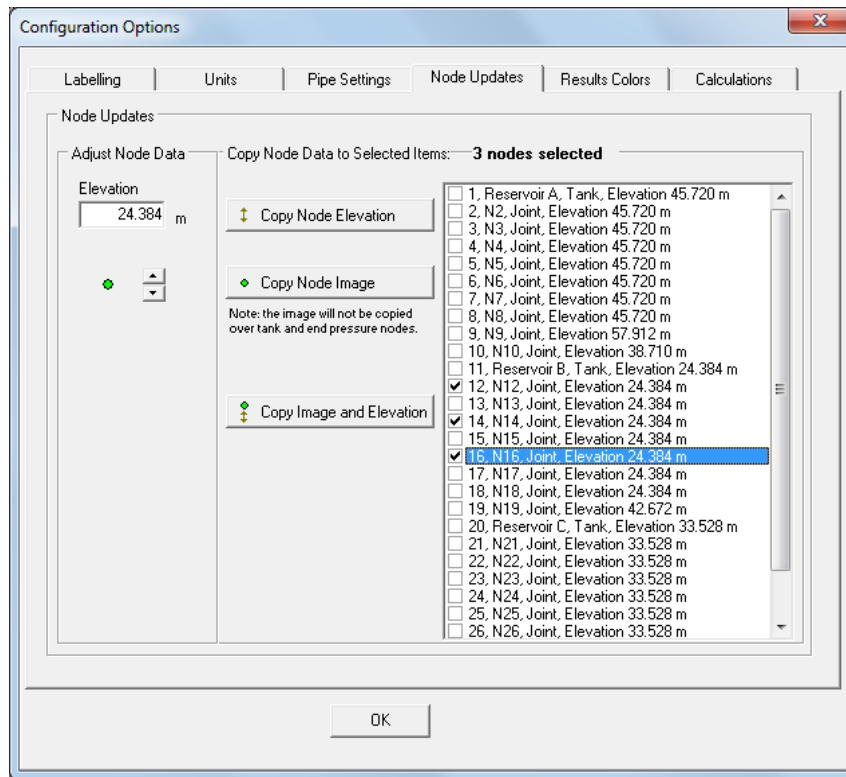


Figure 28 Configuration Options dialog – Node Updates tab

Feature	Description
Copy Node Elevation	Copy the elevation to the nodes selected in the listing.
Copy Node Image	Copy the node image to the nodes selected in the listing.
Copy Image and Elevation	Copy the node image and the elevation to the nodes selected in the listing.
OK	Close the configuration options dialog.

Results Colors Tab

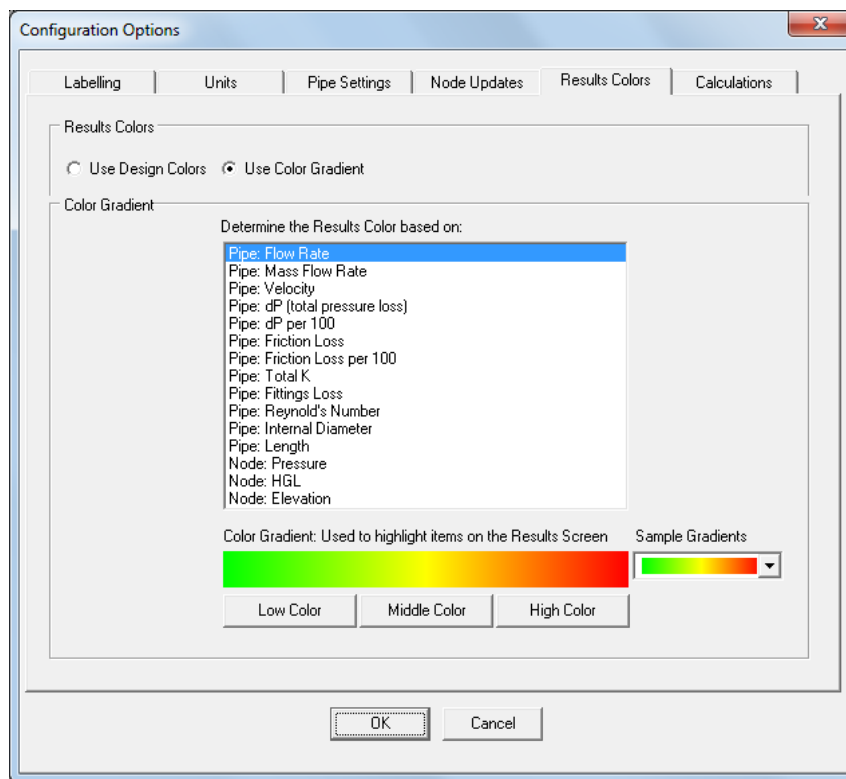


Figure 29 Configuration Options dialog – Results Colors tab

Feature	Description
Use Design Colors / Use Color Gradient	Select option to display results according to the chosen color gradient.
Determine Results Colors based on a Chosen Category.	Select a results category to be displayed using the chosen color gradient.
Sample Gradients	Select a color gradient to be used on the results screen.
Low Color / Middle Color / High Color	Select customized colors to generate a user defined color gradient.
OK	Close the results colors dialog.
Cancel	Close the results colors dialog and revert to the previous selection

Calculations Tab

Configuration Options

Labelling | Units | Pipe Settings | Node Updates | Results Colors | **Calculations**

Calculation Settings

Most systems will solve without any changes to these parameters.
However, these values can be amended to change solution criteria or to adjust convergence properties.

System Calculation Tolerances

Loop Balance Final Pressure Tolerance: 0.000010 bar

Loop Balance Initial Pressure Tolerance: 0.200000 bar

Flow Balance Final Tolerance: 0.000001 kg/sec

Calculation Engine

Linear then Newton Convergence

Final Solution Verification

Node Balance to: 0.000018 bar

Calculation Iteration Parameters

Max Iterations for Approximate Solution: 200

Max Iterations to find Final Solution: 5000

Final Iterations Delta Reduction Factor: 0.100

Min Velocity for Discharge Estimates: 0.100000 m/sec

Max Velocity for Discharge Estimates: 50.000000 m/sec

Calculation Warning Parameters

High Velocity warnings for

Liquid Velocity > 5.000000 m/sec

Gas Velocity > 20.000000 m/sec

Reset All entries to the Default Values

OK Cancel

Figure 30 Configuration Options dialog – Calculations tab

Feature	Description
Pressure Balancing Tolerance (Final)	Pressure balance tolerance allowed around a set of pipes forming a loop, for final solution.
Loop Pressure Balancing Tolerance (Initial)	Pressure balance tolerance allowed around a set of pipes forming a loop, for initial solution.
Flow Balance Final Tolerance	Mass flow in and mass flow out tolerance allowed at a node (join points)
Final Solution Verification	Pressure balance tolerance allowed when verifying the pressure loss between two connected nodes against the calculated pressure at each node, for final solution.
Max Iterations for Approximate Solution	Maximum calculation iterations allowed to find initial solution.
Max Iterations for Final Solution	Maximum calculation iterations allowed to find final solution.
Final Iterations Delta Reduction Factor	Rate of adjustment during convergence to final solution.
Min Velocity for Discharge Estimates	Starting velocity estimate for unknown discharge estimation.
Max Velocity for Discharge Estimates	Final velocity estimate for unknown discharge estimation.
OK	Confirm changes to system calculation options.

Cancel

Close the dialog without making any changes.

 
Note: We recommend that you do not change these values, unless it becomes necessary to solve a very finely balanced system.

Results Tables


The results of a pipeline system analysis are displayed in the Results tables. Data for flow rates in pipes, velocities in pipes, pressures at join points, tank elevations, hydraulic grade lines, pump operating points and many more calculated results, can all be viewed in the results tables.

The results table interacts with the drawing pane in a two-way manner.

If a pipe or a node is selected in the results tables then the pipe or node is selected on the drawing.


Click the 'Zoom To' button , or a double click on the selected result line to zoom the display to show the selected item in the centre of the drawing area.

If a pipe or node is clicked on the drawing to select it then the results table will also change to show the selected item.

Use the tool buttons , to dock the results tables to the right or bottom of the drawing pane or to position the results tables back to its last user defined position.

The results display units can be altered by choosing the units required from the configuration options units tab.

The results information about the elements of your system can be saved to an Excel spreadsheet file or exported to a new Excel spreadsheet.

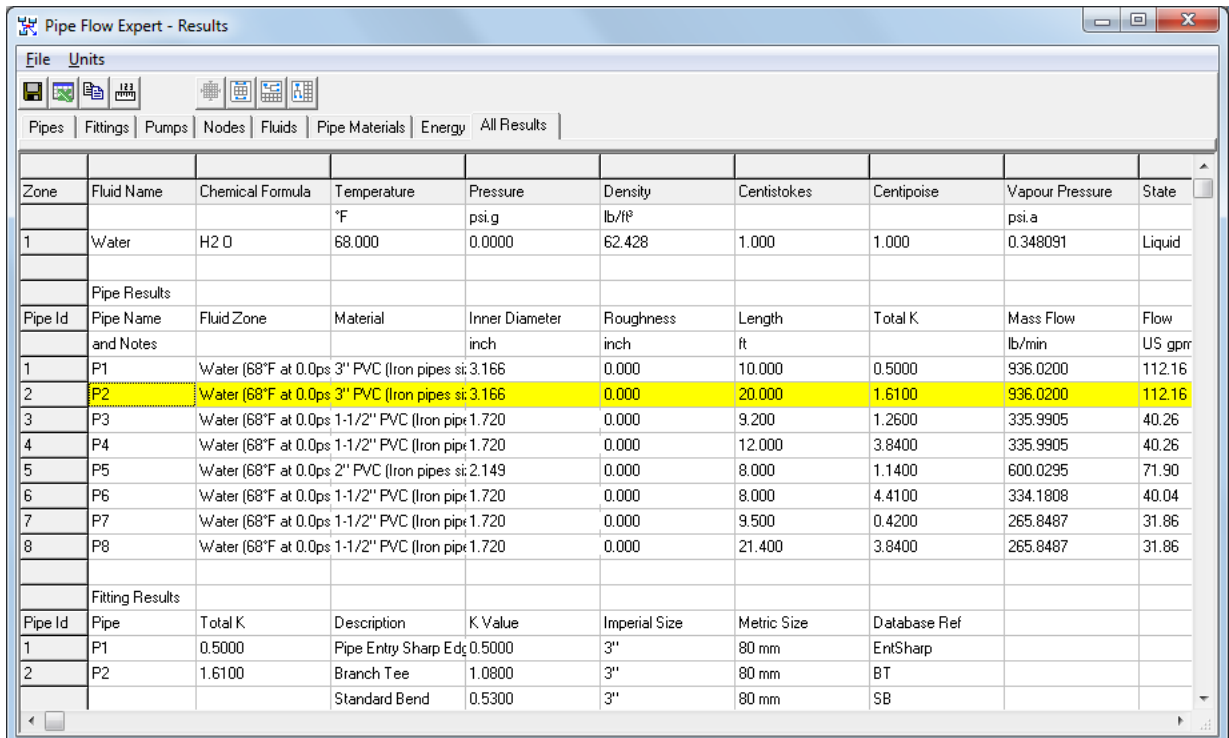

Pipe Flow Expert - Results

File Units

Pipes Fittings Pumps Nodes Fluids Pipe Materials Energy All Results

Zone	Fluid Name	Chemical Formula	Temperature	Pressure	Density	Centistokes	Centipoise	Vapour Pressure	State
			°F	psig	lb/ft³			psia	
1	Water	H2O	68.000	0.0000	62.428	1.000	1.000	0.348091	Liquid
Pipe Results									
Pipe Id	Pipe Name	Fluid Zone	Material	Inner Diameter	Roughness	Length	Total K	Mass Flow	Flow
				inch	inch	ft		lb/min	US gpm
1	P1	Water (68°F at 0.0ps 3" PVC (Iron pipes si: 3.166		0.000	0.000	10.000	0.5000	936.0200	112.16
2	P2	Water (68°F at 0.0ps 3" PVC (Iron pipes si: 3.166		0.000	0.000	20.000	1.6100	936.0200	112.16
3	P3	Water (68°F at 0.0ps 1-1/2" PVC (Iron pipes si: 1.720		0.000	0.000	9.200	1.2600	335.9905	40.26
4	P4	Water (68°F at 0.0ps 1-1/2" PVC (Iron pipes si: 1.720		0.000	0.000	12.000	3.8400	335.9905	40.26
5	P5	Water (68°F at 0.0ps 2" PVC (Iron pipes si: 2.149		0.000	0.000	8.000	1.1400	600.0295	71.90
6	P6	Water (68°F at 0.0ps 1-1/2" PVC (Iron pipes si: 1.720		0.000	0.000	8.000	4.4100	334.1808	40.04
7	P7	Water (68°F at 0.0ps 1-1/2" PVC (Iron pipes si: 1.720		0.000	0.000	9.500	0.4200	265.8487	31.86
8	P8	Water (68°F at 0.0ps 1-1/2" PVC (Iron pipes si: 1.720		0.000	0.000	21.400	3.8400	265.8487	31.86
Fitting Results									
Pipe Id	Pipe	Total K	Description	K Value	Imperial Size	Metric Size	Database Ref		
1	P1	0.5000	Pipe Entry Sharp Ed	0.5000	3"	80 mm	EntSharp		
2	P2	1.6100	Branch Tee	1.0800	3"	80 mm	BT		
			Standard Bend	0.5300	3"	80 mm	SB		

Figure 31 Results tables

Feature	Description
File menu	Select an option to save results in Excel format or to export the results to a new Excel spreadsheet.
Units menu	Select option to display the results in Imperial, Metric or selected units.
Save button	Save the results data in Excel format.
Export to Excel button	Start Excel and display the results data in a new Excel spreadsheet.
Choose Units	Select option to display the results in Imperial, Metric or selected units.
Pipes tab	Display the information about the pipes in the system.
Fittings tab	Display the information about the valves and fittings in the system.
Pumps tab	Display the information about the pumps in the system.
Nodes tab	Display the information about the nodes in the system.
Fluids tab	Display the information about the fluids in the system.
Pipe Materials tab	Display the information about the pipe materials in the system.
Energy tab	Display the information about the energy usage in the system.
All Results tab	Display the information about the elements in the system.

Viewing Individual Results

Items are highlighted by a left clicking with the mouse while hovering over an item on the drawing pane. Data for the highlighted item is displayed in the Hint pane.

In **Results** mode, when an item is selected the **Hint** pane is used to display information about the item, which can include flow rates, velocities, pressure drops, pressures at join points, HGLs (hydraulic grade line), elevations of tanks and nodes, and fluid heads at specific points within the system.

Also in **Results** mode, when the cursor is moved over an item on the drawing a pop-up panel appears that displays information about the item. When the cursor is moved away from the item the popup panel automatically disappears. This allows a user to inspect a large number of results for different parts of the system without having to click the mouse.

The Results Popup Panel displays a variety of important results data, including:

- Volumetric Flow Rate
- Mass Flow Rate
- Velocity
- Pressure Loss
- Friction Loss
- Fitting Loss

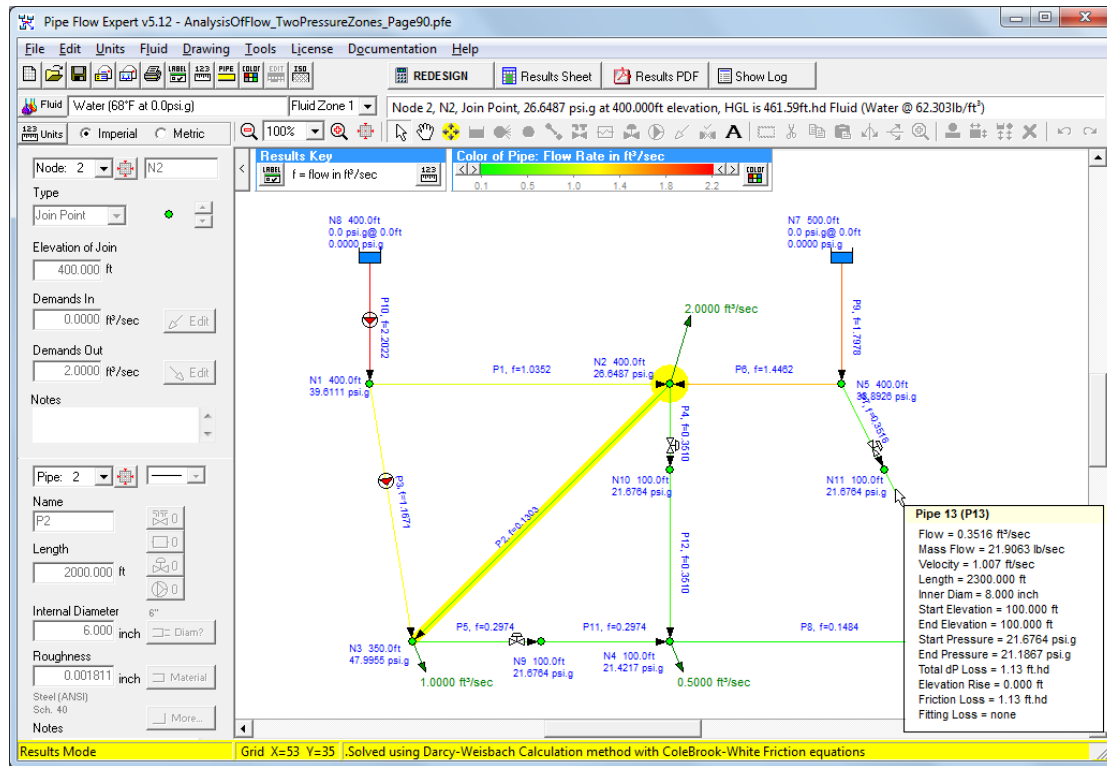


Figure 32 View Individual Results

The **Results** drawing can be configured to display the pipes in various colors based on the value of a chosen category such as Flow Rate, Velocity, Friction Loss, Internal Diameter etc. The color gradient start and end point values may be adjusted to narrow the band over which the colors are displayed.

File and Design Operations

Pipe Flow Expert works with a number of different file types, for example, pump files, component files, and the main system design file (a .pfe file).


Once a system has been created it can then be saved to a system design file which stores all of the information about the system, including the node and pipe data, the fittings and valve information, the components information, and the pump data.

Individual items in the system such as components and pumps can also be saved to their own file, so that they can be re-used and re-loaded as required (perhaps for use in future systems or to duplicate and copy these items within an existing system). The pump file extension is .pfpm and the component file extension is .pfco.

Images of the drawing screen can be saved and/or attached to an email as a convenient way of sharing a quick snapshot of a system or set of results.

Creating a New Pipe System

To create a new pipe system:

1. Define whether imperial or metric units are used throughout the pipe system.
2. To define the imperial or metric setting, select the **Imperial** or **Metric** option on the toolbar or the **Units** tab in the **Configuration Options** dialog, or you can select the **Imperial** or **Metric** menu items from the **Units** menu.
3. You can customize the units and default values used for the individual items in the system at any time by using the **Configuration Options** dialog.
4. Click the **New Grid** button, , or select **File | New** to create a new drawing grid.
5. Pipe Flow Expert asks the user if the grid should be shown for isometric drawing. Click 'yes' to display the isometric grid or click 'no' to display the standard drawing grid.

After creating a pipe system you should set the preferences of your choice. In Pipe Flow Expert you can configure whether imperial, metric or a specifically chosen units are used throughout the system. The labeling used on the pipe system drawing can be altered such that specific items can be selected to be shown or excluded as required.

The configuration settings for a pipe system can be amended at any time as you are working in a pipe system, however defining your choices in advance will make it easier when you come to start the drawing process. All configuration options are saved with the system and will be set to their saved values when a system is loaded.

Isometric System Options

When the isometric drawing mode has been selected Pipe Flow Expert will show fittings, valves, components, control valves and pumps in the isometric plane which follows the associated pipe direction.

Tanks and end-pressure nodes will also be displayed in the isometric plane. The drawing menu provides options to display an 'Isometric tank view from the left' or to display an 'Isometric tank view from the right'. Selecting either of these options will change the display of all tanks and end pressure on the isometric view.

Designing a Pipe System


To design a pipe system:

1. Define the pipe system's fluid and the fluid's properties. For more information about selecting a fluid, see: *Defining the System Fluid*
2. Add the applicable tanks to the system. For more information about adding tanks, see: *Adding a Tank*
3. Add the applicable join points to the system. For more information about adding join points, see: *Adding a Node (Join Point)*
4. Add the applicable pipes to the system. For more information about adding pipes, see: *Adding a Pipe*
5. Add the applicable pumps to the system. For more information about adding pumps, see: *Adding a Pump*
6. Add the applicable fittings to the system. For more information about adding fittings, see: *Adding Fittings and Valves*
7. Add the applicable component pressure losses to the system. For more information about adding component pressure losses, see: *Adding a Component*
8. Add the applicable control valves to the system. Flow Control Valves, Pressure Reducing Valves or Back Pressure Valves can be used in the system. For more information about adding control valves, see: *Adding a Control Valve*
9. Add the applicable demand flows to the system. For more information about adding demand flows, see: *Adding a Demand Flow*
10. Add the applicable demand pressures to the system. For more information about adding demand pressures, see: *Adding a Demand Pressure*
11. Calculate and solve the pipe system's flow and pressure. For more information about calculating and solving, see: *Calculating and Solving the System*

Saving a System

When you save a pipe system in Pipe Flow Expert, a .pfe file is generated that is used exclusively with Pipe Flow Expert. All the system's data is stored within the file. If you need to modify the system, or want to reuse the system for a future system, you can simply open the file in Pipe Flow Expert, make the necessary changes, and resave the file.

To save a pipe system:

1. Click the **Save File** button,  on the toolbar or select **File | Save** to open the **Save As** dialog.

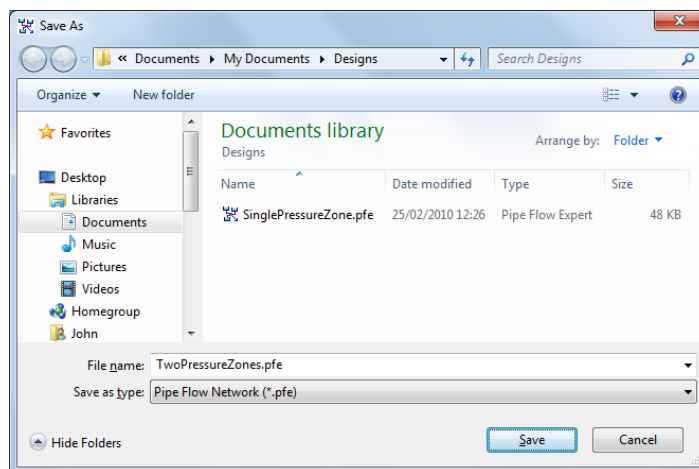



Figure 33 Save As dialog

2. Type a name for the file in the **File Name** field.
3. Click **Save** to save the pipe system.

Once a pipe system has been saved to a .pfe file, you can simply click the **Save** button, , on the toolbar or select **File | Save** to save changes to the system.

Change the System View - Isometric Mode Toggle


A Pipe Flow Expert system can be displayed in Isometric mode or Standard mode. The system information such as pipe sizes, pipe lengths, node elevations etc. do not change when the view of the system is changed.

When an Isometric view is transposed (flattened) to a standard view, any vertical lines from the isometric view will be drawn at 45 degrees. This happens because Pipe Flow Expert does not allow a drawing to contain nodes which sit over other nodes, or nodes which sit over pipes. This restriction has been applied to avoid confusion.

With the 'Isometric to Standard' type of transposition the result can be visualized as an offset view from a high overhead position, where the vertical lines can still be seen, i.e. the result looks similar to a plan view but it is not an exact plan view (where some of the lines which were vertical in the isometric view would not be seen in an exact plan view).

When a Standard view is transposed to an Isometric view the result will be a flat view of the current drawing in the isometric plane. The user may then adjust/move node positions as required to make the drawing appear 3D on the isometric grid.


To change the system view:

1. Click the **ISO Mode On / Off Toggle** button, , on the toolbar.
2. A new view of the system will be displayed.
3. Select the 'Drag and Move' mode and adjust the node positions as required.
4. Use the drawing menu to select 'Isometric tank View from Right' or 'Isometric Tank View from Left'.


Sending a System via E-mail

You can share pipe systems with others via e-mail from within Pipe Flow Expert.

To Email a pipe system:

1. Click the **Email System Information** button, , on the toolbar to open a new mail message in your default e-mail application with the system's .pfe file attached to the e-mail.
2. Compose and send the email.

Printing a System


When you print a pipe system in Pipe Flow Expert, only the visible part of image, what is currently displayed in the Drawing pane, is printed. If you wish to print the entire pipe system, click the Zoom Out button, , on the toolbar to zoom out until the area you wish to print is visible in the Drawing pane.

The printed image will be scaled to fit on one page by default, but you can customize the scaling using the Scale to fit fields. If you want to change the paper's orientation to landscape or print to a printer other than your computer's default printer, open the Page Setup dialog and make your selections before printing the pipe system. To access the Page Setup dialog, select Print Setup from the File menu.

As an alternative for larger higher quality prints of your complete system you can create a PDF image of your system drawing by using the option provided on the file menu.

The PDF drawing can then be printed at a size to suit your requirements.

To print a pipe system:

1. Click the **Print** button, , on the toolbar or select **File | Print** to open the **Printing Information** dialog.

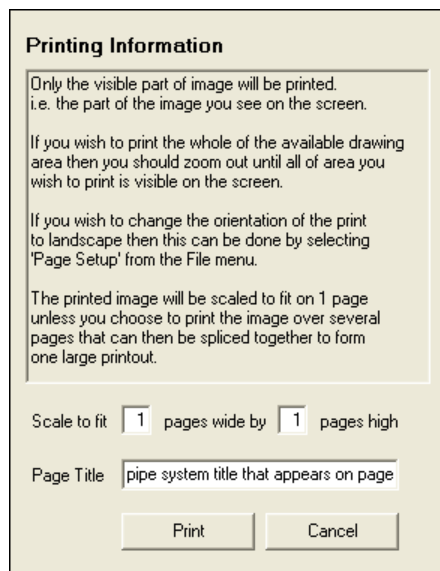


Figure 34 Printing Information dialog

2. If you want to change the printing scale, type the number of pages wide by the number of pages high in the **Scale to fit** fields. **Note:** Printing over multiple pages requires use of

additional memory and problems may arise if your system (and printer) do not have enough memory available. The amount of memory required varies considerably depending on the size and number of items on the drawing that is to be printed.

3. Type the title you want displayed at the top of the page.
4. Click the **Print** button to print the pipe system.

Saving a Screen Image

To save the current image displayed in the drawing pane:

1. Click on the File Menu and select **Save Screen Image**.
2. A save file dialog window is opened.
3. Navigate the folder hierarchy as required.
4. Enter the filename that the image should be saved as.
5. Click on **Save** to store a jpeg image of the drawing.

Saving a Drawing to an EMF Image

To save the current drawing as an Enhanced Metafile Image:

1. Click on the File Menu and select **Save Screen as EMF Metafile...**
2. A save file dialog window is opened.
3. Navigate the folder hierarchy as required.
4. Enter the filename that the image should be saved as.
5. Click on **Save** to store an enhanced metafile image of the drawing.

Emailing a Screen Image

To email the current image displayed in the drawing pane:





1. Click on the File Menu and select **Email Screen Image...**
2. Your default email client will be opened with an attached jpeg image named PFEImg.jpg
3. Fill in the normal email details (i.e. the to address, etc).
4. Click to send your email as normal.

System Options

Pipe Flow Expert can be configured and set-up to suit your working preferences.

- The labeling on the drawing can be configured so that specific items can be included or excluded as required.
- The units in which to display lengths, diameters, head loss, velocity etc. can be chosen.
- The details of a default pipe can be chosen and these details will be used to draw any new pipes.
- The calculation tolerances can be changed if necessary (however in most cases these values should be left unchanged).

Most configuration settings are defined in the Configuration Options dialog which is made up of a series of tabs, one for each page of configuration options.

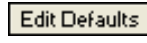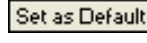You can access the Configuration Options dialog by selecting the Specify Units menu selection from the Units menu, or clicking Choose Labeling , or Choose Units , on the tool bar. To select a Default Pipe size for drawing click the Edit Defaults, , button on the pipe pane. To set the Default Pipe attributes to match the currently selected pipe, click the Set as Default, , button on the pipe pane.

Choosing Units (imperial/metric)

Pipe Flow Expert provides the flexibility to enter the units for the components of a pipe system in imperial (inches, feet, gallons), metric (millimeters, centimeters, liters) or a combination of the two units of measure. It is best practice to configure the system's universal imperial or metric unit setting before configuring individual units and default values. The universal unit setting converts all values to imperial or metric units in a pipe system. If you will be using a combination of imperial and metric units, you can change the type of units used for individual components on the Units tab of the Configuration Options dialog once you've defined the universal setting.

NOTE: When you change the universal unit setting, it converts all unit values to the unit type selected, and all values on the Units tab of the Configuration Options dialog are converted to the fields' default values. For example, if you are changing the universal setting from imperial to metric, all values, including any imperial units selected on the Units tab of the Configuration Options dialog, are converted to metric. All field values on the Units tab are also reset to their default metric value.

There are three places in Pipe Flow Expert that you can define the universal unit setting.

To define the universal unit setting:

1. To change the units from the toolbar, click the **Imperial** or **Metric** option on the tool bar.
2. To change the units from the **Units** tab, click the **Choose Units** button on the tool bar or select **Specify Units** from the **Units** menu to open the **Units** tab of the **Configuration Options** dialog. Click the **Imperial** or **Metric** option.
3. To change the units from the **Units** menu, select the **Imperial Units** or **Metric Units** from the Configuration Options **Units Tab** screen.


Click **Yes** when asked, *Do you wish to proceed?*

Choosing Item Labeling

In **Pipe Flow Expert**, you can configure the labeling of a pipe system displayed in the Drawing pane. The labeling for the pipe system is configured on the Labeling tab of the Configuration Options dialog. The tab is organized by the system components. A series of check boxes are used to configure labeling in drawing/design mode and a series of radio buttons are used to select labeling options when in results mode. The result options determine which calculated results are displayed for a solved pipe system in the Drawing pane. Results are displayed for a calculated solved pipe system after clicking the Calculate button on the toolbar.

For more information about pipe system results, see: *Calculating the System Flow and Pressure*

To configure the pipe system labeling:

1. Click the **Choose Labeling** button, , on the tool bar to open the **Labeling** tab of the **Configuration Options** dialog.

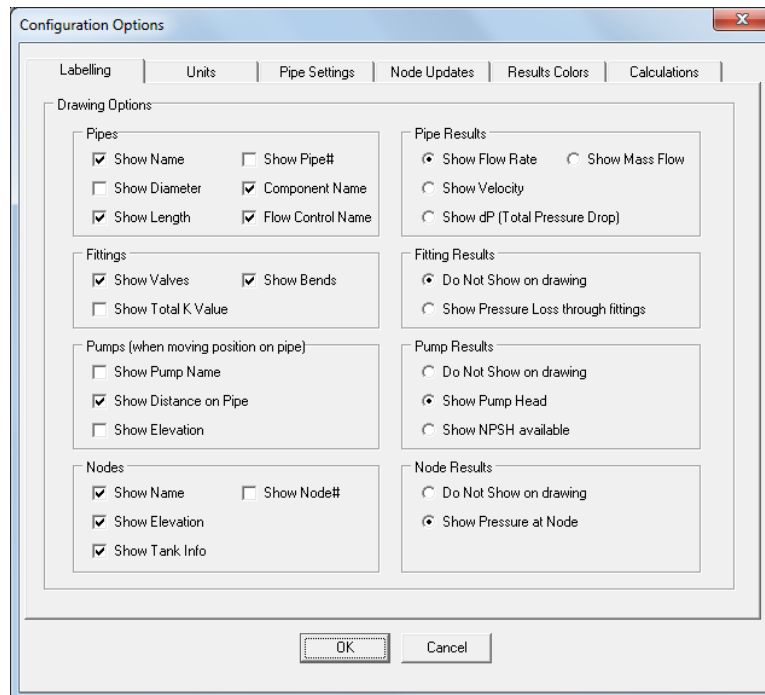


Figure 35 Configuration Options dialog – Labeling tab


2. Select the check boxes next to the labeling options you want to apply to the pipe system in the **Pipes**, **Fittings**, **Pumps**, and **Nodes** sections.
3. Click one of the labeling options in the **Pipe Results**, **Fitting Results**, **Pump Results** and **Node Results** sections to determine which of the pipe system's calculation results are displayed in the Drawing pane.
4. Click **OK** to save the labeling configurations and close the **Configuration Options** dialog, or click another tab in the dialog to continue configuring Pipe Flow Expert and the pipe system.
5. To remove a labeling option, clear the check box next to the applicable label in the **Pipes**, **Fittings**, **Pumps**, or **Nodes** section of the **Labeling** tab.

Choosing the System Units

The universal unit setting for imperial or metric units determines which type of unit is used by default throughout Pipe Flow Expert for a specific item. You can also change the types of units used for individual components in the pipe system on the Units tab of the Configuration Options dialog once you've defined the universal unit setting. The units selected on the Units tab determine which units are displayed for the corresponding fields in the Pipe Flow Expert Node and Pipe panes, the various dialogs and the units displayed in the Drawing pane.

For example, if you select *feet* from the Length list in the Pipes section on the Units tab, feet will be displayed next to the Length field in the Pipe pane, and if the Show Length check box is selected in the Pipes section of the Labeling tab, each pipe's length in the pipe system is displayed in feet in the Drawing pane.

To define the units used in Pipe Flow Expert and the pipe system:

1. Click the **Choose Units** button, , on the tool bar, or select **Specify Units** from the **Units** menu to open the **Units** tab of the **Configuration Options** dialog.

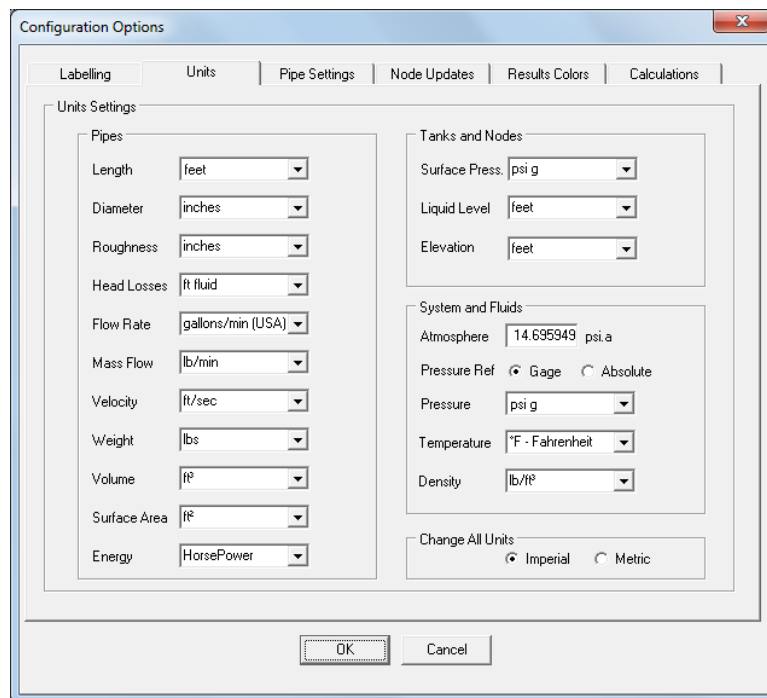


Figure 36 Configuration Options dialog – Units tab

2. Select or enter the units for each component on the tab.
3. Do not click the **Imperial** or **Metric** option in the **Change All Units** section of the **Units** tab, unless you want to change the universal unit setting and reset all the values currently defined on the **Units** tab.

NOTE: When you change the universal unit setting, it converts all unit values to the unit type selected, and all values on the Units tab of the Configuration Options dialog are converted to the fields' default values. For example, if you are changing the universal setting from imperial to metric, all values, including any imperial units selected on the Units tab of the Configuration Options dialog, are converted to metric. All field values on the Units tab are also reset to their default metric value.

Click OK to save the unit configurations and close the Configuration Options dialog, or click another tab in the dialog to continue configuring Pipe Flow Expert and the pipe system.


Choosing Pipe Drawing Defaults

If you will be using the same type of pipe throughout a pipe system, you can set up default pipe values. When the pipe default values are defined, the values are automatically populated each time you add a section of pipe to a pipe system. You can set up default pipe values for pipe length, internal diameter and roughness, as well as fittings and the pipe's material and size. Pipe default values are set up on the Default Values tab of the Configuration Options dialog.

The default pipe values are used when adding pipes however you can customize the values for an individual pipe in the system at any time, by editing its values in the Pipe pane or in the Pipe diameter data dialog.

NOTE: Be sure to enter the value for the pipe's properties in the units displayed next to the field. For example, if you are using metric units, and *m* for meter is displayed next to the Length field, enter the pipe length value in meters.

To set up pipe default values for a pipe system:

1. Click the Set Default Pipe for drawing button, , on the tool bar to open the Default Values tab of the Configuration Options dialog.

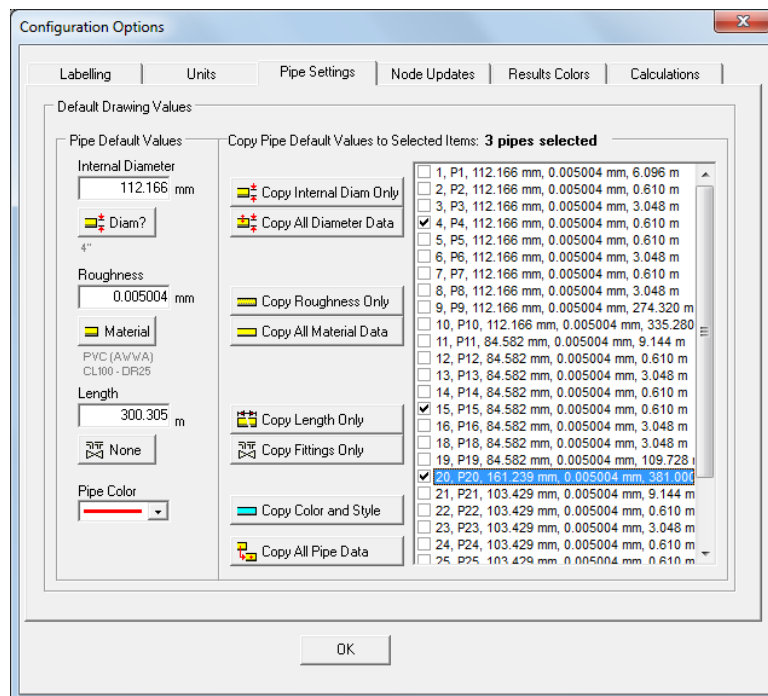


Figure 37 Configuration Options dialog – Pipe Settings tab

To change the pipe material:

1. Click the **Material** button. This opens the **Pipe diameter data** dialog. A list of all the pipe materials available in the pipe database are displayed in the **Choose new pipe material** list.

Pipe diameter data

Pipe data: P1 (Pipe Id: 1)

Material	Schedule / Class	Internal roughness (inch)
Steel (ANSI)	Sch. 40	0.001811

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft³/100 ft	Surface Area ft²/100 ft
4"	4.026	0.237	4.500	10.802	8.8405	117.8097

Save Data to Pipe
Cancel

Choose new pipe material: Double click on the material list to select a new pipe material.

Material	Schedule / Class	Internal roughness	Pipe size range
PVC (Sewer pipe)	SDR 35	0.000197 (inch)	4" - 24"
Stainless Steel (ANSI)	Sch. 5S	0.001811 (inch)	0.500" - 36"
Stainless Steel (ANSI)	Sch. 10S	0.001811 (inch)	0.500" - 36"
Stainless Steel (ANSI)	Sch. 40S	0.001811 (inch)	0.500" - 24"
Steel (ANSI) Galvanised	Sch. 40	0.005906 (inch)	0.125" - 36"
Steel (ANSI) Galvanised	Sch. 80	0.005906 (inch)	0.125" - 24"
Steel (ANSI) Galvanised	Sch. 160	0.005906 (inch)	0.500" - 26"
Steel (ANSI)	Sch. 10	0.001811 (inch)	14" - 30"
Steel (ANSI)	Sch. 20	0.001811 (inch)	8" - 30"
Steel (ANSI)	Sch. 30	0.001811 (inch)	8" - 30"
Steel (ANSI)	Sch. 40	0.001811 (inch)	0.125" - 36"
Steel (ANSI)	Sch. 60	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 80	0.001811 (inch)	0.125" - 24"
Steel (ANSI)	Sch. 100	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 120	0.001811 (inch)	4" - 24"
Steel (ANSI)	Sch. 140	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 160	0.001811 (inch)	0.500" - 26"

Select
Cancel

Add new material
Remove material data

Figure 38 Pipe diameter data dialog with materials list

2. Select the pipe's material from the **Choose new pipe material** list.
3. If the pipe material is not in the **Choose new pipe material** list, click the **Add new material** button to add the new material to the list. For more information about adding a pipe material, see: *Adding a Pipe Material to the Database* section in *Section: Creating a Pipe System*.
4. Click the **Select** button or double-click the row containing the material.

To change the pipe size:

1. The selected material is displayed in the **Pipe data** section of the **Pipe diameter data** dialog, and a list of all the different pipe sizes available for the selected pipe material is displayed in the **Pipe diameter data** dialog.

Pipe diameter data

Pipe data: P1 (Pipe Id: 1)

Material	Schedule / Class	Internal roughness (inch)
Steel (ANSI)	Sch. 40	0.001811

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
1"	1.049	0.133	1.315	1.681	0.6002	34.4266

☒ Save Data to Pipe

Steel (ANSI) Sch. 40 Internal roughness 0.001811 inch

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
0.125"	0.269	0.068	0.405	0.245	0.0395	10.6029
0.250"	0.364	0.088	0.540	0.425	0.0723	14.1372
0.375"	0.493	0.091	0.675	0.568	0.1326	17.6715
0.500"	0.622	0.109	0.840	0.852	0.2110	21.9911
0.750"	0.824	0.113	1.050	1.132	0.3703	27.4889
1"	1.049	0.133	1.315	1.681	0.6002	34.4266
1-1/4"	1.380	0.140	1.660	2.275	1.0387	43.4587
1-1/2"	1.610	0.145	1.900	2.721	1.4138	49.7419
2"	2.067	0.154	2.375	3.657	2.3303	62.1774
2-1/2"	2.469	0.203	2.875	5.799	3.3248	75.2673
3"	3.068	0.216	3.500	7.584	5.1338	91.6298
3-1/2"	3.548	0.226	4.000	9.119	6.8659	104.7198
4"	4.026	0.237	4.500	10.802	8.8405	117.8097
5"	5.047	0.258	5.563	14.633	13.8929	145.6390
6"	6.065	0.280	6.625	18.995	20.0627	173.4421
8"	7.981	0.322	8.625	28.585	34.7410	225.8020

☒ Use selected size ☐ Metric ☒ Imperial

Figure 39 Pipe diameter data dialog with materials size

2. Select the applicable pipe size from the list.
3. If the pipe size is not in the list, click the **Add new size** button to add the new size to the list. For more information about adding a pipe size, see: *Adding Pipe Size Data to the Database Section: Creating a Pipe System*.
4. Click the **Use selected size** button or double-click the row containing the size. The selected size is displayed below the pipe material in the **Pipe data** section of the **Pipe diameter data** dialog.
5. Edit the applicable pipe properties in the **Pipe data** section. The edits you make only affects the pipe's properties for the system; they do not affect the database data.
6. Click **Save Data to Pipe** to add the pipe's material and size, and to close the **Pipe diameter data** dialog.

 
The Pipe Default Tab is now populated with the choices that have been made.

The pipe's material is displayed under the **Roughness** field, the nominal size is displayed under the **Diam** button and the pipe's internal diameter and roughness are displayed in the **Internal Diameter** and **Roughness** fields on the **Default Values** tab.

To change the pipe length:

1. Type the default pipe length into the **Length** field on the pipe pane.

To change the fittings on the pipe:

1. The default number of fittings currently on the selected pipe is displayed on the **Add/Change Fittings** button.
2. Click the **Add/Change Fittings** button,  3.
3. Clicking the **Add/Change Fittings** button opens the **Pipe fitting friction coefficients** dialog. A list of all the fittings available in the fitting database are displayed in the **Fitting Database** list.

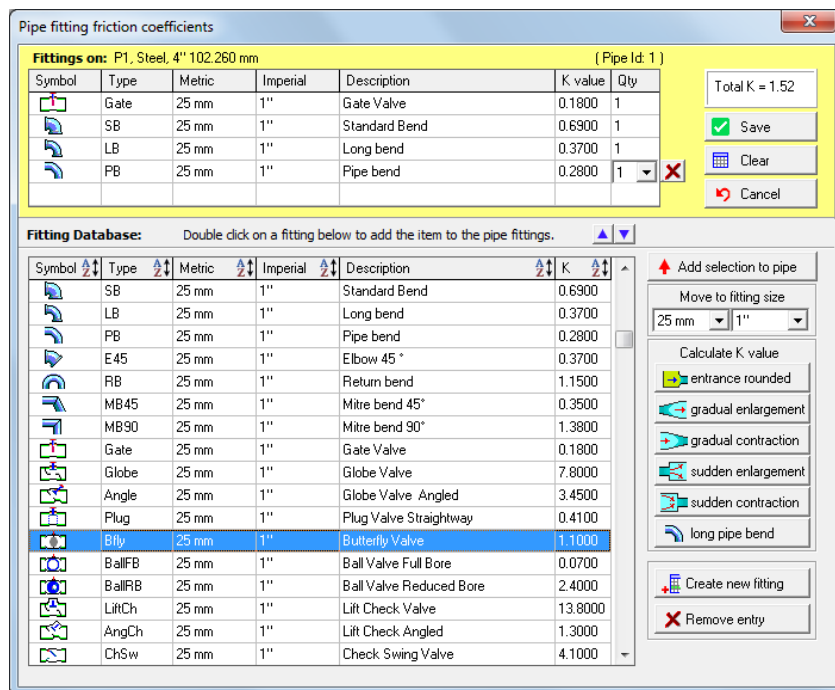


Figure 40 Pipe fitting friction coefficients dialog

4. Select the fitting you want to add to the pipe from the **Fitting Database** list.
5. Use the **Move to fitting size** fields to locate a specific metric or imperial fitting size in the **Fitting Database** list.
6. If the fitting is not in the **Fitting Database** list, click the **Create new fitting** button to add the new fitting to the list. For more information about adding a fitting to the database, see: *Adding a Fitting to the Database* section in *Section: Creating a Pipe System*.
7. Click the **Add selection to pipe** button or double-click the row containing the fitting.
8. The selected fitting is displayed in the **Fittings on** section of the **Pipe fitting friction coefficients** dialog.
9. Select the quantity of the fitting you are adding to the pipe from the fitting's **Qty** list in the **Fittings on** section.

10. To add additional fittings to the pipe, repeat Steps 4 – 9.
11. Click **Save** to add the fitting to the pipe, and to close the **Pipe fitting friction coefficients** dialog.
12. Confirm the changes to the default pipe settings:
13. Click **OK** to save the default pipe values and close the **Configuration Options** dialog, or click another tab in the dialog to continue configuring Pipe Flow Expert and the pipe system.

Change attributes of more than one pipe

Some or all of the **Default pipe values** may be copied to other pipes in the system. The **Selection Tool** or the **Individual Item Selection Option** may be used to select a range of pipes on the drawing prior to opening the **Pipe Settings** tab.

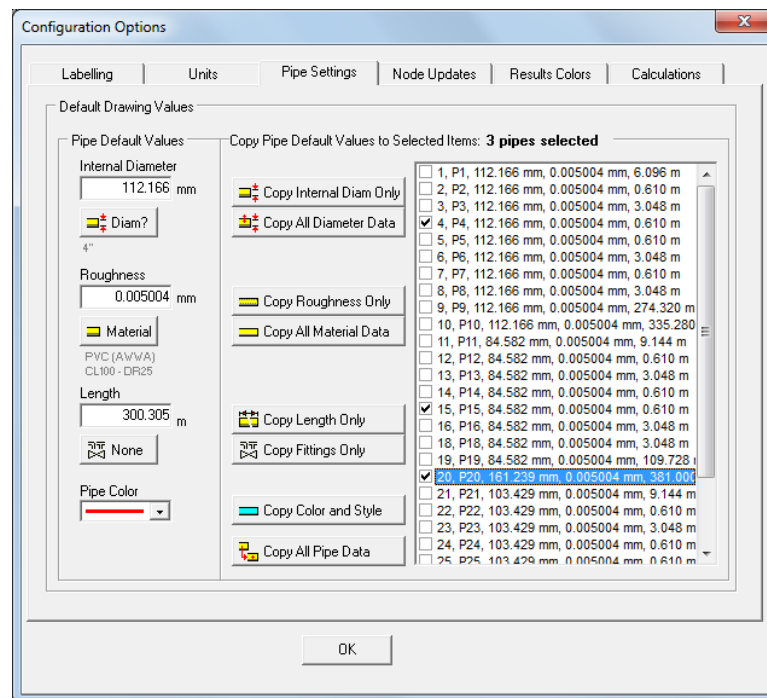





Figure 41 Configuration Options dialog – Pipe Settings tab

1. Optional: First select a group of pipes to update using the **Selection Tool**, , or the **Individual Item Selection Option**, .
2. Click the **Adjust Attributes of Selected Pipes** button, , on the tool bar, to open the **Pipe Settings** tab of the **Configuration Options** dialog.
3. Individual pipes can be added or removed from the selected list by checking or un-checking the box adjacent to the pipe description.
4. Click **Copy All Pipe Data** to copy all of the pipe attributes, including valves and fittings and the fluid zone to the selected pipes.

5. Click **Copy All Diameter Data** to copy the default internal and external pipe diameter to the selected pipes.
6. Click **Copy Internal Diameter Only** to copy the default internal diameter to the selected pipes.
7. Click **Copy All Material Data** to copy the default material, schedule/class and internal roughness to the selected pipes.
8. Click **Copy Internal Diameter Only** to copy the default internal diameter to the selected pipes.
9. Click **Copy Roughness Only** to copy the default internal roughness to the selected pipes.
10. Click **Copy Length Only** to copy the default pipe length to the selected pipes.
11. Click **Copy Fittings Only** to copy the default pipe fittings to the selected pipes.
12. Click **Copy Color and Style** to copy the default pipe color and line width to the selected pipes.

Node Updates

The node elevation and the node image on the **Node Updates Tab** may be copied to other nodes in the system. The **Selection Tool** or the **Individual Item Selection Option** may be used to select a range of nodes on the drawing prior to opening the **Node Updates** tab.

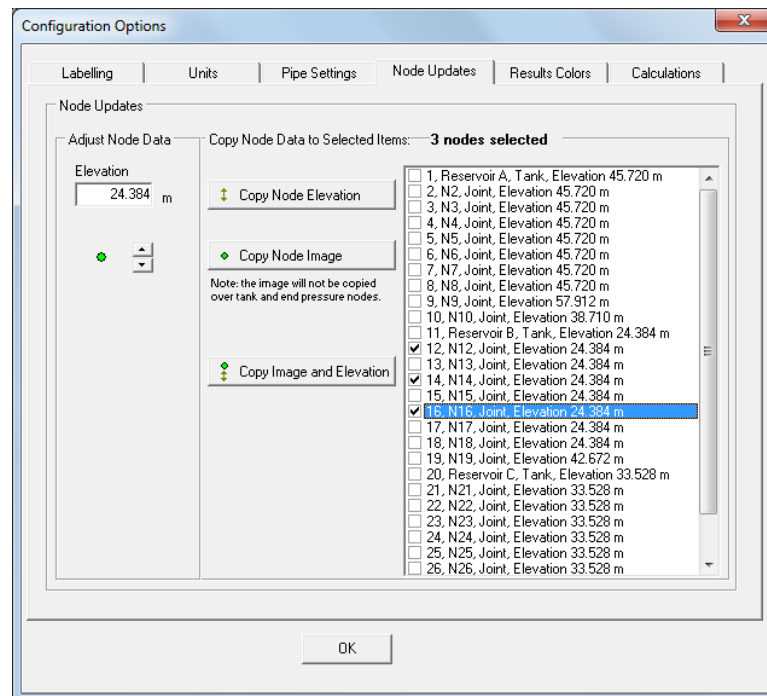





Figure 42 Configuration Options dialog – Node Updates tab

1. Optional: First select a group of nodes to update using the **Selection Tool**, , or the **Individual Item Selection Option**, ,

2. Click the **Adjust Attributes of Selected Nodes** button, , on the tool bar, to open the **Node Updates** tab of the **Configuration Options** dialog.
3. Individual nodes can be added or removed from the selected list by checking or un-checking the box adjacent to the node description.
4. Click **Copy Image and Elevation** to copy the node image and the node elevation to the selected nodes.
5. Click **Copy Node Image** to copy the node image to the selected nodes.
6. Click **Copy Node Elevation** to copy the node elevation to the selected nodes.

Results Colors

The results screen can display pipes and nodes from the solved network using a color gradient to highlight the pipes or nodes based on the result value for a chosen calculation category.

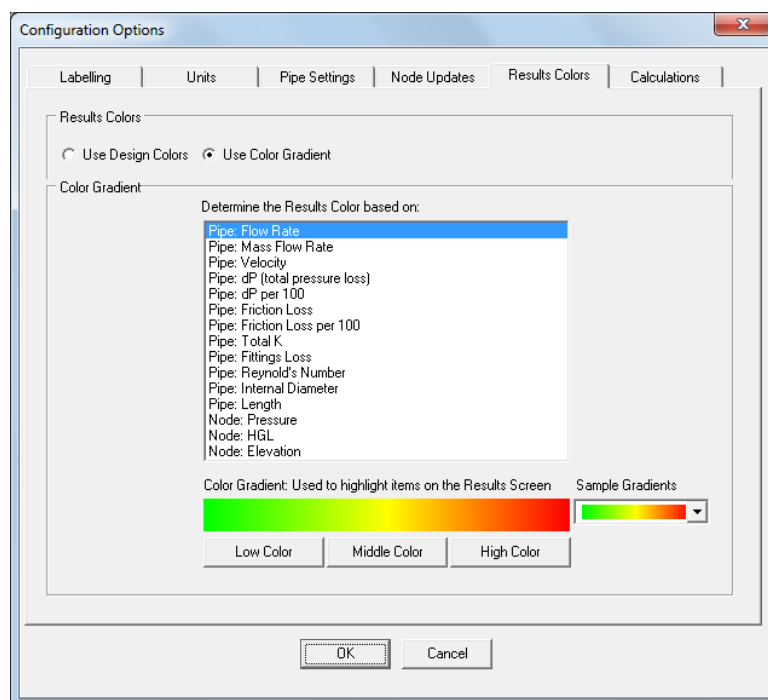



Figure 43 Configuration Options dialog – Results Colors tab

1. Click the **Adjust Colors on Results Screen** button, , on the tool bar, to open the **Results Colors** tab of the **Configuration Options** dialog.
2. Select a calculation category to be display in color on the Results screen.
3. Choose a color gradient from the drop down of sample gradients, or use the Low, Middle and High color buttons to create your own color gradient.
4. Click OK to update the drawing pane.

Configuring the Calculation Parameters

The accuracy to which a pipeline system is balanced can be changed. The balance options for a pipe system are configured on the Calculations tab of the Configuration Options dialog.

Most systems can be solved without any changes to the Calculation options, however these options are included for experimental use when a balanced solution cannot be found. Widening of these parameters may give results where the flow into the system and out of the system do not balance and/or the pressure results throughout the system will not agree with the sum of the pressure drops through the individual pipes.

A balanced solution may not always be found if the system contains components which 'fight' each other. If a pump is placed in a pipeline, the resultant effect of a change in flow rate will be the sum of the pipeline friction and the head added by the pump. In some circumstances where a system includes a number of pumps, the adjustment of the flow rate in one pipe/pump combination will allow a disproportionate change in the flow rate in another pipe/pump combination, which might have a counter acting effect to the previous flow rate adjustment. Thus the program would oscillate between two possible solutions, neither of which will give a normally expected degree of accuracy.

It would normally be better to change the system design to overcome these sorts of problem rather than proceed with a design where it is difficult to predict an accurate result.

Note: We recommend that you do not change these values, unless it becomes necessary to solve a finally balanced system.

Configuration Options

Labelling | Units | Pipe Settings | Node Updates | Results Colors | **Calculations**

Calculation Settings

Most systems will solve without any changes to these parameters.
However, these values can be amended to change solution criteria or to adjust convergence properties.

System Calculation Tolerances

Loop Balance Final Pressure Tolerance: 0.000010 bar

Loop Balance Initial Pressure Tolerance: 0.200000 bar

Flow Balance Final Tolerance: 0.000001 kg/sec

Calculation Engine

Linear then Newton Convergence

Final Solution Verification

Node Balance to: 0.000018 bar

Calculation Iteration Parameters

Max Iterations for Approximate Solution: 200

Max Iterations to find Final Solution: 5000

Final Iterations Delta Reduction Factor: 0.100

Min Velocity for Discharge Estimates: 0.100000 m/sec

Max Velocity for Discharge Estimates: 50.000000 m/sec

Calculation Warning Parameters

High Velocity warnings for

Liquid Velocity > 5.000000 m/sec

Gas Velocity > 20.000000 m/sec

Reset All entries to the Default Values

OK Cancel

Figure 44 Calculation settings

The following adjustments can be made (but the user is advised to leave these values unchanged):

Feature	Description
Loop Balance Final Pressure Tolerance	Pressure balance tolerance allowed around a loop, for final solution.
Loop Balance Initial Pressure Tolerance	Pressure balance tolerance allowed around a loop, for initial solution.
Flow Balancing Tolerance	Flow in and flow out difference allowed at join points.
Final Solution Verification	Pressure balance accuracy tolerance allowed between adjoining nodes.
Max Iterations for Approximate Solution	Maximum calculation iterations allowed to find initial approximate solution.
Max Iterations for Final Solution	Maximum calculation iterations allowed to find final solution.
Final Iterations Delta Reduction Factor	Rate of delta reduction adjustments to find final solution.
Min Velocity for Discharge Estimates	Starting velocity estimate for unknown discharge estimation.
Max Velocity for Discharge Estimates	Maximum velocity estimate allowed for unknown discharge estimation.
High Velocity Warning for liquids	A warning will be issued if the liquid velocity in any pipe exceeds this value.
High Velocity Warning for Gases	A warning will be issued if the gas velocity in any pipe exceeds this value.

Fluid Zones

Pipe Flow Expert will allow the user to design pipeline systems with up to 9 different fluid zones. The density and viscosity of each fluid zone must be set by the user. Pipe Flow Expert does not calculate the resultant density or viscosity of any 'mixed' fluids.

Each pipe in a system can be associated with an available fluid zone. The density and viscosity of the associated fluid zone will be used in calculating the flow rate and pressure loss in each pipe.


Most systems may only have one Fluid Zone, therefore when a new system is being drawn each new pipe will be associated with the fluid zone associated with the default pipe data.

Fluid Zone 1 is the **Default Fluid Zone**. The color of Fluid Zone 1 cannot be changed. Pipes in the default fluid zone are not background highlighted.

Pipes associated with Fluid Zone 2 to Fluid Zone 9 are background highlighted to assist with identification of the different fluid zones. The background highlight color for these fluid zones can be amended by the user. This background highlighting may be toggled on/off from a fluid menu option.

Changing the fluid data of a fluid zone will affect the calculation of flow and pressure loss for all pipes associated with the fluid zone.

Defining Fluid Zones

The **Fluid** button, , on the tool bar opens the fluid zone menu.

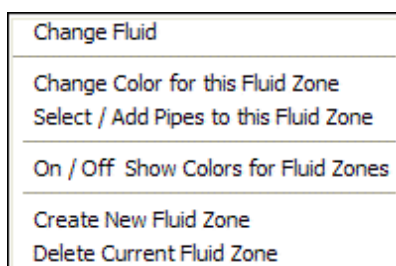


Figure 45 Fluid Zone Menu

Feature	Description
Change Fluid	Change the fluid name, density and viscosity for the currently selected fluid zone.
Change Color for this fluid zone	Change the background highlight color for the currently selected fluid zone
Select / Add pipes to this fluid zone	Select pipes to be associated with the currently selected fluid zone. The drawing cursor will change to a Fluid Zone selection rectangle. Move the drawing cursor to an appropriate position on the system drawing. Click on the drawing pane and hold the mouse button down while dragging the Fluid Zone selection rectangle to enclose the pipes to be associated with current fluid zone. When the mouse button is released the enclosed pipes will be associated with the current fluid zone.
On / Off Show Colors for Fluid Zones	Toggle the fluid zone background highlight colors display on / off.

Create New Fluid Zone	Create a new fluid zone. The fluid database dialog will be displayed so that new fluid data can be selected. When the fluid data has been chosen / amended click save to confirm the data for the new fluid zone.
Delete Current Fluid Zone	Delete the currently selected fluid zone.

Properties of Mixed Fluids

Pipe Flow Expert does not calculate the resultant density or viscosity of any 'mixed' fluids. The characteristics of each fluid zone must be set by the user.

Establishing the density and viscosity of fluid mixtures can be a complicated and a reliable independent method should be used to calculate the mixed fluid properties.

Two Phase Flow – Additional Pressure Drop

Pipe Flow Expert does not calculate the pressure drop for two-phase flow. When two different fluids are mixed together it is possible that two-phase flow may occur at some point in a system. Two-phase flow can produce an extremely high pressure drop many times greater than the pressure drop of either individual fluid. The user should make due allowance for any two-phase flow pressure drop, possibly by using a component to add an appropriate additional pressure loss.

Fluids Database

Pipe Flow Expert includes a fluid database. The Fluid Properties Database list in the Fluid data dialog displays all fluids available in the fluid database. When you are selecting a fluid to be used in the currently selected fluid zone you can select an existing fluid, or add a new fluid by adding the fluid to the fluid database.

The Fluid Data can be defined and overwritten in the fluid properties section of the Fluid data dialog.

New fluid data can be added to the existing database entries by using the Add New Fluid button.

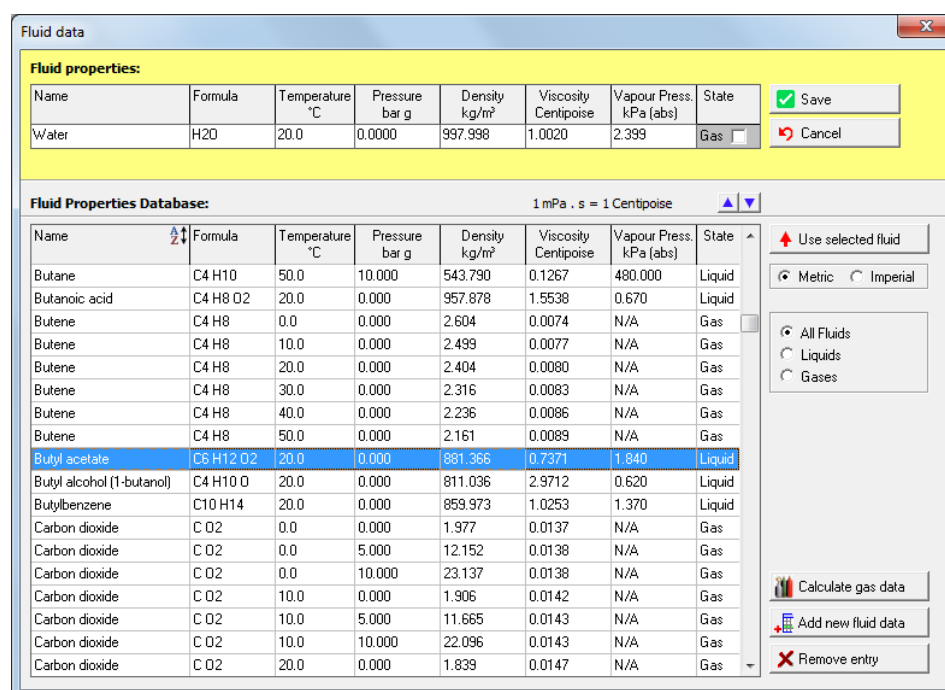



Figure 46 Fluid data dialog

To define the fluid and fluid properties for the currently selected fluid zone:

1. Click the **Fluid** button, , on the tool bar and select '**Change Fluid**' from the pop-up menu to open the **Fluid data** dialog.
2. Select the fluid contained in the pipe system from the **Fluid Properties Database** list.
3. If the fluid is not in the **Fluid Properties Database** list, click the **Add new fluid data** button to add the new fluid data to the list. For more information about adding fluid data, see: *Adding Fluids to the Fluid Database*
4. Click the **Use selected fluid** button or double-click the row containing the fluid.
5. The selected fluid is displayed in the **Fluid properties** section of the **Fluid data** dialog.
6. Edit the applicable fluid properties in the **Fluid properties** section.

7. The edits you make only affect the fluid properties for the system; they do not affect the database data.
8. Click **Save** to save the fluid data to be used with the currently selected fluid zone.


The name of the fluid for the currently selected fluid zone is displayed next to the **Fluid** button on the tool bar.

Adding Fluids to the Fluid Database

If the fluid you are using in the pipe system does not exist in the Pipe Flow Expert fluid database, you can quickly add the fluid to the database by clicking the Add new fluid data button on the Fluid data dialog.

NOTE: Be sure to enter the value for the fluid's properties in the units displayed on the column header. For example, if you are using imperial units, °F for Fahrenheit is displayed under *Temperature* in the Temperature column. The temperature value should be entered in degrees Fahrenheit.


To add new fluid data to the fluid database:


1. Click the **Fluid** button, , on the tool bar and select '**Change Fluid**' from the pop-up menu to open the **Fluid data** dialog.
2. Click the **Add new fluid data** button.
3. Clicking the **Add new fluid data** button opens the **Add fluid data** section in the **Fluid data** dialog.
4. Type the fluid's name in the **Name** field.
5. Type the fluid's formula in the **Formula** field.
6. Type the fluid's temperature in the **Temperature** field.
7. Type the fluid's density in the **Density** field.
8. Type the fluid's viscosity centipoise in the **Viscosity Centipoise** field.
9. Type the fluid's vapor pressure in the **Vapour Press** field.
10. If the fluid's state is gas, select the **Gas** check box in the **State** field.
11. Leave the **Gas** check box blank if the fluid's state is liquid.
12. Click **Save** to save the new fluid data to the database and the **Fluid Properties Database** list.

Adding Gas Data to the Fluid Database

If the fluid you are using in the pipe system is one of the most common gases, the viscosity and density of the gas at various temperatures and pressures can be calculated.

To add new gas data to the fluid database:

1. Click the **Fluid data** button, , on the tool bar and select '**Change Fluid**' from the pop-up menu to open the **Fluid Data** dialog.
2. Choose the **All Fluids** or **Gases** option to display the **Calculate Gas Data** button.
3. Click the **Calculate Gas Data** button to display the **Properties of Gases** dialog.

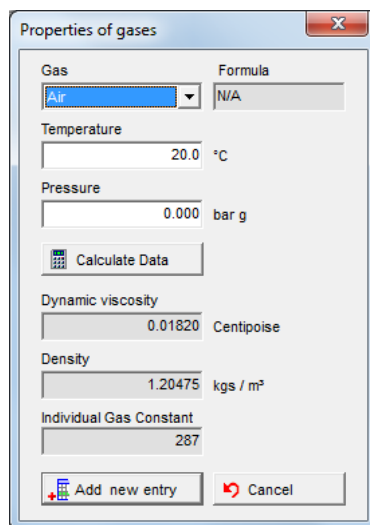

The 'Properties of gases' dialog box is shown. It contains the following fields and buttons:

- Gas:** A dropdown menu with 'Air' selected.
- Formula:** A text field containing 'N/A'.
- Temperature:** A text field with '20.0' and a unit dropdown set to '°C'.
- Pressure:** A text field with '0.000' and a unit dropdown set to 'bar g'.
- Calculate Data:** A button with a calculator icon.
- Dynamic viscosity:** A text field with '0.01820' and a unit dropdown set to 'Centipoise'.
- Density:** A text field with '1.20475' and a unit dropdown set to 'kgs / m³'.
- Individual Gas Constant:** A text field with '287'.
- Add new entry:** A button with a plus icon.
- Cancel:** A button with a red X icon.

Figure 47 Properties of Gases

4. Choose a Gas from the drop down listing
5. Enter the temperature of the gas.
6. Enter the pressure of the gas.
7. The viscosity and density data for the gas are displayed.
8. Click **Add new entry** to add the data to the fluid data list.


Tanks

In Pipe Flow Expert, a tank can represent a reservoir or any type of fluid supply. It can also model a discharge or the point where a fluid exits a pipe system. A tank is a type of node in Pipe Flow Expert. There are three types of nodes used in a pipe system: tanks, demand pressures, and join points. Nodes are located at the beginning and end of a pipe.

NOTE: Be sure to enter the values for the tank's properties in the units displayed next to the field. For example, if you are using imperial units, and *ft* for feet is displayed next to the Liquid Level field, enter the liquid level value in feet.

Add a Tank

To add a tank to the pipe system:

1. Click the **Add Tank** button, , on the tool bar.
2. When you click the **Add Tank** button, the tank symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click on the place on the Drawing pane where you want to add a tank.
4. The tank is added to the system, and is selected on the Drawing pane. Define the tank's properties in the Node pane.

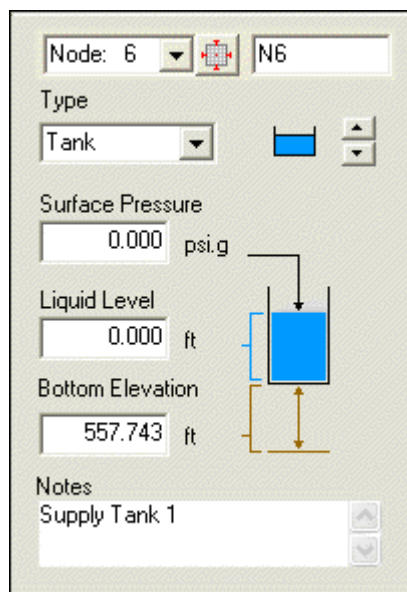
The image shows a software interface for configuring a tank node. At the top, there is a 'Node' dropdown menu set to '6' and a text field containing 'N6'. Below this is a 'Type' dropdown menu set to 'Tank', accompanied by a small blue tank icon and up/down arrow buttons. The 'Surface Pressure' field is set to '0.000 psi.g'. The 'Liquid Level' field is set to '0.000 ft'. The 'Bottom Elevation' field is set to '557.743 ft'. To the right of these fields is a larger blue tank icon with a vertical line and arrows indicating the liquid level and bottom elevation. At the bottom, there is a 'Notes' section with a text area containing 'Supply Tank 1' and up/down arrow buttons.

Figure 48 Node pane for tanks

5. Type the tank's name in the **Node** field.
6. Tank is automatically selected in the Type list
7. Click the **Tank Scroll Up** or **Scroll Down** button to select the tank image you want displayed on the pipe system drawing.

8. The image you select does not affect any of the tank's properties or values.
9. Type the surface pressure of the fluid in the tank in the **Surface Pressure** field.
10. Type the amount of fluid in the tank in the **Liquid Level** field.
11. Type the elevation at the base of the tank in the **Bottom Elevation** field.
12. Type any applicable notes regarding the tank in the **Notes** field.
13. To add additional tanks to the system, repeat Steps 3 – 12.

Nodes (Join Points)


A join point is the place where two or more pipes meet in a pipe system. A green dot represents each join point in the Drawing pane. In Pipe Flow Expert, you can add join points as you add pipe, or you can add join points first and then connect the join points with pipe. If you add a join point to a pipe, and the location of the join point causes the pipe to be split, you will have to manually reset the pipe details for each section of pipe.


Once join points are added, you can define the fitting(s) used at each join point and the other fittings along the pipes in the pipe system.

 
NOTE: Be sure to enter the values for the join point's properties in the units displayed next to the field. For example, if you are using imperial units, and *ft* for feet is displayed next to the Elevation of Join field, enter the elevation in feet.


Adding a Node

To add a join point node to the pipe system:

 
1. Click the **Add Join Point** button, , on the tool bar.
2. When you click the **Add Join Point** button, the join point symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click on the place on the Drawing pane where you want to add a join point.
4. The join point is added to the system, and is selected on the Drawing pane. Define the join point's name, elevation, and volume demand in and/or demand out in the Node pane.

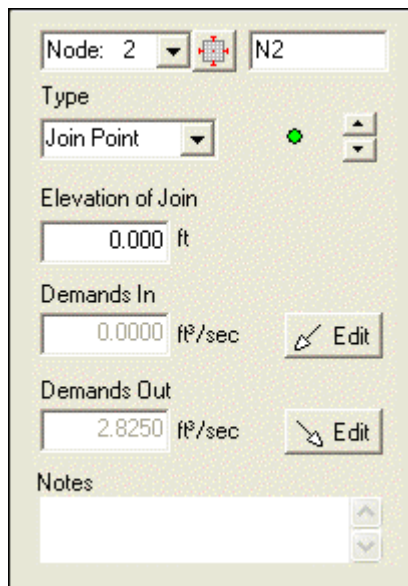


Node: 2  N2

Type
Join Point 

Elevation of Join
0.000 ft

Demands In
0.0000 ft³/sec  Edit

Demands Out
2.8250 ft³/sec  Edit


Notes


Figure 49 Node pane for join points

5. Type the join point's name in the **Node** field.
6. *Join Point* is automatically selected in the **Type** list.
7. Type the elevation of the join point in the **Elevation of Join** field.

8. If the join point has a required demand flow, click the **Edit** button to open the **Set Flow Demands** dialog.
9. You can enter the join point's demand flow into and/or out of the join point in the **Set Flow Demands** dialog. Both **Edit** buttons in the Node pane open the **Set Flow Demands** dialog

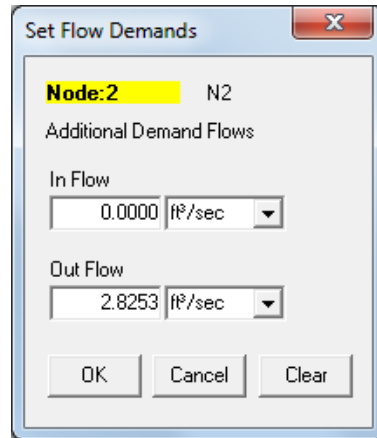


Figure 50 Set Flow Demands dialog

10. Type the required flow rate for the fluid flowing into the join point in the **In Flow** field.
11. Type the required flow rate for the fluid flowing out of the join point in the **Out Flow** field.
12. Click **OK** to add the join point's demand flow.
13. Type any applicable notes regarding the join point in the **Notes** field.
14. To add additional join points to the system, repeat Steps 3 – 12.

Pipes


If you will be using the same type of pipe throughout the pipe system, you can define the default pipe type and values for the system using the Default Values tab in the Configuration Options dialog. When the default pipe values are set, each time you add a pipe to the system, the pipe type and values are automatically defined for the pipe. You can customize the values for an individual pipe in the system, by editing its values in the Pipe pane or in the Pipe diameter data dialog. The Pipe diameter data dialog contains a list of the pipe materials and sizes available in the pipe database and additional properties specific to a pipe in the system.

For more information about using default pipe values, see: *Setting Up the System Options*

NOTE: Be sure to enter the values for the pipe's properties in the units displayed next to the field. For example, if you are using metric units, and *m* for meter is displayed next to the Length field, enter the pipe length value in meters.

Adding a Pipe

To add a pipe to the pipe system:

1. Click the **Add Pipes** button, , on the tool bar.
2. When you click the **Add Pipes** button, the pipe symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click on the place on the Drawing pane where you want the pipe to start.
4. Click on the place where you want the pipe to end.
5. The pipe is added to the system, and is selected in the Drawing pane. Define the pipe's properties in the Pipe Pane.
6. The rubber-banding functionality of the **Add Pipes** feature provides the ability to continue drawing additional connected sections of pipe after adding a section of pipe.
7. If you want to continue adding connected lengths of pipe to the system, move the mouse pointer to draw the pipe, and click where you want the pipes to end. To turn off the rubber-banding, press the right mouse button (right-click).
8. Type the pipe's name in the **Name** field.
9. If the default pipe type and values for the system are defined on the **Default Values** tab in the **Configuration Options** dialog, you are done adding the pipe.
10. The pipe type, default length, internal diameter and roughness values are displayed in the Pipe pane.
11. If the default pipe values are not being used for the pipe, continue to Step 25.
12. Type the length of the pipe into the **Length** field.
13. Click the **Material** button.

14. Clicking the **Material** button opens the **Pipe diameter data** dialog. A list of all the pipe materials available in the pipe database are displayed in the **Choose new pipe material** list

Pipe diameter data (Pipe Id: 1)

Material	Schedule / Class	Internal roughness (inch)
Steel (ANSI)	Sch. 40	0.001811

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft³ / 100 ft	Surface Area ft² / 100 ft
4"	4.026	0.237	4.500	10.802	8.8405	117.8097

Save Data to Pipe
Cancel

Choose new pipe material: Double click on the material list to select a new pipe material.

Material	Schedule / Class	Internal roughness	Pipe size range
PVC (Sewer pipe)	SDR 35	0.000197 (inch)	4" - 24"
Stainless Steel (ANSI)	Sch. 5S	0.001811 (inch)	0.500" - 36"
Stainless Steel (ANSI)	Sch. 10S	0.001811 (inch)	0.500" - 36"
Stainless Steel (ANSI)	Sch. 40S	0.001811 (inch)	0.500" - 24"
Steel (ANSI) Galvanised	Sch. 40	0.005906 (inch)	0.125" - 36"
Steel (ANSI) Galvanised	Sch. 80	0.005906 (inch)	0.125" - 24"
Steel (ANSI) Galvanised	Sch. 160	0.005906 (inch)	0.500" - 26"
Steel (ANSI)	Sch. 10	0.001811 (inch)	14" - 30"
Steel (ANSI)	Sch. 20	0.001811 (inch)	8" - 30"
Steel (ANSI)	Sch. 30	0.001811 (inch)	8" - 30"
Steel (ANSI)	Sch. 40	0.001811 (inch)	0.125" - 36"
Steel (ANSI)	Sch. 60	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 80	0.001811 (inch)	0.125" - 24"
Steel (ANSI)	Sch. 100	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 120	0.001811 (inch)	4" - 24"
Steel (ANSI)	Sch. 140	0.001811 (inch)	8" - 24"
Steel (ANSI)	Sch. 160	0.001811 (inch)	0.500" - 26"

Select
Cancel
Add new material
Remove material data

Figure 51 Pipe diameter data dialog with materials list

15. Select the pipe's material from the **Choose new pipe material** list.
16. If the pipe material is not in the **Choose new pipe material** list, click the **Add new material** button to add the new material to the list. For more information about adding a pipe material, see: *Adding a Pipe Material to the Database*
17. Click the **Select** button or double-click the row containing the material.
18. The selected material is displayed in the **Pipe data** section of the **Pipe diameter data** dialog, and a list of all the different pipe sizes available for the selected pipe material is displayed in the **Pipe diameter data** dialog.

Pipe diameter data

Pipe data: P1 (Pipe Id: 1)

Material	Schedule / Class	Internal roughness (inch)
Steel (ANSI)	Sch. 40	0.001811

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
1"	1.049	0.133	1.315	1.681	0.6002	34.4266

☒ Save Data to Pipe

Steel (ANSI) Sch. 40 Internal roughness 0.001811 inch

Nominal Size	Internal Diam. inch	Wall Thick. inch	Outside Diam. inch	Weight lbs/ft	Internal Vol. ft ³ / 100 ft	Surface Area ft ² / 100 ft
0.125"	0.269	0.068	0.405	0.245	0.0395	10.6029
0.250"	0.364	0.088	0.540	0.425	0.0723	14.1372
0.375"	0.493	0.091	0.675	0.568	0.1326	17.6715
0.500"	0.622	0.109	0.840	0.852	0.2110	21.9911
0.750"	0.824	0.113	1.050	1.132	0.3703	27.4889
1"	1.049	0.133	1.315	1.681	0.6002	34.4266
1-1/4"	1.380	0.140	1.660	2.275	1.0387	43.4587
1-1/2"	1.610	0.145	1.900	2.721	1.4138	49.7419
2"	2.067	0.154	2.375	3.657	2.3303	62.1774
2-1/2"	2.469	0.203	2.875	5.799	3.3248	75.2673
3"	3.068	0.216	3.500	7.584	5.1338	91.6298
3-1/2"	3.548	0.226	4.000	9.119	6.8659	104.7198
4"	4.026	0.237	4.500	10.802	8.8405	117.8097
5"	5.047	0.258	5.563	14.633	13.8929	145.6390
6"	6.065	0.280	6.625	18.995	20.0627	173.4421
8"	7.981	0.322	8.625	28.585	34.7410	225.8020

☐ Metric ☒ Imperial

Figure 52 Pipe diameter data dialog with materials size

19. Select the applicable pipe size from the list.
20. If the pipe size is not in the list, click the **Add new size** button to add the new size to the list.
For more information about adding a pipe size, see: *Adding Pipe Size Data to the Database*
21. Click the **Use selected size** button or double-click the row containing the size.
22. The selected size is displayed below the pipe material in the **Pipe data** section of the **Pipe diameter data** dialog.
23. Edit the applicable pipe properties in the **Pipe data** section.
24. The edits you make only affect the current pipe's properties; they do not affect the database data.
25. Click **Save Data to Pipe** to add the pipe's material and size, and to close the **Pipe diameter data** dialog.

The pipe's material is displayed under the **Roughness** field, the nominal size is displayed under the **Diam** button, and the pipe's length, internal diameter, and roughness are displayed in the **Length**, **Internal Diameter**, and **Roughness** fields in the Pipe pane.

Adding a Pipe Material to the Database

If the pipe material you are using in the pipe system does not exist in the Pipe Flow Expert pipe database, you can quickly add the material to the database by clicking the Add new material button on the Pipe diameter data dialog.

NOTE: Be sure to enter the values for the pipe material's properties in the units displayed next to the field. For example, if you are using metric units, and *mm* for millimeter is displayed next to the Internal Roughness field, enter the internal surface roughness in millimeters.

To add new material to the pipe database:

1. Select a pipe in the pipe system and click the **Material** button in the Pipe pane, or click the **Material** button on the **Default Values** tab in the **Configuration Options** dialog to open the **Pipe diameter data** dialog with the material list displayed.
2. Click the **Add new material** button.
3. Clicking the **Add new material** button opens the **Add pipe material** section in the **Pipe diameter data** dialog.
4. Type the material name in the **Name** field.
5. Type the material's schedule or class in the **Schedule/Class** field.
6. Type the material's internal roughness, expressed in the units displayed in parenthesis, in the **Internal Roughness** field.
7. Click the **Add new material entry** button to save the new material data to the database and the materials list.

Adding Pipe Size Data to the Database

If the pipe size data you are using in the pipe system does not exist in the Pipe Flow Expert pipe database, you can quickly add the size data to the database by clicking the Add new size button on the Pipe diameter data dialog.

NOTE: Be sure to enter the value for the pipe's size data in the units displayed on the column header. For example, if you are using imperial units, and *lbs/ft* for pounds per foot is displayed under *Weight* in the Weight column, the weight value should be entered in pounds per foot.

To add new size data to the pipe database:

1. Select a pipe in the pipe system and click the **Diam?** button in the Pipe pane, or click the **Diam?** button on the **Default Values** tab in the **Configuration Options** dialog to open the **Pipe diameter data** dialog with the size list displayed.
2. Click the **Add new size** button.
3. Clicking the **Add new size** button opens the **Add pipe data** section in the **Pipe diameter data** dialog.
4. Type the pipe's nominal size in the **Nominal Size** field.
5. Type pipe's internal diameter in the **Internal Diam.** field.

6. Type the wall thickness of the pipe in the **Wall Thick.** field.
7. Click the outside diameter of the pipe in the **Outside Diam.** field.
8. Type the pipe weight in the **Weight** field.
9. The values in the **Internal Vol.** and **Surface Area** fields are automatically calculated for you.
10. Click the **Add new entry** button to save the new size data to the database and the size list.

Reversing the Pipe Flow

When you add a pipe to a pipe system, the direction the fluid flows through the pipe always defaults to the direction in which the pipe is drawn. Each pipe in the Drawing pane shows an arrow to indicate the direction of fluid flow. If a pipe is inadvertently drawn in the wrong direction, you can reverse the direction of the pipe and fluid flow.

To reverse the fluid flow through a pipe:



1. Select and highlight a pipe by clicking on the drawing pane.
2. Right Click to display the Pipe Sub-menu options.
3. Select Reverse Pipe Direction.

The direction of a selected pipe can also be reversed by using the 'More' button on the pipe pane to display the Pipe Sub-menu options.

Shutting Off a Pipe in the System

The Shut Off feature can be used to represent actual pipes in the system where the flow is shut off. In Pipe Flow Expert, you can stop the flow of fluid through any pipe in the system by selecting the Open/Close pipe mode and clicking on a pipe in the Drawing pane to close the pipe. With the Shut Off feature, you can evaluate different configuration scenarios within the system when calculating the results.

To shut off a pipe in the pipe system:

1. Click the **Open/Close Pipe** button, , on the tool bar to select open/close pipe mode.
2. Click any pipe in the Drawing pane which you want to shut off, the pipe will be closed.
3. To re-open a pipe, click a closed pipe with the Open/Close cursor.
4. Click the **Show Item Info** button, , or right click to exit the Open/Close pipe direction mode.

A selected pipe can also be opened or closed by using the Pipe Sub-menu option.

A Closed pipe will be displayed 'grayed out' and 'dotted' on the drawing to indicate that the pipe is no longer part of the functioning system. **Note:** care must be taken with this feature, as a non-functional system may result from this action and Pipe Flow Expert may not be able to analyze the resulting network.

Using the Pipe Sub-menu while drawing

In Pipe Flow Expert, you can change some of the features of the selected pipe by using the Pipe Sub-menu.

Select a pipe and click the right mouse button to display the **Pipe Sub-menu**.

Select the option that you required and click to perform the action.

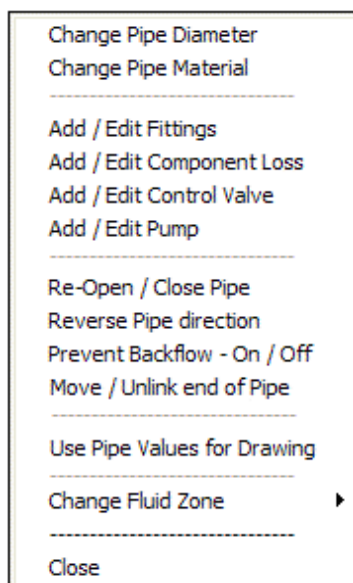



Figure 53 Pipe Sub-Menu

Feature	Description
Change Pipe Diameter	Opens the pipe diameter data dialog.
Change Pipe Material	Opens the pipe diameter data dialog for new material selection.
Add / Edit Fittings	Opens the pipe fittings friction coefficients dialog.
Add/ Edit Component Loss	Opens the component pressure loss dialog.
Add / Edit Control Valve	Opens the control valve data dialog.
Add / Edit Pump	Opens the pump data dialog.
Re-Open / Close Pipe	Open a closed pipe / Close a pipe.
Reverse Pipe Direction	Reverse the flow direction of a pipe.
Prevent Backflow – On / Off	Tag a pipe to prevent backflow.
Move / Unlink end of pipe	Unlink the end of the pipe and allow re-positioning
Use Pipe Valves for Drawing	Use the selected pipe data as the default pipe for drawing new pipes.
Change Fluid Zone	Change the fluid zone associated with the pipe.
Close	Close the pipe sub-menu.

Preventing Backflow in a pipe

A selected pipe can be tagged to prevent backflow when the system is solved. A pipe in which backflow is not permitted is identified with a double arrow marker, .

When solving a system if backflow occurs in the pipe the flow rate will be set to zero.

Use the pipe sub-menu option to toggle the status of pipes tagged with the prevent backflow symbol.

Using the Default Pipe feature while drawing


In Pipe Flow Expert, you can set the default pipe options for the next pipe to be added to the system by copying the features of the currently selected pipe.

To set the default pipe options:

1. Select a pipe and click the right mouse button to display the **Pipe Sub-menu**.
2. Click the **Use Pipe Values for Drawing** option.

Draw the next pipe in the system.
Change the pipe length if necessary.

To draw a pipe with different attributes, select another pipe that has the attributes that you require and then set that pipe's attributes as the default for pipe drawing.

Alternatively use the **Set Default Pipe for drawing** button, , on the tool bar to open the pipe default values on the **Configuration Options – Pipe Settings Tab**. Choose the pipe material, diameter and length to be used to draw default pipes.

Fittings and Valves


 
Fittings can be added at the ends of a pipe or anywhere along a pipe in the pipe system. After adding join points to the pipe system, you can define the specific fittings for the join points and pipes using the Pipe fitting friction coefficients dialog. The Pipe fitting friction coefficients dialog contains a list of the fittings available in the fitting database and additional properties specific to a fitting in the system. If a fitting added to a pipe causes a specific pressure loss, you should choose to add the pressure loss by adding a Component to the pipe and then specifying the pressure loss on the Set Component Pressure Loss dialog.

If you are adding a fitting near a pump, be sure to consider the orientation of the fitting (whether the fitting is in front of or after the pump). The orientation of the fitting affects the NPSHa (Net Positive Suction Head available) value at the pump inlet. If the fitting is placed after the pump, the NPSHa value at the pump inlet will be higher. If you need to move a fitting, you can move the fitting in the Drawing pane by clicking the Drag and Move Items button on the tool bar and selecting and moving the fitting to a new location in the system.

NOTE: Be sure to choose a fitting size that matches the size of the pipe or valve size that is equal or greater than the size of the pipe. For example, if you are using 4" nominal pipe size select either a 100 mm or a 4 inch fitting.

Adding a Fitting to a pipe

To add fittings to a pipe:

1. You can add a fitting using the **Add Fittings** button on the tool bar or the **Add/Change Fittings** button in the Pipe Pane.
2. To add a fitting using the **Add Fittings** tool bar button, click the **Add Fittings** button, .
3. When you click the **Add Fittings** button, the fittings symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane
4. Click on the pipe on the Drawing pane where you want to add a fitting.
5. Clicking on the pipe opens the **Pipe fitting friction coefficients** dialog with a list of all the fittings available in the fitting database displayed in the **Fitting Database** list.
6. To add a fitting using the **Add/Change Fittings** button in the Pipe pane, select the pipe to which you want to add a fitting in the Drawing pane.
7. The pipe's information is displayed in the Pipe pane.
8. Click the **Add/Change Fittings** button, .
9. The number of fittings currently on the selected pipe is displayed on the **Add/Change Fittings** button. Clicking the **Add/Change Fittings** button opens the **Pipe fitting friction coefficients** dialog with a list of all the fittings available in the fitting database displayed in the **Fitting Database** list.

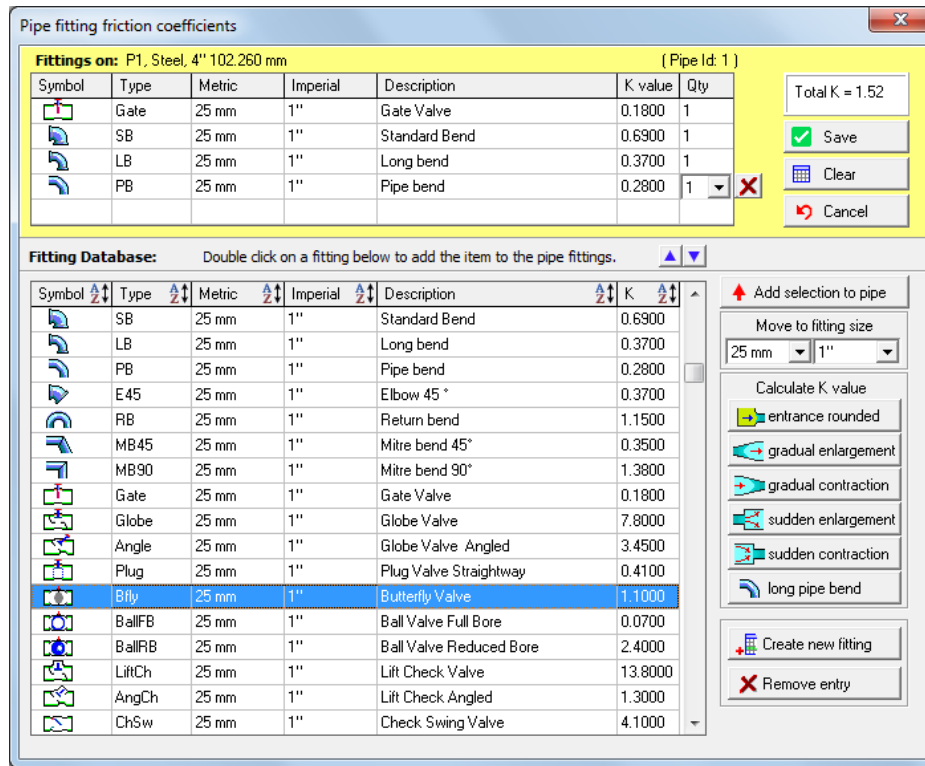


Figure 54 Pipe fitting friction coefficients dialog

10. Select the fitting you want to add to the pipe from the **Fitting Database** list.
11. Use the **Move to fitting size** fields to locate a specific metric or imperial fitting size in the **Fitting Database** list.
12. If the fitting is not in the **Fitting Database** list, click the **Create new fitting** button to add the new fitting to the list. For more information about adding a fitting to the database, see: *Adding a Fitting to the Database*
13. Click the **Add selection to pipe** button or double-click the row containing the fitting.
14. The selected fitting is displayed in the **Fittings on** section of the **Pipe fitting friction coefficients** dialog.
15. Select the quantity of the fitting you are adding to the pipe from the fitting's **Qty** list in the **Fittings on** section.
16. To add additional fittings to the pipe, repeat Steps 13 – 15.
17. Click **Save** to add the fitting to the pipe, and to close the **Pipe fitting friction coefficients** dialog.

When one or more fittings are added to a pipe, the **Include** check box is displayed and selected next to the **Add/Change Fittings** button, . When the **Include** check box is selected, Pipe Flow Expert includes the data from the fittings on the pipe in the calculations for solving the pipe system.

To remove the fittings' data from the calculations, clear the **Include** check box. Information about calculating and solving pipe systems is available in *Section: Calculating the System Flow and Pressure*.


Adding a Fitting to the Database

If the fitting you are adding on a pipe does not exist in the fitting database, you can quickly add the fitting to the database and/or pipe by clicking the Create new fitting button or by clicking one of the Calculate K value buttons in the Pipe fitting friction coefficients dialog.

 
Adding a fitting involves selecting a fitting from the fitting database or selecting one of the buttons that represent the fitting from the Calculated K value section, customizing the data to match the new fitting and calculating the fitting's K value.

A K value represents a local loss coefficient. This value is supplied by the fitting manufacturer. Most fittings have a fixed K value, but some fittings have a K value that needs to be calculated. The Calculated K value section in the Pipe fitting friction coefficients dialog is used to add fittings with a calculated K value to a pipe system and the fitting database. When you click a fitting button in the Calculated K value section, a dialog opens that contains fields for adding the fitting measurements required to calculate the fitting's K value.

To add a fitting to the fitting database using the Create new fitting button:

1. Click the **Show Item Info** button, , on the tool bar.
2. Select a fitting in the Drawing pane to open the **Pipe fitting friction coefficients** dialog.

OR

Select the pipe for which you want to create a new fitting in the Drawing pane, and click the **Add/Change Fittings** button, , in the Pipe pane to open the **Pipe fitting friction coefficients** dialog.

Then

1. Click the **Create new fitting** button.

Clicking the Create new fitting button opens the Create new fitting section in the Pipe fitting friction coefficients dialog.

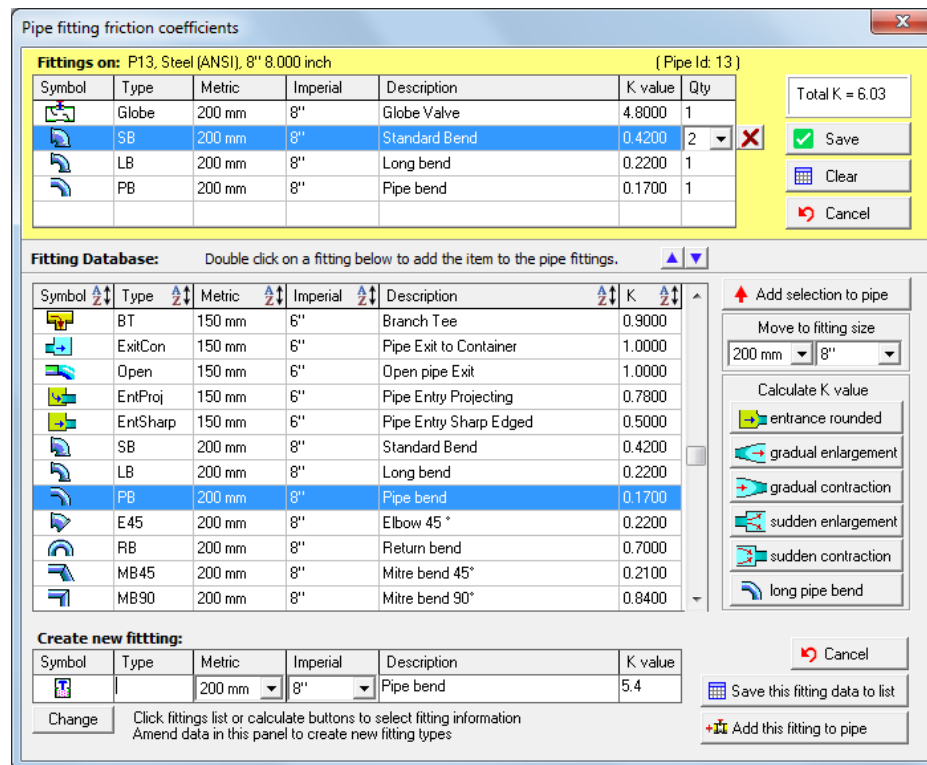


Figure 55 Adding a fitting in the Pipe fitting friction coefficients dialog

- To change the symbol representing the fitting, click the **Change** button to open the **Choose symbol** dialog.

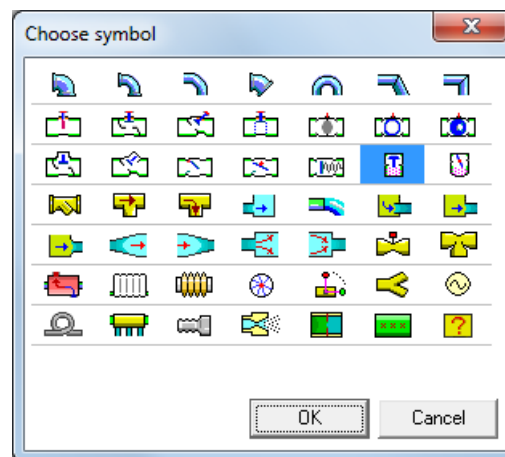



Figure 56 Choose symbol dialog

 
- Select the symbol you want to represent the fitting.
- Click **OK** to add the symbol to the **Symbol** field and close the **Choose symbol** dialog.
- Type the fitting type name in the **Type** field.
- Select the fitting's metric size from the **Metric** list or select the fitting's imperial size from the **Imperial** list.

7. You only have to enter the metric or imperial fitting size. Pipe Flow Expert automatically populates the other size for you. For example, if you select 32 mm from the **Metric** list, the imperial equivalent, 1-1/4", automatically appears in the **Imperial** field
8. Type a description of the fitting in the **Description** field.
9. Click the **Save this fitting data to list** button to add the fitting to the fitting database and **Fitting Database** list.
10. If you want to add the fitting to the pipe, as well as the fitting database, click the **Add this fitting to pipe** button to add the new fitting to the pipe.
11. The new fitting is displayed in the **Fittings on** section of the **Pipe fitting friction coefficients** dialog.
12. Select the quantity of the fitting you are adding to the pipe from the fitting's **Qty** list in the **Fittings on** section.
13. Click **Save** to add the fitting to the pipe, and to close the **Pipe fitting friction coefficients** dialog.

To add a fitting to the fitting database using a **Calculated K value** button:

1. Click the **Show Item Info** button, , on the tool bar.
2. Select a fitting in the Drawing pane to open the **Pipe fitting friction coefficients** dialog.

Or

3. Select the pipe for which you want to create a new fitting in the Drawing pane, and click the **Add/Change Fittings** button, , in the Pipe pane to open the **Pipe fitting friction coefficients** dialog.
4. Click the **Calculated K value** button that represents the fitting you are adding.

Clicking one of the **Calculated K value** buttons opens the **Create new fitting** section in the **Pipe fitting friction coefficients** dialog, and the **K value** dialog for the selected button.

For example, if you selected the **sudden contraction** button, the **Sudden contraction K value** dialog opens.

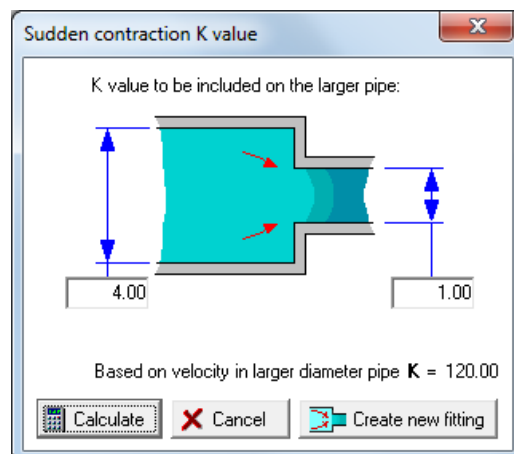


Figure 57 Sudden Contraction K value

5. Enter the applicable values in the **K value** dialog.
6. Click the **Calculate** button to calculate the fitting's K value.
7. The calculated K value is displayed in the **K value** dialog
8. When you have the desired K value, click the **Create new fitting** button to close the **K value** dialog, and add the calculated K value to the **K value** field in the **Create new fitting** section in the **Pipe fitting friction coefficients** dialog.
9. The **Symbol** field defaults to the symbol on the **Calculated K value** button you selected.
10. To change the symbol representing the fitting, click the **Change** button to open the **Choose symbol** dialog.
11. Select the symbol you want to represent the fitting.
12. Click **OK** to add the symbol to the **Symbol** field and close the **Choose symbol** dialog.
13. The **Type** field defaults to the type of fitting associated with the **Calculated K value** button you selected.
14. To edit the fitting type, type the fitting type name in the **Type** field.
15. The **Metric** and **Imperial** fields default to *N/A* for fittings with a calculated K value, because the applicable values are entered in the **K value** dialog.
16. Type a description of the fitting in the **Description** field.
17. Click the **Save this fitting data** to list button to add the fitting to the fitting database and **Fitting Database** list.

If you want to add the fitting to the pipe, instead of the fitting database:
Click the **Add this fitting to pipe** button to add the new fitting to the pipe.

The new fitting is displayed in the **Fittings on** section of the **Pipe fitting friction coefficients** dialog.

1. Select the quantity of the fitting you are adding to the pipe from the fitting's **Qty** list in the **Fittings on** section.
2. Click **Save** to add the fitting to the pipe, and to close the **Pipe fitting friction coefficients** dialog.

Components

Certain components, such as strainers, boilers, heat exchanges, manifolds etc. cause a pressure loss in a system. In Pipe Flow Expert you can enter two types of pressure loss for components – fixed pressure loss or pressure loss specified by a data curve. Pressure loss for components are entered and maintained on the Set Component Pressure Loss dialog.

The pressure loss defined for a component can be saved to a .pfco file. This file provides a way to share the pressure loss data for a component, and quickly enter the pressure loss data when the same type of component is used again in the pipe system or a future pipe system. The .pfco file also provides a quick and easy way to evaluate different components with pressure loss in the pipe system to determine how each one affects the system.

 
 
Currently in Pipe Flow Expert, you can only add one component pressure loss to each pipe. If there is more than one component on a pipe that causes a pressure loss, you can break up the applicable pipe into the number of pieces corresponding with the number of components causing a pressure loss.


For example, if you have a pipe that is 100 feet long with two components causing a pressure loss, you can break the pipe into two pieces, each 50 feet long, and add one of the component pressure losses to each piece. How you divide a pipe does not matter, only the total length of the pieces added together matters – so that if the pipe is supposed to be 100 feet long, then the lengths of the pieces need to add up to 100 feet.

NOTE: Be sure to enter the value for the pressure loss properties in the units displayed next to the field. For example, if you are using imperial units, and *psi.g* for pounds per square inch is displayed next to the Fixed Loss field, enter the value in pounds per square inch.

Adding a Component with a pressure loss

To add a component's pressure loss to a pipe:

1. You can add the pressure loss using the **Add Component Pressure Loss** button on the toolbar or the **Add/Change Component Pressure Loss** button in the Pipe Pane.
2. To add a pressure loss using the **Add Component Pressure Loss** tool bar button, click the **Add Component Pressure Loss** button, .
3. When you click the **Add Component Pressure Loss** button, the pressure loss symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
4. Click on the pipe on the Drawing pane where you want to add a component pressure loss.
5. Clicking on the pipe opens the **Set Component Pressure Loss** dialog.
6. To add a pressure loss using the **Add/Change Component Pressure Loss** button in the Pipe pane, select the pipe to which you want to add a pressure loss in the Drawing pane.
7. The pipe's information is displayed in the Pipe pane.
8. Click the Add/Change Component Pressure Loss button, .
9. The number of component pressure losses currently on the selected pipe is displayed on the **Add/Change Component Pressure Loss** button. Clicking the **Add/Change Component Pressure Loss** button opens the **Set Component Pressure Loss** dialog.
10. To add a component's pressure loss data from an existing .pfco file, click the **Load From File** button, select the applicable .pfco file, click **Open**, edit the applicable fields, and then click the **OK** button.

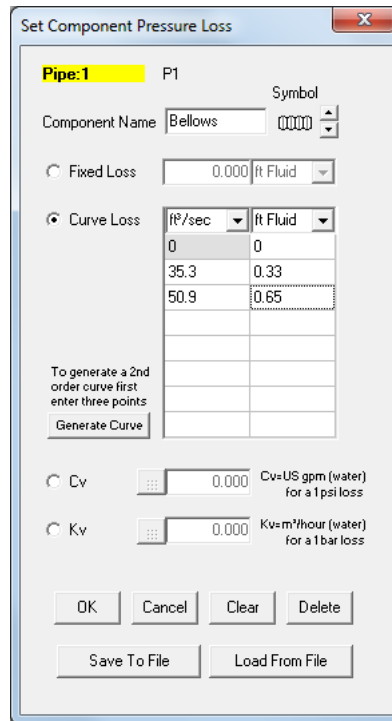

The dialog box is titled "Set Component Pressure Loss". It contains the following fields and controls:


- Pipe:** 1
- Component Name:** Bellows
- Symbol:** [Icon]
- Fixed Loss:** 0.000 ft Fluid
- Curve Loss:**
 - Units: ft³/sec (left), ft Fluid (right)
 - Table:

ft ³ /sec	ft Fluid
0	0
35.3	0.33
50.9	0.65
- To generate a 2nd order curve first enter three points**
- Generate Curve** button
- Cv:** 0.000 (Cv=US gpm (water) for a 1 psi loss)
- Kv:** 0.000 (Kv=m³/hour (water) for a 1 bar loss)
- Buttons:** OK, Cancel, Clear, Delete, Save To File, Load From File

Figure 58 Set Component Pressure Loss dialog

11. Type the name of the component pressure loss in the **Component Name** field.
12. Select the **Fixed Loss** option, if the component's pressure loss is a fixed pressure loss, and type the fixed pressure loss value.
13. Select the **Curve Loss** option, if the component's pressure loss is based on a data curve.
14. Select **Cv** or **Kv** if the component flow versus pressure loss can be defined in this manner, and type the appropriate value. **See the next section about Cv and Kv values** for specific information about entering and using this type of data.
15. Click the **Pressure Loss Scroll Up** or **Scroll Down** button to select the component pressure loss image you want displayed on the pipe system drawing.
16. The image you select does not affect any of the component's pressure loss properties or values.
17. Select the applicable units for the component pressure loss curve from the **Curve Loss** flow and head lists.
18. The left **Curve Loss** column represents the fluid's flow values, and the right **Curve Loss** column represents the fluid head or pressure loss values.
19. Determine which points in the component's pressure loss data curve, provided by the component manufacturer, that you want to include in the component's pressure loss curve, and type the flow and head values for each of these points in the **Curve Loss** table.
20. Add a minimum of three and maximum of eight points in the **Curve Loss** table. After adding three curve points to the table, you can have Pipe Flow Expert calculate the remaining points by clicking the **Generate Curve** button.
21. Click **OK** to save and add the component pressure loss data to the pipe.

The pressure loss data you enter can be saved to a .pfco file by clicking the **Save To File** button. By saving the data to a .pfco file, you can reuse the component's pressure loss data for other pipes in the pipe system or future pipe systems.

When a component pressure loss is added to a pipe, the **Include** check box is displayed and selected next to the **Add/Change Component Pressure Loss** button, . When the **Include** check box is selected, Pipe Flow Expert includes the data from the component pressure loss on the pipe in the calculations for solving the pipe system. To remove the component pressure loss data from the calculations, clear the **Include** check box.

Information about calculating and solving pipe systems is available in *Section: Calculating the System Flow and Pressure*.

Cv and Kv Flow Coefficients

There are many different types of components and control valves on the market. Each may have different flow / pressure loss characteristics. Manufacturers of control valves usually publish a Cv flow coefficient or a Kv flow coefficient to describe the flow / pressure loss characteristics of their control valves in a standardized manner.

A Cv flow coefficient specifies the volume of water in US gpm at 60°F (15.55°C) that will flow through a valve with a 1.0 psi pressure drop across the valve.

Thus a Cv flow coefficient of 10 indicates that a 1.0 psi pressure drop will occur with a flow of 10 US gpm of water through the valve. Pressure drop for the different fluids and different flow rates can be calculated from the Cv flow coefficient. See 'Calculation Theory and Methods of Solution' section for further details.

A Kv flow coefficient specifies the volume of water in m³/hour at 20°C (68 °F) that will flow through a valve with a 1.0 bar pressure drop across the valve.

Thus a Kv flow coefficient of 10 indicates that a 1.0 bar pressure drop will occur with a flow of 10m³/hour of water through the valve. Pressure drop for the different fluids and different flow rates can be calculated from the Kv flow coefficient. See 'Calculation Theory and Methods of Solution' section for further details.

The component object is used to model the flow rate / pressure loss of control valves with Cv or Kv flow coefficients.

Adding a component/valve with a Cv or Kv value

To add a component/valve with a Cv or Kv flow coefficient:

1. Add a component to a pipe as described in the previous section.
2. Type the name of the control valve in the **Component Name** field.
3. Select a Cv, Kv, or Valve symbol to represent the component on the schematic drawing.
4. Select the Cv radio button and enter the Cv flow coefficient value **Or** Select the Kv radio button and enter the Kv flow coefficient value.
5. Click **OK** to save and add the Cv/Kv flow coefficient data to the pipe.

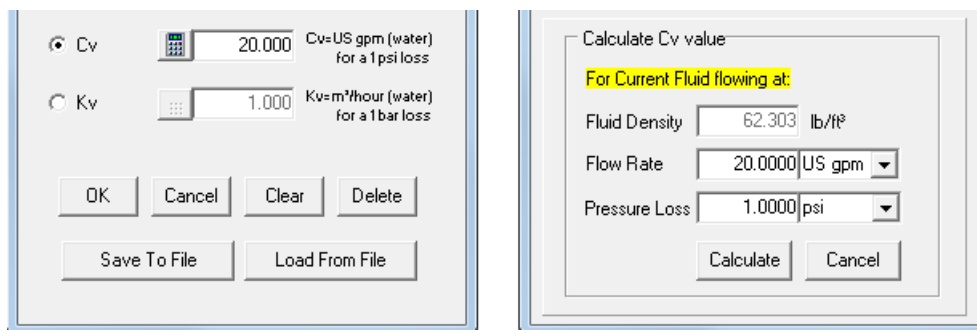


Figure 59 Adding a Cv / Kv flow coefficient value

The component dialog includes 'helpers' to assist in calculating an appropriate Cv or Kv flow coefficient value for a particular flow rate and pressure drop (based on the current fluid). Click the calculator button to display the calculator.

The user should be aware that the Cv or Kv flow coefficient specifies the flow rate of water for a particular pressure loss.

When the fluid density is greater or less than water, a different flow rate of the fluid will be required to produce a 1.00 psi or a 1 bar pressure loss through the valve.

CAUTIONS:

If the fluid is a gas, the flow rate entered into the calculator must represent the actual flow rate for the compressed gas condition, i.e. the volumetric flow rate of the gas based on the gas density defined in the current fluid. Generally it would be better to use a mass flow rate entry for the calculation instead of a volumetric flow rate.

If the fluid is a gas and the pressure drop exceeds 50% of the inlet pressure to the valve, **the flow will become choked and it will not be possible to achieve the calculated flow rate.** If this occurs, Pipe Flow Expert will warn of a problem in the Result Log.

Pipe Flow Expert does not model changes in the gas characteristics due to changes in pressure or temperature. It uses the density and viscosity of the gas as defined in the current fluid. See section on *Working With Compressible Fluids* for more information.

Important Note:

To correctly model the pressure drop for the entered Cv or Kv value the density of the gas used in the calculation **must be the density of the gas at the outlet of the valve/component.**

In effect this means that the fluid data for the fluid zone associated with the pipe where the component with a Cv or Kv value is, must be defined for the approximate pressure condition at the outlet of the valve/component, i.e. specify the current fluid data so that the density represents the approximate density of the gas at the outlet of the component after the additional pressure drop.

Pipe Flow Expert will calculate the pressure drop through the component/valve for a particular flow at a given density (as defined by the current fluid zone) based on its Cv or Kv flow coefficient value.

If the fluid zone associated with the control valve does not represent the pressure condition at the outlet of the valve/component, it may be necessary to use an adjusted Cv (or Kv) value for valve selection to take in to account the effect of the gas expansion.

The adjusted Cv (or Kv) value should be based on the Cv or Kv formula for sub critical gas pressure drop.

See 'Calculation Theory and Methods of Solution' section for further details about Cv and Kv flow coefficient calculations for systems where the fluid is a gas.

The Cv (or Kv) flow coefficient of a component/valve is usually stated for the fully open flow condition. The Cv (or Kv) flow coefficient will be less when the valve is partly closed. In an actual system it is important to select a control valve which has an appropriate Cv or Kv flow coefficient for the actual valve position that will be used.

A control valve that is too small or too large will not be able to provide the correct control characteristics in a pipe system.

Most control valve manufactures recommend that you should select a valve where the required Cv (or Kv) value matches the given valve Cv (or Kv) value when operating within 20% - 80% of the valve's range.

When selecting a valve to control a 'top end' pressure loss you should select a valve where the required Cv (or Kv) value is in the higher operating range of the valve, normally where the required Cv (or Kv) value matches the given valve Cv (or Kv) value when operating at about 70% of the valve's range.

Some control valve manufactures recommend that an allowance of 30% should be added to the required Cv (or Kv) flow coefficient to obtain the minimum Cv (or Kv) flow coefficient rating that the selected valve should have.

Please check your control valve selection with the control valve manufacturer.

Control Valves (FCV, PRV, BPV)


Control valves may be used to control flow or pressure at various points in a system.


- A flow control valve (FCV) determines the required flow rate for the fluid in a pipe.
- A pressure reducing valve (PRV) controls the pressure at the end of a pipe.
- A back pressure valve (BPV) controls the pressure at the start of a pipe.

The modeling of Flow Control Valves, Pressure Reducing Valves and Back Pressure Valves requires that the flow rates and pressures from adjacent pipes must be used as a reference to establish the pressure loss that control valve must introduce.

To allow this modeling a control valve cannot be added to any pipe where a joining pipe already includes a control valve.

To add a control valve to a pipe:

1. You can add a flow control using the **Add Control Valve** button on the tool bar or the **Add/Change Control Valve** button in the Pipe Pane.
2. To add a control valve using the **Add Control Valve** tool bar button, click the **Add Control Valve** button, .
3. When you click the **Add Control Valve** button, the control valve symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
4. Click on the pipe on the Drawing pane where you want to add a control valve.

5. Clicking on the pipe opens the **Set Control Data** dialog.
6. To add a flow control using the **Add/Change Control Valve** button in the Pipe pane, select the pipe to which you want to add a control valve in the Drawing pane.
7. The pipe's information is displayed in the Pipe pane.
8. Click the Add/Change Control Valve button, .
9. If there is a control valve currently on the selected pipe a number 1 is displayed on the **Add/Change Control Valve** button. Clicking the **Add/Change Control Valve** button opens the **Set Control Data** dialog.

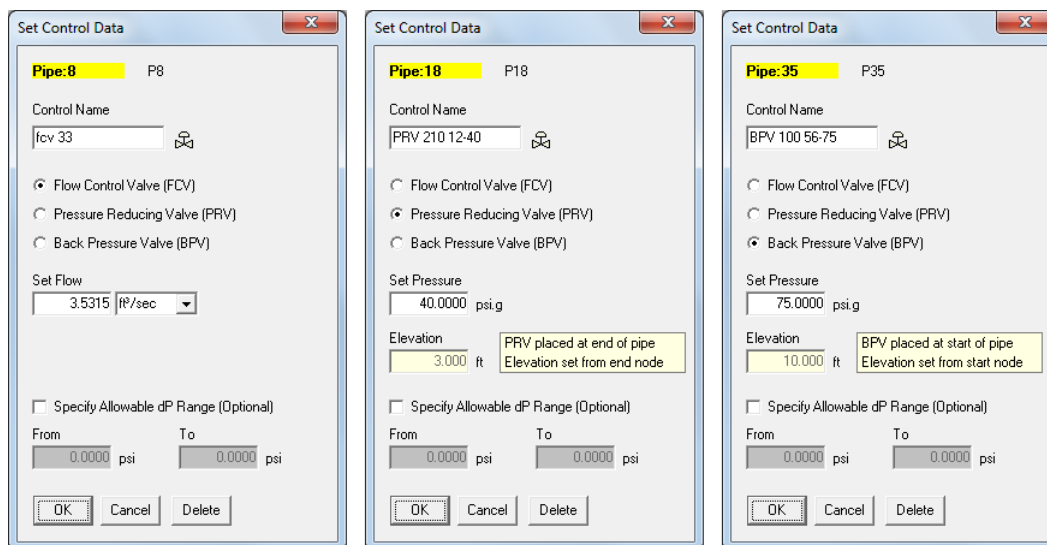
 


Figure 60 Set Control Valve Data dialog

10. Select the type of control valve to be added (FCV, PRV or BPV) by clicking one of the radio buttons.
11. The dialog will change to allow the entry of data for the type of valve selected.
12. Enter the appropriate data for the control valve type.
13. If you wish to enter an allowable differential pressure range for the valve operation click the check box and enter the 'From' and 'To' pressure values. When the system is solved a warning will be issued if the differential pressure across the control valve is outside the entered range.
14. Click **OK** to add the control valve to the pipe.

When a control valve of any type is added to a pipe, the **Include** check box is displayed and selected next to the **Add/Change Flow Control** button, .

When the **Include** check box is selected, Pipe Flow Expert includes the data from the flow controls on the pipe in the calculations for solving the pipe system. To remove the flow control data from the calculations, clear the **Include** check box.

Information about calculating and solving pipe systems is available in *Section: Calculating the System Flow and Pressure*.

Adding a Flow Control Valve

A flow control valve determines the required flow rate for the fluid in a pipe.

1. Open the **Set Control Data** dialog as described in the previous section.
2. Click the flow control valve (FCV) radio button.
3. Type the name of the flow control valve in the **Control Name** field.
4. Select the appropriate units of flow from the drop down list.
5. Type the required flow rate for the fluid in the pipe in the **Set Flow** field.
6. Enter the allowable differential pressure range for the valve operation if appropriate.
7. Click **OK** to add the flow control valve to the pipe.

NOTE: The flow control valve (FCV) introduces an additional pressure loss in the pipe to control the flow to the value specified by the user. The additional pressure loss is reported in the results tables.

Using the flow rate and the additional pressure loss the user can calculate the Cv or Kv value for a suitable valve which will allow the flow to be controlled at the required flow rate.

The flow control valve (FCV) cannot introduce a negative pressure loss. If this situation is encountered when a system is analyzed it will not be possible to identify a valid solution. The flow control valve setting will have to be amended or the flow control valve may have to be removed to allow a solution to be calculated.

Adding a Pressure Reducing Valve

A pressure reducing valve controls and regulates the pressure downstream of the valve.

1. Open the **Set Control Data** dialog as described in the previous section.
2. Click the pressure reducing valve (PRV) radio button.
3. Type the name of the pressure reducing valve in the **Control Name** field.
4. Type the required reduced pressure in the **Set Pressure** field.
5. Enter the allowable differential pressure range for the valve operation if appropriate.
6. Click **OK** to add the pressure reducing valve to the pipe.

NOTE: The pressure reducing valve (PRV) introduces an additional pressure loss in the pipe to control the downstream pressure at the end of the pipe to the value specified by the user. The additional pressure loss across the control valve is reported in the results tables.

A PRV can operate under three different conditions: (1) regulating, (2) fully closed, and (3) fully open. How the valve operates depends on the defined set pressure value for the valve. The fully open and fully closed positions represent the extreme operations of the valve. Each of the valve positions is described below:

- (1) Regulating** The valve maintains the downstream pressure to the set value by introducing a pressure loss across the valve, thus throttling the flow rate through the PRV.
- (2) Fully Closed** This mode of operation occurs if the valve's set pressure is less than the pressure downstream of the valve for the case where the valve is closed. When this occurs in an actual pipe system, the flow through the PRV reverses and the PRV acts as a check valve, closing the pipe. In PipeFlow Expert, this method of operation is detected and reported but the system is not then solved for this

scenario. The user must decide if this method of operation is what they intended and if so then they can close the pipe and continue to solve the system.

- (3) Fully Open** This mode of operation occurs if the valve's set pressure is greater than the pressure upstream of the valve for the case where the valve is fully open. When this occurs in an actual pipe system, the PRV maintains a fully open position and it has no effect on the flow conditions (except to add a frictional loss through the valve). In PipeFlow Expert, this method of operation is detected and reported. But the system is not solved because the differential pressure across the valve would have to be negative, i.e. the valve would be acting like a pump rather than a pressure control.

Pipe Flow Expert will only solve a system when the PRV is operating in Regulating mode.

AVOIDING PRV OPERATION PROBLEMS: In general, PRV operation problems can be avoided by finding the valve's pressure regulating range and specifying the valve's set pressure to a value within this range such that the mode of operation is 'Regulating'. First, solve the system without the PRV control and note the pressure at the node downstream of the pipe which previously contained the PRV. This is the maximum pressure the PRV can be set to (i.e. it is equivalent to finding the valve's inlet pressure for the case where the valve is fully open). Secondly, solve the system after closing the pipe that contains the PRV and note the pressure at the node downstream of the closed pipe. This is the minimum pressure the PRV can be set to (i.e. it is equivalent to finding the pressure downstream of the valve for the case where the valve is fully closed).

Adding a Back Pressure Valve

A back pressure valve controls and regulates the pressure upstream of the valve.

1. Open the **Set Control Data** dialog as described in the previous section.
2. Click the back pressure valve (BPV) radio button.
3. Type the name of the back pressure valve in the **Control Name** field.
4. Type the required back pressure in the **Set Pressure** field.
5. Enter the allowable differential pressure range for the valve operation if appropriate.
6. Click **OK** to add the pressure reducing valve to the pipe.

NOTE: The back pressure valve (BPV) introduces an additional pressure loss in the pipe to control the upstream pressure at the start of the pipe to the value specified by the user. The additional pressure loss across the control valve is reported in the results tables.

A BPV can operate under three different conditions: (1) regulating, (2) fully closed, and (3) fully open. How the valve operates depends on the defined set pressure value for the valve. The fully open and fully closed positions represent the extreme operations of the valve. Each of the valve positions is described below:

- (1) Regulating** The valve maintains the upstream pressure to the set value by introducing a pressure loss across the valve, thus reducing the flow rate through the BPV.
- (2) Fully Closed** This mode of operation occurs if the valve's set pressure is greater than the pressure upstream of the valve for the case where the valve is closed. When this occurs in an actual pipe system, the flow through the BPV reverses and the BPV acts as a check valve, closing the pipe. In PipeFlow Expert, this method of operation is detected and reported but the system is not then solved for this

scenario. The user must decide if this method of operation is what they intended and if so then they can close the pipe and continue to solve the system.

- (3) Fully Open** This mode of operation occurs if the valve's set pressure is less than the pressure downstream of the valve for the case where the valve is fully open. When this occurs in an actual pipe system, the BPV maintains a fully open position and it has no effect on the flow conditions (except to add a frictional loss through the valve). In PipeFlow Expert, this method of operation is detected and reported but the system is not solved because the differential pressure across the valve would have to be negative, i.e. the valve would be acting like a pump rather than a pressure control.

Pipe Flow Expert will only solve a system when the BPV is operating in Regulating mode.

AVOIDING BPV OPERATION PROBLEMS: In general, BPV operation problems can be avoided by finding the valve's pressure regulating range and specifying the valve's set pressure to a value within this range such that the mode of operation is 'Regulating'. First, solve the system without the BPV control and note the pressure at the node upstream of the pipe which previously contained the BPV. This is the minimum pressure the BPV can be set to (i.e. it is equivalent to finding the pressure at the valve outlet for the case where the valve is fully open). Secondly, solve the system after closing the pipe that contains the BPV and note the pressure at the node upstream of the closed pipe. This is the maximum pressure the BPV can be set to (i.e. it is equivalent to finding the pressure at the valve inlet for the case where the valve is fully closed).

Pumps

A pump can be added to any pipe, except a pipe that contains a flow control component.

Options are provided to choose how the pump should be modeled:

- A Fixed Flow Rate Pump
- A Fixed Head / Pressure Rise Pump
- A Fixed Speed Pump (with a flow versus head performance curve)


A pump's properties, including its pump curve, are defined and graphed in the Pump Data dialog. The Pump Curve Graph section of the Pump Data dialog provides an interactive graph that allows you to determine which elements of the graph are displayed, and to map and calculate pump values for different points in the graph, including the pump's NPSHr (Net Positive Suction Head requirement) and efficiency percentage.

You can also save the data associated with a Pump to a .pfpm file. This file provides a way to share the pump data, and quickly load the pump data when the same type of pump is used again in the pipe system or a future pipe system. Saving and loading pump data also provides a quick and easy way to evaluate different pumps at a specific point in the pipe system to determine how each one affects the system.

NOTE: Be sure to enter the value for the pump's properties in the units displayed next to the field. For example, if you are using metric units, and *m* for meter is displayed next to a field, enter the pump value in meters.

Adding a Pump

To add a pump to a pipe:

1. You can add a pump using the **Add Pump** button on the tool bar or the **Add/Change Pump** button in the Pipe Pane.
2. To add a fitting using the **Add Pump** tool bar button, click the **Add Pump** button, .
3. When you click the **Add Pump** button, the pump symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
4. Click on the pipe on the Drawing pane where you want to add a pump.
5. You can only add a pump to a pipe in the system. Clicking on the pipe opens a **Confirm** dialog.

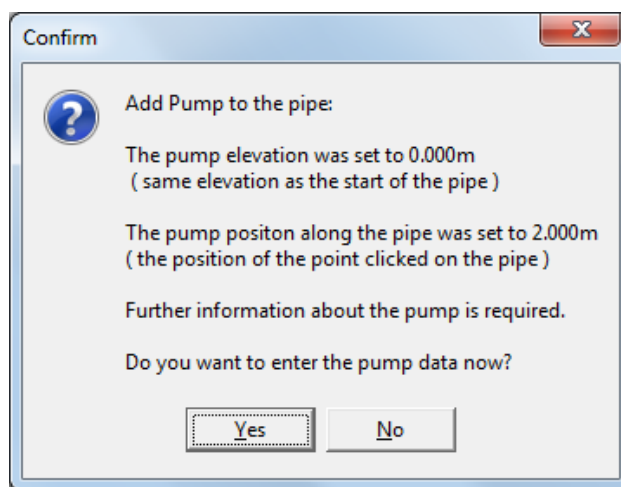



Figure 61 Add Pump Confirm dialog

6. Click **Yes** when asked, Do you want to enter the pump data now?
7. Clicking **Yes** adds the pump to the system, and opens the **Pump Data** dialog. Choose the Pump Type to be modeled. If the Fixed Speed pump option is selected then use the **Pump Data** dialog to define the pump's properties and pump curve.
8. To add a pump using the **Add/Change Pump** button in the Pipe pane, select the pipe to which you want to add a pump in the Drawing pane.
9. The pipe's information is displayed in the Pipe pane.
10. Click the **Add/Change Pump** button, .
11. The number of pumps currently on the selected pipe is displayed on the **Add/Change Pump** button. Clicking the **Add/Change Pump** button opens the **Pump Data** dialog. Use the **Pump Data** dialog to define the pump's properties and pump curve.

Pump Data

Pump Information
Details of pump on pipe 3, P3

Name: Pump st.01a Along Pipe: 5.000 ft at Elevation: 150.000 ft Symbol:

Pump Type

☐ Fixed Flow Rate Set to: 270.00 l/min

☐ Fixed Head Increase: 0.000 m Fluid

☒ Fixed Speed, Running at: 1700 rpm

Flow	Head	Efficiency	NPSHr
US gpm	ft Fluid	%	ft. hd Fluid
0	150.000	0	0.670
50.00	146.000	66	0.670
100.00	138.500	70	1.900
150.00	125.000	75	6.000
200.00	100.000	72	14.800
250.00	60.000	65	28.000

Notes:

Pump Curve based on fixed speed pump characteristics

☒ Head ☒ NPSHr ☒ Efficiency

☒ Pref. Region ☒ Grid Lines

Preferred Operating Region: Operating region between 112.50 and 187.50 US gpm

Preferred Operating Region: From 75 % To 125 % of Flow at Best Effy Point

Show Point For:

Flow US gpm	Head ft. hd Fluid	NPSHr	Effic. %	Power HP
132.66	130.98	4.58	73.3	5.998

Calculate


Note: The pump curve may be specified in one of a number of different units. Where a height of water is used to specify the head it is assumed that the density of the water is 1000kg/m³. Some water entries in the fluid database have a density of 998kg/m³.

Buttons: SaveTo Pipe, Clear Curve, Delete Pump, Exit/No Save, Save To File, Load File, Print Page, Draw Graph

Figure 62 Pump Data dialog

12. Type the pump's name in the **Name** field.
13. To add a pump's data using an existing .pfpm file, click the **Load File** button, select the applicable .pfpm file, click **Open**, edit the applicable fields, and then click the **Save** button.
14. Type the pump's number of rotations per minute (rpm) in the **Speed** field.
15. The **Distance Along Pipe** and **at Elevation** fields are automatically populated. The value in the **Distance Along Pipe** field is determined by where you added the pump along the pipe (the distance from start of the pipe). The value in the **at Elevation** field is the pipe's elevation at the start of the pipe.
16. Click the **Pump Scroll Up** or **Scroll Down** button to select the pump image you want displayed on the pipe system drawing.
17. The image you select does not affect any of the pump's properties or values.
18. Type the beginning percentage in the **From** field and the ending percentage in the **To** field for the pump's best efficiency point percentage range.
19. Select the applicable units for the pump curve from the **Flow** and **Head** lists.
20. Determine which points in the graph, provided by the pump manufacturer, that you want to include on the Pump Curve graph, and enter the head, efficiency and NPSHr values for each of these points in the **Pump Curve** section of the **Pump Data** dialog.
21. Add a minimum of four and maximum of 10 points to the **Pump Curve** section.
22. Click the **Save** button to save the pump curve data.

The pump data you enter can be saved to a .pfpm file by clicking the **Save to File** button. By saving the data to a .pfpm file, you can reuse the pump data for other pumps in the pipe system or future pipe systems.

When a pump is added to a pipe, the **Include** check box is displayed and selected next to the **Add/Change Pump** button, . When the **Include** check box is selected, Pipe Flow Expert includes the data from the pumps on the pipe in the calculations for solving the pipe system. To remove the pump data from the calculations, clear the **Include** check box.

Information about calculating and solving pipe systems is available in *Section: Calculating the System Flow and Pressure*.

Working with the Pump Curve Graph

Once a pipe's data is added, you can view an interactive graphical representation of the data using the Pump Curve Graph section of the Pump Data dialog.

To create and view the Pump Curve Graph:

1. With the **Pump Data** dialog still open, click the **Draw Graph** button to generate and display the Pump Curve graph in the dialog.
2. Select the check boxes for the elements you want displayed on the graph in the **Graph Options** section.
3. Clear the check boxes for the elements that you do not want displayed on the graph.
4. When you select a check box, the element appears on the graph. When you clear a check box, the element is removed from the graph.
5. To view the pump's NPSHr, efficiency percentage or power horsepower for a specific flow rate, type the flow rate in the **Flow** field in the **Show Point For** section.
6. To view the pump's NPSHr efficiency percentage or power horsepower for a specific pump head value, type the head value in the **Head** field in the **Show Point For** section.
7. Click the **Calculate** button.
8. The calculated NPSHr, efficiency percentage, and power horsepower for the entered flow rate or head value are displayed in the **Show Point For** section, and the point is mapped on the Pump Curve graph. The point is represented by a green dot on the graph.
9. Type any notes relevant to the pump and/or Pump Curve graph in the **Notes** field.
10. To print a snapshot of the data and graph displayed in the **Pump Data** dialog, click the **Print** button.

Adding a Fixed Flow Rate Pump

If the performance curve for a pump is not available, the analysis of the pipeline system can be carried out using a fixed value for the pump flow rate.

See the note about limitations of a fixed flow rate pump option.

To model a fixed flow rate pump condition:

1. Add a pump to a pipe.
2. Select the Fixed Flow Rate Set to.... option.

3. Enter the flow rate required and the flow rate units.
4. Click the **Save** button to save the pump flow rate data to the pipe.

The screenshot shows the 'Pump Data' dialog box. The 'Pump Information' section shows 'Details of pump on pipe 4, P4' with 'Name' as 'Pump', 'Along Pipe' as '0.500 m', 'at Elevation' as '5.000 m', and a 'Symbol' button. The 'Pump Type' section has three radio buttons: 'Fixed Flow Rate Set to' (selected), 'Fixed Head Increase', and 'Fixed Speed, Running at'. The 'Fixed Flow Rate Set to' is set to '250.00 l/min'. Below this is a table with columns: Flow, Head, Efficiency, and NPSHr. The 'Flow' column has a dropdown set to 'm³/sec', 'Head' to 'mm.H₂O', 'Efficiency' to '%', and 'NPSHr' to 'm.hd Fluid'. The 'Notes' section is empty. The 'Pump Curve based on fixed speed pump characteristics' section has checkboxes for 'Head', 'NPSHr', 'Efficiency', 'Pref. Region', and 'Grid Lines', all of which are checked. At the bottom, there is a text box that says 'To enter a pump curve:'.

Figure 63 Fixed Flow Rate Pump

The system can now be solved, using the fixed flow rate from the pump.

Note about fixed flow rate pumps

Since the flow rate of the pump is fixed, the addition of multiple fixed flow rate pumps may produce a system where the in flow and out flow of a particular node are not the same and this would result in an invalid system where a flow balance could never be achieved.

The fixed flow rate pump cannot adjust to give a flow / pressure balance within the system so some other part of the system must be allowed to vary. If flow control valves are used, at least one flow path must have no control device fitted. If all flow paths are controlled, it will not be possible to solve the system, and in this case the system is termed over-controlled.

If the flow rate along all paths are to be determined, at least one path must have no flow control valves fitted. The flow rate along this path will be set to the difference between the total flow in all other paths and the flow rate produced by the fixed flow rate pump.

Flow control valves need to have a positive pressure at their inlet sufficient to meet the ongoing system pressure loss and the pressure head that the flow control valve needs to introduce to achieve a balance within the pipe system. If this positive pressure cannot be achieved, it will not be possible to solve the system.

Adding a Fixed Head / Pressure Rise Pump

If the performance curve for a pump is not available, the analysis of the pipeline system can be carried out using a fixed value for the pump head / pressure rise to be added by the pump.

To model a fixed head / pressure rise pump condition:

1. Add a pump to a pipe.
2. Select the Fixed Head / Pressure Rise.... option.
3. Enter the head / pressure to be added and select the head / pressure units.
4. Click the **Save** button to save the pump head / pressure data to the pipe.

Figure 64 Fixed Head / Pressure Pump

The system can now be solved, using the fixed head / pressure added by the pump.

Example Pumps (with Flow versus Head curve)

When working with a variable speed pump the flow and head produced by the pump will differ as its operating speed is changed. The pump curve (flow versus head) for a specific operating speed can be modeled within Pipe Flow Expert as a single pump. In order to model all of the operating speeds of a particular pump the user is required to input the data for the pump curve related to each specific pump speed and this can then be saved as a separate set of pump data.

Therefore in order to completely model a variable speed pump, the user will define a number of distinct pumps, each one representing the variable speed pump running at a specific speed.

The user can then analyze their system with a pump running a particular speed by loading the chosen pump data and then calculating and solving the system. If the solution is not as required a new set of pump data can be loaded and the system can be re-solved.

Similarly, a user may wish to analyze a system and see the operating results when different fixed speed pumps are used at various points in the pipe network. This can be modeled in the same manner by defining the pump operating curve for each fixed speed pump and then saving and loading the chosen pump data as required before calculating and solving the system.

A set of sample pump files are included under the folder 'ExamplePumps' which exists in the folder where the program is installed. These pumps can be loaded and used to experiment with the results that are produced by using different pump operating data. This data is provided solely as example data and is not related to any specific pump manufacturer.

The sample file PFE_1000-175.pfpm has a best operating point of 1000 US gpm at a fluid head of 175 ft. The other sample pump files are named in a similar manner to outline the pump performance at the best operating point.

Most pump manufacturers supply graphs that detail the operating performance of their pumps and these can easily be read off at various intervals so that the data can then be entered and stored as a pump within Pipe Flow Expert.

Note: When including a pump in a pipe network it may be such that the operating parameters of the pump are outside of the required operating parameters that will produce a solution to the system.

For example, the pipe network may need to overcome a particular resistance due to friction, fittings or elevation change, however the chosen pump may not be able to meet the pressure/head demands to do this. When this occurs the system cannot be solved and this will be reported by the program.

Another situation that may result in an unsolvable system includes a network where the out flow demands cannot be met by the current pump, i.e. the pump cannot produce enough flow for the current network design. Again the program will inform the user where this is the case, and it is in these scenarios that it may be useful to load different sample pump data to determine the impact of using a pump with different operating parameters.

Demand Flows

A demand in-flow or demand out-flow can be set at any join point in the system, or at the end of a single pipe if flow is entering or leaving the system at that point. A demand can also be the pressure required at an end node, however a node cannot have both a demand flow and a demand pressure.

A demand **in-flow** is the volume of fluid required to enter the system at a join point.

A demand **out-flow** is the volume of fluid required to leave the system at a join point.


Demand flows may also be used to specify the required flow rate at the end of a pipe where fluid is flowing out of the system, or to specify the flow rate at the end of a pipe where fluid is entering the system. A pipe can have a demand flow or a demand pressure at the end of a pipe but it cannot have both.

Demand flows can be added to a join point from the Node pane or the Drawing pane. Demand flow values are set on the Set Flow Demands dialog. The demand flows are then shown at the appropriate node on the Drawing pane.

NOTE: Be sure to enter the value for the required fluid flow rate in the units displayed next to the field. For example, if you are using imperial units, and ft^3/sec for cubic feet per second is displayed next to the In Flow and Out Flow fields, enter the value in cubic feet per second.

Adding a Demand Flow at a join point

To add a demand flow to a join point in the pipe system:

1. Click the **Add Demand (Flow)** button, , on the tool bar.
2. When you click the **Add Demand (Flow)** button, the demand flow symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click on the join point on the Drawing pane where you want to add a demand flow.
4. The **Set Flow Demands** dialog opens.
5. To add a demand flow from the Node pane, select a join point in the Drawing pane to display the join point's properties in the Node pane, and click one of the **Edit** buttons in the Node pane to open the **Set Flow Demands** dialog. Both **Edit** buttons in the Node pane open the **Set Flow Demands** dialog.

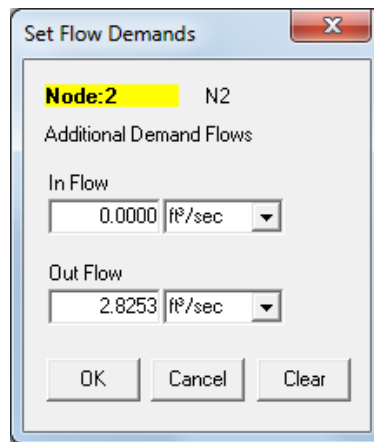


Figure 65 Set Flow Demands dialog

6. Select the flow units from the drop down list of available units
7. Type the required flow rate for the fluid **ENTERING** the system at the join point in the **In Flow** field, if applicable.
8. Type the required flow rate for the fluid **LEAVING** the system from the join point in the **Out Flow** field, if applicable.
9. If you select a different flow unit, the value entry will be converted automatically to the equivalent value for the current selected flow unit.
10. Click **OK** to add the join point's demand flow.

Demand Pressures


A demand pressure can only be set at exit points from the system, i.e. the boundaries or end nodes.

A demand pressure, referred to as an end pressure in the Node pane, is the required pressure demand at the end of a pipe when the fluid is discharged. For example, in a fire sprinkler system, each sprinkler head has a required pressure. To show the fluid exiting the pipe system, a demand pressure is drawn and the required pressure set for each sprinkler head. Demand pressures can only be set at the end of a pipe that does not join into anything else.

A pipe can have a demand flow or a demand pressure at the end of a pipe but it cannot have both.

Adding a Demand Pressure at an end node

To add a demand pressure to an end node:

1. Click the **Add Demand (Pressure)** button, , on the tool bar.
2. When you click the **Add Demand (Pressure)** button, the demand pressure symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click on the end of a pipe on the Drawing pane where you want to add a demand pressure.
4. Click **Yes** when asked 'Do you wish to change the type of node to an end demand pressure?'
5. The demand pressure is added to the pipe system, and is selected on the Drawing pane. Define the demand pressure's properties in the Node pane.

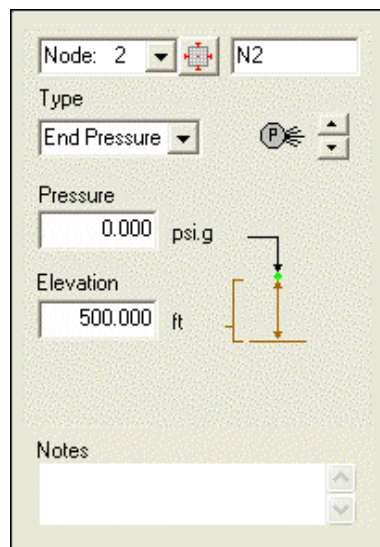


 
Figure 66 Node pane for end pressures

6. Type the demand pressure's name in the **Node** field.
7. *End Pressure* is automatically selected in the **Type** list.

8. Click the **Demand Pressure Scroll Up** or **Scroll Down** button to select the demand pressure image you want displayed on the pipe system drawing.
9. The image you select does not affect any of the demand pressure's properties or values.
10. Type the required pressure for the end of the pipe in the **Pressure** field.
11. Type the elevation at the demand pressure in the **Elevation** field.
12. Type any applicable notes regarding the demand pressure in the **Notes** field.
13. To add additional demand pressures to the system, repeat Steps 3 – 12.


Text Items

Text items allow you to add free text labels at any position on the pipe system drawing. These are useful for annotating a system during and after the design process and provide an easy and clear way to provide additional details about specific items on the drawing.

Using the Add Text button, , on the tool bar, you can add text to the drawing and/or modify text that has been previously added.

Adding Text to the drawing

To add and/or modify text:

1. Click the **Add Text** button, , on the tool bar.
2. A circle will appear at the top left of any text that has been previously added.
3. To modify previously added text click this circle to display the **Add Free Text Label** dialog.
4. To add new text click in a clear space on the drawing pane to display the **Add Free Text Label** dialog.

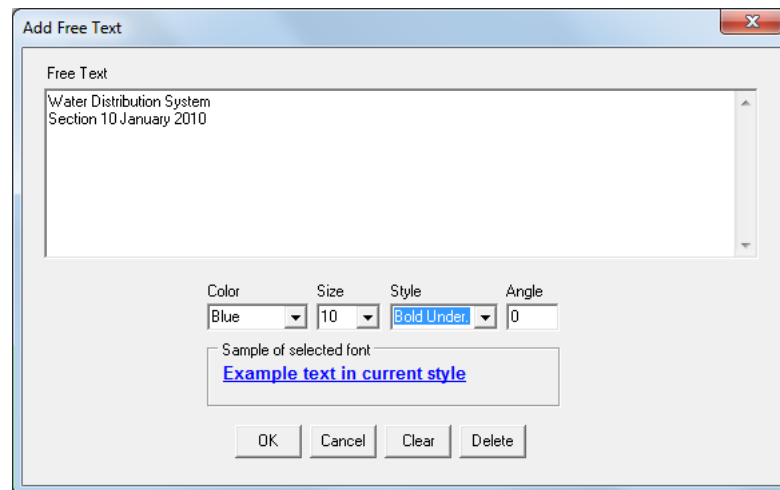




Figure 67 Add Free Text Label Dialog

5. Enter or amend the text, choose the color, size, style and angle for the text.
6. Click OK to place the text on the drawing at the position that was clicked.
7. Click Delete to remove the text from the drawing.

To move the individual text to a new position, use the Drag and Move menu button  to highlight all items on the drawing. Select a highlighted item of text, and while holding down the left mouse button, drag the text to its new position on the drawing.

The text may also be moved as part of a selected group. Use the selection tool to enclose the items to be moved, and include the top left area of any text to be moved.

Viewing, Modifying, and Deleting Items

Pipe Flow Expert comes with a number of tools for viewing and modifying a pipe system from the drawing pane. The units and labeling options selected in the Configuration Options dialog determine which values are displayed on the pipe system in the Drawing pane. Additional details can be viewed for components by clicking the Show Item Info button, , on the tool bar and selecting a specific component in the Drawing pane.



The following sub-sections describe zooming, viewing, panning, modifying and moving items.

Zooming in or Out in the Drawing Pane

The zoom function in Pipe Flow Expert provides the ability to view a pipe system up close or to see more of the pipe system at a reduced size. The zoom function can also be used as part of the printing process. When you print a pipe system in Pipe Flow Expert, only the visible part of image, what is currently displayed in the Drawing pane, is printed. The zoom function helps you define how much of a system is printed.

If your mouse has a scroll button, you can also use the scroll button to zoom in and out in the Drawing pane. Scroll up to zoom out, and scroll down to zoom in.


To zoom in or out in the Drawing pane:

1. Click the **Zoom Out** button, , on the tool bar to view the system farther out in the Drawing pane. For example, if you are viewing a large pipe system and you want to see the system in its entirety, you can click the **Zoom Out** button until you can see the whole system in the Drawing pane.
2. Click a zoom percentage from the **Zoom** list on the tool bar to zoom in or out in the Drawing pane.
3. Click the **Zoom In** button, , on the tool bar to magnify the system in the Drawing pane.

Zooming in to a selected area

 
The selected area zoom function provides the ability to quickly and automatically zoom in to a selected area of the pipe system.

To Zoom In to a Selected Area:

1. Click the **Selection tool** button, , on the tool bar.
2. When you click the **Selection tool** button, the selection icon is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Draw a box around the node or group of components you want to view in the Drawing pane.
4. To draw a box, click where you want to start the box in the Drawing pane and hold down the left mouse button, then drag the mouse until you have drawn the box.
5. Release the left mouse button.
6. Click the selected area Zoom Tool Button, located among the 'Selection Tool Buttons'.
7. The selected area will be displayed in the center of the drawing pane.

If no selection has been made the selection zoom tool button will increase the display by one scale increment.


Viewing the whole System in the Drawing Pane

As you are working with a pipe system, you may need to view the whole of the system. To scale a pipe system to fit in the visible Drawing pane, click the Zoom drawing to fit on screen button, , on the tool bar.

Panning a System in the Drawing Pane

The pan function in Pipe Flow Expert provides the ability to move an entire pipe system in the Drawing pane, without making any changes to the pipe system components, or to pan a pipe system to quickly view different areas of the system in the Drawing pane.


To move or pan a pipe system in the Drawing pane:


1. Click the **Pan the drawing** button, , on the tool bar.
2. When you click the **Pan the drawing** button, the hand symbol is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click and hold down the left mouse button anywhere in the Drawing pane.
4. Drag the pipe system to where you want to move it.
5. Release the left mouse button when you are done moving or panning the pipe system.

The pan function can also be accessed by clicking in 'white space', when either the 'Show mode' or the 'Move mode' has been selected.

Finding a Pipe or a Node

Finding a pipe or a node on a large system schematic is made easy by selection of the item from the drop down selection boxes on the Pipe Pane and the Node Pane. This allows a selection of a specific pipe or node and it will then be highlighted on the drawing.

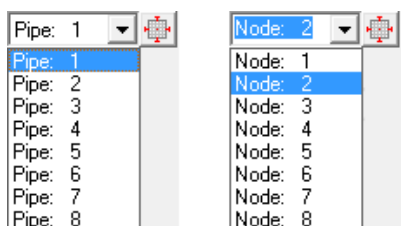

If the drawing scale is too small to see the pipe or node location, the zoom button, , can be used to display the selected pipe or node in the visible drawing window at an increased scale.

Mirror View of the Pipe System

The drawing menu items provide an option to produce a Mirror View (Left / Right) of the complete pipe system without making any changes to the pipe system components.

Where a system contains free text entries, the starting position of the free text is mirrored but the direction of the text is not changed (the user may have to re-position the text as necessary).

Information about applying the mirror feature to selected items within the system is available in Section: *Rotating selected items*.


Inverted View of the Pipe System

The drawing menu items provide an option to produce an Inverted View (Up / Down) of the complete pipe system without making any changes to the pipe system components.


Where a system contains free text entries the starting positions of the free text is inverted but multiple lines of text still progress downwards line after line (the user may have to re-position the text as necessary).


Information about applying the invert feature to selected items within the system is available in Section: *Rotating selected items*.

Viewing and Modifying System Data

Using the Network Data - Grid View button, , on the tool bar, you can view and/or modify the specific details about any Pipe, Tank, End pressure or Join Point in the system.

To view the Network Data and modify system data:

1. Click the **Network Data – Grid View** button, , on the tool bar.
2. The information about the elements of your system will be displayed in a table.

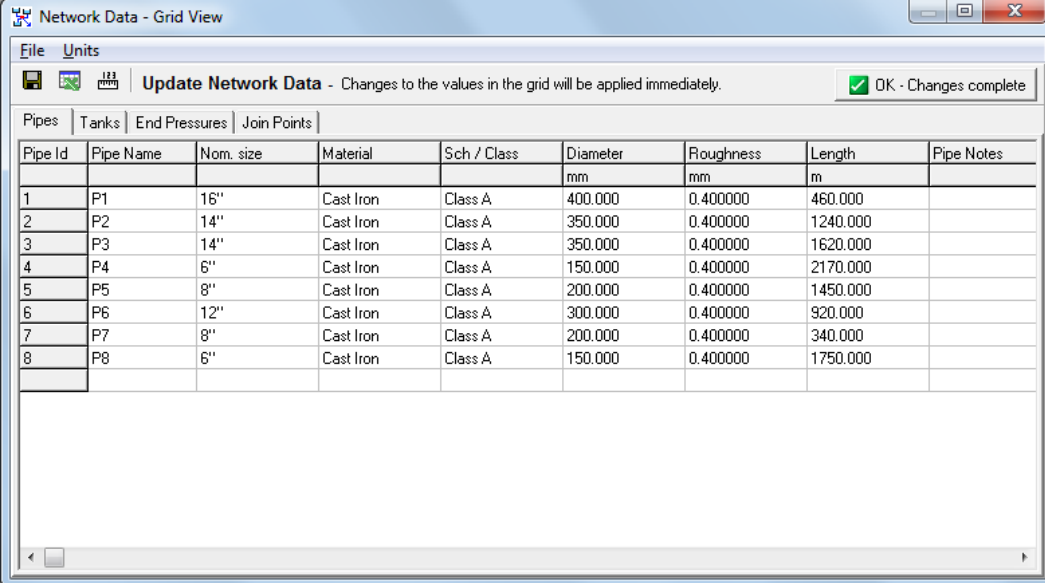


The screenshot shows a window titled "Network Data - Grid View" with a menu bar (File, Units) and a toolbar. A status bar at the top indicates "Update Network Data - Changes to the values in the grid will be applied immediately." and "OK - Changes complete". Below the toolbar are tabs for "Pipes", "Tanks", "End Pressures", and "Join Points". The "Pipes" tab is selected, displaying a table with the following data:

Pipe Id	Pipe Name	Nom. size	Material	Sch / Class	Diameter	Roughness	Length	Pipe Notes
					mm	mm	m	
1	P1	16"	Cast Iron	Class A	400.000	0.400000	460.000	
2	P2	14"	Cast Iron	Class A	350.000	0.400000	1240.000	
3	P3	14"	Cast Iron	Class A	350.000	0.400000	1620.000	
4	P4	6"	Cast Iron	Class A	150.000	0.400000	2170.000	
5	P5	8"	Cast Iron	Class A	200.000	0.400000	1450.000	
6	P6	12"	Cast Iron	Class A	300.000	0.400000	920.000	
7	P7	8"	Cast Iron	Class A	200.000	0.400000	340.000	
8	P8	6"	Cast Iron	Class A	150.000	0.400000	1750.000	



 

 


 

Figure 68 Network Data – Grid view

3. Click the tab for Pipes, Tanks, End Pressures or Join Points.
4. Select the cell that contains the data you want to edit.
5. Enter the new text or value. **Note:** The changes will be applied immediately and the drawing will be updated. An **Undo** option is **not available** for this feature to reverse the amendments; the original data must be re-entered.
6. The information about the elements of your system can be saved to an Excel spreadsheet file or exported directly to a new Excel spreadsheet.
7. Click OK – Changes complete to return to drawing mode.

Individual Item Viewing and Modifying



Using the Show Item Info button, , on the tool bar, you can view and/or modify the specific details about any component in a pipe system. Depending on the type of component you select, clicking a component in the Drawing either displays the component's information in the Node or Pipe pane, or opens up the dialog specific to the selected component.

To view and modify an individual item:


1. Click the **Show Item Info** button, , on the tool bar.
2. When you click the **Show Item Info** button, SHOW is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click the component you want to view and/or edit in the Drawing pane.
4. When you select a tank, join point, or demand pressure, its details are displayed, and can be edited in the Node pane.
5. When you select a demand flow, the **Set Flow Demands** dialog opens, and you can view and edit the demand flow's values.
6. When you select a pipe, the pipe's details are displayed, and can be edited in the Pipe pane. To view and edit a pipe's material and/or size, click the **Diam?** or **Material** buttons in the Pipe pane to open the **Pipe diameter data** dialog.
7. When you select a fitting, , the **Pipe fitting friction coefficients** dialog opens. You can view and edit all fittings on the pipe containing the fitting you selected in the Drawing pane. You can also select a pipe in the Drawing pane, and then click the **Add/Change Fittings** button, , in the Pipe pane to open the **Pipe fitting friction coefficients** dialog.
8. When you select a component pressure loss, , the **Set Component Pressure Loss** dialog opens, and you can view and edit the component's pressure loss values. You can also select a pipe in the Drawing pane, and then click the **Add/Change Component Pressure Loss** button, , in the Pipe pane to open the **Set Component Pressure Loss** dialog.
9. When you select a control valve, , the **Control Valve Data** dialog opens, and you can view and edit the control valve type or values. You can also select a pipe in the Drawing pane, and then click the **Add/Change Control Valve** button, , in the Pipe pane to open the **Control Valve Data** dialog.
10. When you select a pump, , the **Pump Data** dialog opens, and you can view and edit the pump's properties. You can also select a pipe in the Drawing pane, and then click the **Add/Change Pump** button, , in the Pipe pane to open the **Pump Data** dialog.

Moving Components in a System

In Pipe Flow Expert, you can move sections of a pipe system by dragging a node or a group of components to another place in the drawing, and you can move individual components on a pipe to a different location along the same pipe. You can also cut, copy, and paste pipes and nodes to move pipes and nodes in the system.


Using the Drag and Move Items button, , on the tool bar, you can move a node, and all the components connected to the node, or you can move individual components on a pipe in the Drawing pane. Using the Selection tool button, , on the tool bar, you can move nodes or groups of components in the Drawing pane.

To move system components using the Drag and Move Items button:

1. Click the **Drag and Move Items** button, , on the tool bar.
2. When you click the **Drag and Move Items** button, each of the pipe system's components are highlighted in the Drawing pane. MOVE is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Click the component you want to move and hold down the left mouse button in the Drawing pane.
4. Drag the component where you want to move it.
5. Release the left mouse button when you are done moving the component.

When you move components using the **Drag and Move Items** button, the values for the moved components do not change. If you want to change the value of a moved component, such as pipe length, the value needs to be manually updated in Pipe Flow Expert.

To move system components using the Selection tool:

1. Click the **Selection tool** button, , on the tool bar.
2. When you click the **Selection tool** button, the selection icon is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Draw a box around the node or group of components you want to move in the Drawing pane.
4. To draw a box, click where you want to start the box in the Drawing pane and hold down the left mouse button, then drag the mouse until you have drawn the box.
5. Release the left mouse button.
6. Click in the box and hold down the left mouse button, then drag the box to the new location in the Drawing pane. Moving the box automatically moves the node or group of components within the box.
7. Release the left mouse button, and right-click when you are done moving the component.

When you move components using the **Selection tool** button, the values for the components that are moved do not change. If you want to change the value of a moved component, such as pipe length, the value needs to be manually updated in Pipe Flow Expert.

Cutting, Copying, and Pasting Nodes & Pipes





Nodes (tanks, demand pressures, or join points) and the connecting pipes can be cut, copied or pasted in the Drawing pane. A pipe cannot exist unless it is connected between two nodes. When you cut a node from a pipe system in the Drawing pane, any pipes that have one end connected to a selected node but which are not linked at the other end to another selected node (i.e. the pipe is not fully contained within the selection rectangle), will be permanently removed from the system (and the components on those deleted pipes will also be removed from the system).

When you paste a group of objects on to the Drawing pane, these items will initially appear slightly offset from the position of the original copy operation. The group of objects will be contained in a selection rectangle, to allow the objects to be moved to a new position. Once the selected items have been positioned, click the right mouse button to complete the paste operation.


If you try to paste a node over the top of an existing node or an existing pipe, the paste action will be disallowed.


NOTE: A cut, copy, or paste action in the Drawing pane cannot be undone.


To cut, copy, and paste nodes and pipes in the Drawing pane:

1. Click the **Selection tool** button, , on the tool bar.
2. When you click the **Selection tool** button, the selection icon is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Draw a box around the pipes and nodes you want to cut or copy in the Drawing pane. To draw a box, click where you want to start the box in the Drawing pane and hold down the left mouse button, then drag the mouse until you have drawn the box and then release the left mouse button.
4. To cut the nodes and pipes, click the **Cut** button, , on the tool bar or select **Edit | Cut**. Any pipes which have one end connected to a selected node but are not linked at the other end to another selected node, will be permanently removed from the system.
5. After clicking the **Cut** button or selecting **Edit | Cut**, a message asking if you are sure you wish to cut the nodes and all pipes that connect to these nodes will be displayed.
6. Click **Yes**.
7. You may wish to copy rather than cut a set of selected items. To copy the nodes and pipes, click the **Copy** button, , on the toolbar or select **Edit | Copy**.
8. Click the **Paste** button, , on the tool bar or select **Edit | Paste** to paste the cut or copied nodes and pipes to the Drawing pane.
9. When you paste nodes and pipes to the Drawing pane, these items will be pasted slightly offset from the position of the original copy operation. The group of new objects will be contained in a selection rectangle.
10. Click in the box and hold down the left mouse button, then drag the objects to their new location in the Drawing pane.
11. Release the left mouse button, to allow the objects to locate on the drawing grid.
12. Click the right mouse button to complete the paste operation.

Rotating selected items

The **Selection tool** button, , allows a group of nodes and pipes to be selected, as described in the previous section. It is possible to use the options on the edit menu to rotate the selected group either 90 degrees clockwise or 90 degrees anticlockwise. The mirror or invert features can also be applied to the selected group.


The Mirror Selection button, , can be used to mirror the selected group.

The Invert Selection button, , can be used to invert the selected group.

Pipe Flow Expert does not allow one node to be placed over the top of another node, or over the top of an un-related pipe. This restriction is applied to prevent confusion.


When the rotated, or mirrored, or inverted group are added back to the drawing the action may be disallowed if the above conditions apply. The selected group will have to be re-positioned to allow the items to be 'dropped' back onto the drawing pane.

Copying between drawings

The **Selection tool** button, , allows a group of nodes and pipes to be copied, as described in the previous section. It is possible to use the group copy and the paste feature to transfer a group of nodes and pipes from one drawing to another drawing.

Nodes and pipes on the current drawing are selected and copied.

A new grid is chosen or different drawing is opened.

The **Paste** button, , can be used to place the copied nodes and pipes on to the new drawing.

Moving a Pipe to link at a new position

If a pipe has been drawn incorrectly between two nodes, it is possible to unlink the end of the pipe and enter the pipe drawing mode to allow the existing pipe to be connected at a new position.


To unlink / move an existing pipe :


1. Select the pipe to be moved by clicking on it in the drawing pane.
2. Click the right mouse button to display the **Pipe Sub-menu**.
3. Choose the 'Move / Unlink end of Pipe' option.
4. The pipe drawing mode will be selected.
5. The 'direction arrow' end of the pipe will be unlinked to allow you to connect the pipe at a new position.

The 'Move / Unlink end of Pipe' option can also be performed when in 'Add Pipes' drawing mode, by 'clicking' on a pipe to first highlight it, then 'clicking' again on the highlighted pipe to 'unlink' it.

Using the Undo and Redo Functions

When you add a single pipe or a single node in the Drawing pane, you can undo the add pipe or node action to remove the pipe or node from the Drawing pane. If you change your mind about an undo action, you can redo the pipe or node in the Drawing pane.

To undo an add pipe or node action in the Drawing pane, click the Undo button, , on the tool bar or select Edit | Undo.


To redo an undo action in the Drawing pane, click the Redo button, , on the tool bar or select Edit | Redo.

NOTE: If you added new components, such as fittings or flow demands, to a pipe or node, and you then click the Undo button or select Edit | Undo, and then click the Redo button or select Edit | Redo, then the pipe or node will be re-added to the Drawing pane without the components. When you use the undo action for a pipe or node with components, any components that were not drawn as part of the default pipe are permanently removed from the pipe.

Deleting Components in a System

Individual components or groups of components can be deleted from a pipe system in the Drawing pane. When you delete a node from a pipe system in the Drawing pane, all the pipes connected to




the node, and the components on those pipes, are deleted from the system. When you delete an individual pipe, all the components on the pipe are also deleted.

Nodes (tanks, demand pressures, or join points), individual pipes, and groups of components are deleted from a pipe system using the Delete button, , on the tool bar. Other pipe system components are deleted on the dialog associated with that component. For example, fittings on a pipe are deleted from the Pipe fitting friction coefficients dialog.

NOTE: Deletions in the Drawing pane cannot be undone.



Deleting a Node or Pipe

To delete a node or pipe from a pipe system:

1. Click the **Show Item Info** button, , on the tool bar.
2. Click the node or pipe you want to delete in the Drawing pane.
3. You can also select a node or pipe for deletion by using the **Selection** tool button, , on the tool bar.
4. Click the **Delete** button, , on the tool bar or select **Edit | Delete**.
5. If you are deleting a node, the message, *Are you sure you wish to delete the current highlighted node and all pipes that connect to the highlighted node?*, is displayed after clicking the **Delete** button or selecting **Edit | Delete**.
6. If you are deleting a pipe, the message, *Are you sure you wish to delete the current highlighted pipe?*, is displayed after clicking the **Delete** button or selecting **Edit | Delete**.
7. Click **Yes**.
8. The selected node or pipe is deleted. When you delete a node, all pipes and components connected to the node are deleted. When you delete a pipe, all components on the pipe are deleted with the pipe.


Deleting a Group of Components

To delete a group of components from a pipe system:

1. Click the **Selection tool** button, , on the tool bar.
2. When you click the **Selection tool** button, the selection icon is displayed next to your mouse pointer when the pointer is in the Drawing pane.
3. Draw a box around the group of components that you want to delete in the Drawing pane.
4. To draw a box, click where you want to start the box in the Drawing pane and hold down the left mouse button, then drag the mouse until you have drawn the box.
5. Release the left mouse button.
6. Click the **Delete** button, , on the tool bar or select **Edit | Delete**.
7. The message, *Are you sure you wish to delete the selected nodes and all pipes that connect to these nodes?*, is displayed after clicking the **Delete** button or selecting **Edit | Delete**.
8. Click **Yes**.
9. The selected nodes and all the pipes and their components that are connected to the nodes are deleted.



 

Deleting a Demand Flow

To delete a demand flow from a pipe system:

1. Click the **Show Item Info** button, , on the tool bar.
2. Click the node containing the demand flow that you want to delete in the Drawing pane.
3. Click one of the **Edit** buttons in the Node pane to open the **Set Demand Flow** dialog.
4. If the **In Flow** field contains a value other than **0.000**, type **0**.
5. If the **Out Flow** field contains a value other than **0.000**, type **0**.
6. Click **OK** to save your changes and close the **Set Demand Flow** dialog.
7. The demand flow icon and value are removed from the selected node in the Drawing pane.




Deleting Fittings

To delete a fitting from a pipe system:

1. Click the **Show Item Info** button, , on the tool bar.
2. Click the fitting symbol, , on the pipe containing the fitting that you want to delete in the Drawing pane.
3. Clicking the fitting symbol opens the **Pipe fitting friction coefficients** dialog with all the fittings on the pipe listed in the **Fittings on** section.
4. You can also select the pipe containing the fitting that you want to delete in the Drawing pane, and then click the **Add/Change Fittings** button, , in the Pipe pane to open the **Pipe fitting friction coefficients** dialog.
5. Select the row containing the fitting that you want to delete in the **Fittings on** section.
6. Click the **Delete** button, , next to the row to delete the fitting(s) from the selected pipe.
7. Click the **Save** button in the **Pipe fitting friction coefficients** dialog to save your changes and close the **Pipe fitting friction coefficients** dialog.
8. If you deleted all the fittings on the pipe, the fittings symbol on the selected pipe is deleted in the Drawing pane.

Deleting a Component Pressure Loss



 
To delete a component's pressure loss from a pipe system:

1. Click the **Show Item Info** button, , on the tool bar.
2. Click the component pressure loss symbol, , on the pipe containing the component pressure loss that you want to delete in the Drawing pane.
3. Clicking the component pressure loss symbol opens the **Set Component Pressure Loss** dialog.
4. You can also select the pipe containing the component pressure loss that you want to delete in the Drawing pane, and then click the **Add/Change Component Pressure Loss** button, , in the Pipe pane to open the **Set Component Pressure Loss** dialog.

5. If you want to save and reuse the component pressure loss data for other pipes in the pipe system or future pipe systems, be sure to click the **Save To File** button and save the pressure loss data to a .pfco file before deleting the component pressure loss from the selected pipe.
6. Click the **Delete** button.
7. The message, Are you sure you wish to delete the component and its data from this pipe?, is displayed after clicking the **Delete** button.
8. Click **Yes**.
9. The component pressure loss icon and values are removed from the pipe in the Drawing pane.




Deleting a Control Valve

To delete a control valve from a pipe system:

1. Click the **Show Item Info** button, , on the tool bar.
2. Click the flow control symbol, , on the pipe containing the flow control that you want to delete in the Drawing pane.
3. Clicking the control valve symbol opens the **Control Valve Data** dialog.
4. You can also select the pipe containing the control valve that you want to delete in the Drawing pane, and then click the **Add/Change Control Valve** button, , in the Pipe pane to open the **Control Valve Data** dialog.
5. Click the **Delete** button.
6. The control valve icon and value are removed from the pipe in the Drawing pane.

Deleting a Pump

To delete a pump from a pipe system:

1. Click the **Show Item Info** button, , on the tool bar.
2. Click the pump symbol, , on the pipe containing the pump that you want to delete in the Drawing pane.
3. Clicking the pump symbol opens the **Pump Data** dialog.
4. You can also select the pipe containing the pump that you want to delete in the Drawing pane, and then click the **Add/Change Pump** button, , in the Pipe pane to open the **Pump Data** dialog.
5. If you want to save and reuse the pump data for other pumps in the pipe system or future pipe systems, be sure to click the **Save To File** button and save the pump data to a .pfpm file before deleting the pump from the selected pipe.
6. Click the **Delete** button.
7. The message, Are you sure you wish to delete the pump and all pump data from this pipe?, is displayed after clicking the **Delete** button.
8. Click **Yes**.
9. The pump icon and value are removed from the pipe in the Drawing pane.

Calculations and Results

Once you have finished constructing a pipe system, you can calculate and solve the system to determine whether the system is valid. If the system is valid, the calculated values for the system's flows and pressures are displayed in the Drawing pane and the Result tables.

The calculated values displayed in the Drawing pane are determined by the options selected on the Labeling and Units tab of the Configuration Options dialog.

The Results tables contain all of the calculated values for the whole pipe system, including pipe data, fitting data, component data, pump data, fluid data and node data.

When you calculate a pipe system, a log is generated and displayed in the Results Log dialog. If a pipe system cannot be solved, the log offers some suggestions as to why the system cannot be solved.

To calculate the balanced results for a pipe system in the Drawing pane, click the Calculate button.

The 'Include' check boxes in the Pipe pane allow you to include or exclude the fittings, fixed pressure losses, flow controls, and pumps when solving the system. The check boxes allow you to view and re-run the system calculations without having to delete and re-add the components to the system.

Select an Include check box to include a component's values in a system's calculations. Clear an Include check box to exclude a component's values from a system's calculations.

Calculating and Solving a System

To calculate and solve a system:

1. Open the .pfe file for the pipe system you want to calculate in Pipe Flow Expert.
2. The pipe system is displayed in the Drawing pane. In order to calculate a system's values, the pipe system must be open in the Drawing pane.
3. Click the **Calculate** button on the tool bar.
4. The system results are calculated and the **Results Log** dialog is shown.

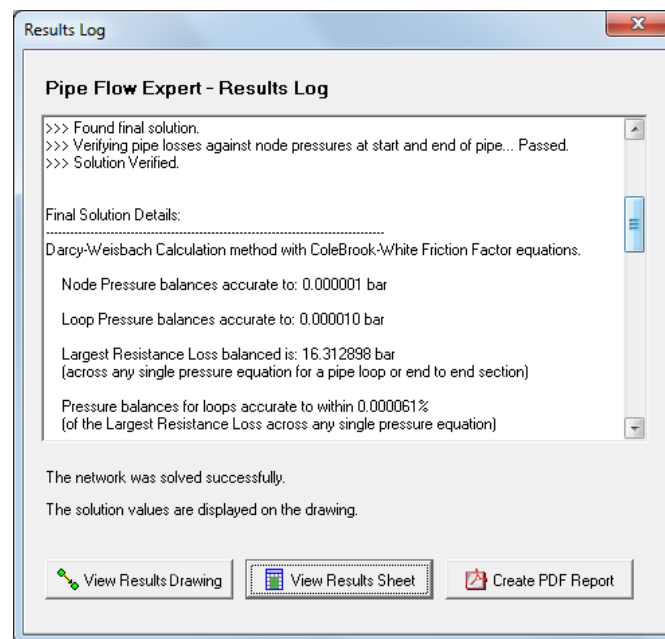


Figure 69 Result Log dialog

If the pipe system is solved, the message '*The network was solved successfully*' is displayed in the **Results Log** dialog.

If the pipe system is not solved, the log offers some suggestions as to why the system could not be solved, and the message '*The network was not solved. See log details above.*' is displayed in the **Results Log** dialog. When this happens, review the log and click **OK** to return to the Drawing pane in design mode. Make the necessary changes to the system to resolve the errors in the system, and click the **Calculate** button on the tool bar to recalculate the revised system.

If the Results Log has been closed, it can be re-opened by clicking the **Show Log** button on the tool bar.

To change back to Design Mode, close the Results Log and then click on the **Re-Design** button on the tool bar.

To view the Results Drawing:

Click **View Results Drawing** button to display the drawing with results.

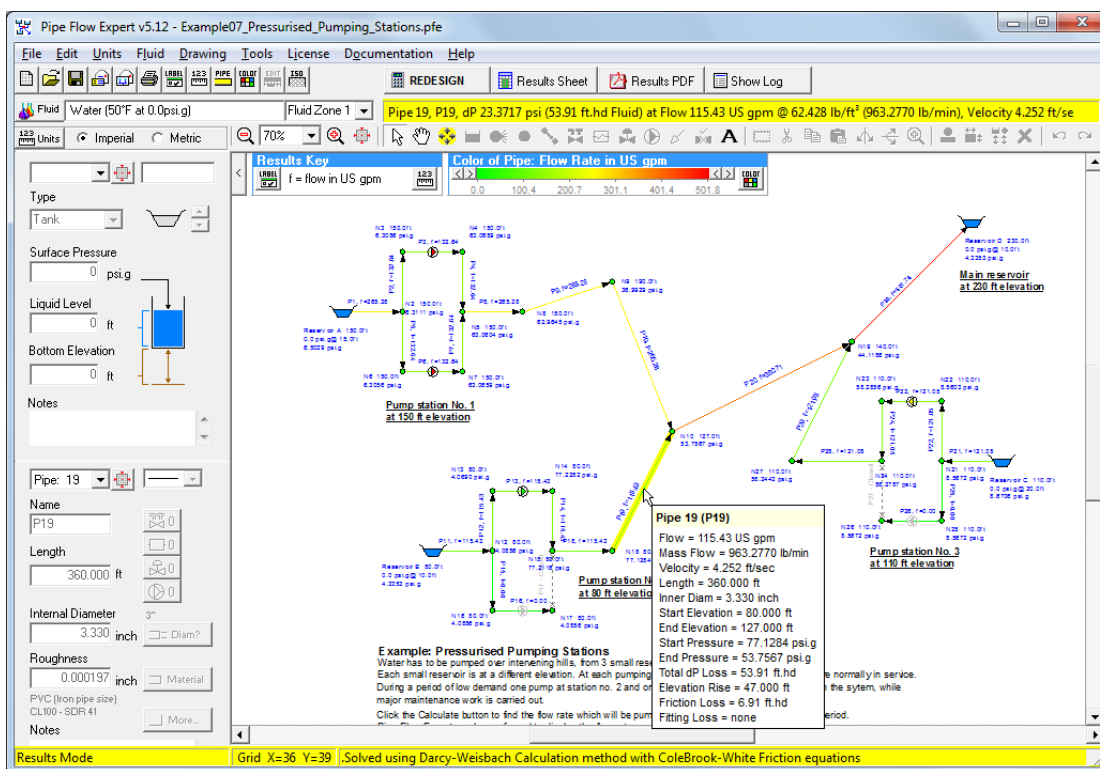


Figure 70 Pipe Flow Expert interface in Results mode

The details for the last node or pipe selected with a mouse click will be displayed in the hint pane. Moving the cursor over an item on the drawing will allow the user to view the items details in a pop-up data pane.

To view the Results Table:

Click the **View Results Sheet** button to open the Results Table.

Pipe Flow Expert - Results

File Units

Pipes Fittings Pumps Nodes Fluids Pipe Materials Energy All Results


Pipe Id	Pipe Name	Fluid Zone	Material	Inner Diameter	Roughness	Length	Total K	Mass Flow	Flow
	and Notes			inch	inch	ft		lb/min	US gpm
11	P11	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	30.000	0.0000	963.2770	115.43	
12	P12	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	2.000	0.0000	963.2770	115.43	
13	P13	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	10.000	0.0000	963.2770	115.43	
14	P14	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	2.000	0.0000	963.2770	115.43	
15	P15	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	2.000	0.0000	0.0000	0.00	
16	P16	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	10.000	0.0000	0.0000	0.00	
18	P18	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	10.000	0.0000	963.2770	115.43	
19	P19	Water (50°F at 0.0ps 3" PVC (Iron pipe siz	3.330	0.000	360.000	0.0000	963.2770	115.43	
20	P20	Water (50°F at 0.0ps 6" PVC (AWWA) CL	6.348	0.000	1250.000	0.0000	3177.1821	380.71	
21	P21	Water (50°F at 0.0ps 4" PVC (Iron pipes si	4.072	0.000	30.000	0.0000	1010.2121	121.05	

Figure 71 Results Tables


Configuring the System Results

Once a pipe system is calculated and solved, the calculated results are displayed with the pipe system in the Drawing pane. The options selected on the Labeling tab of the Configuration Options dialog determine which result values are displayed in the Drawing pane. By default, the calculated flow and pressure values are displayed for each pipe in the system.

You can also reconfigure the units for the pipe system results on the Units tab of the Configuration Options dialog. You can access the Units tab of the Configuration Options dialog by selecting

Specify Units from the Units menu, or clicking the Choose Units button, , on the toolbar, or clicking the Choose Units button in the Results dialog.

To configure the pipe system labeling for results:

1. Click the **Choose Labeling** button, , on the tool bar to open the **Labeling** tab of the **Configuration Options** dialog.

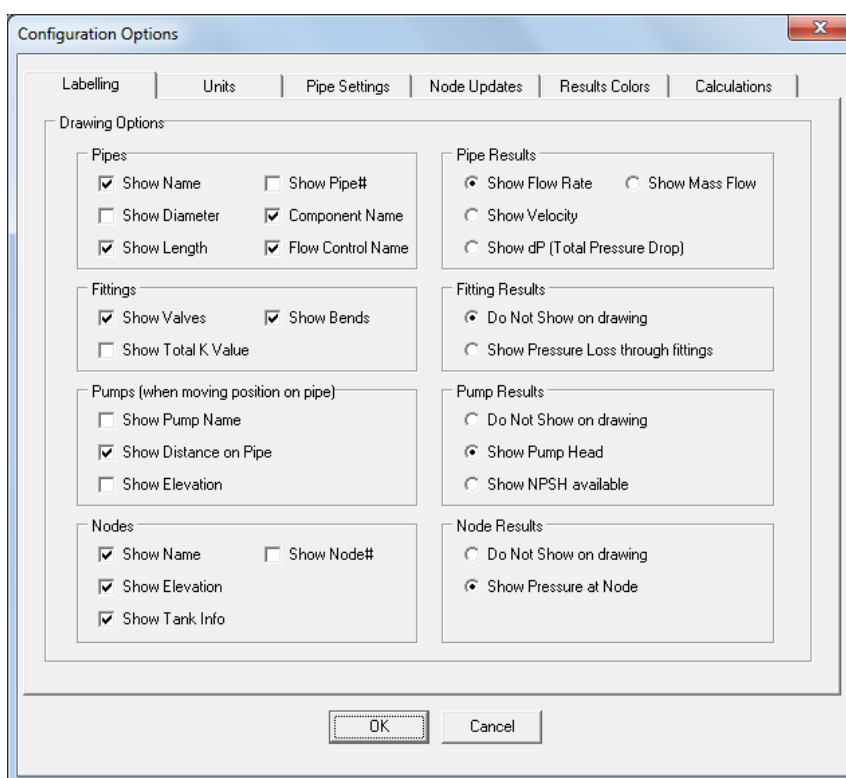



Figure 74 Configuration Options dialog – Labeling tab

2. Click one of the labeling options in the **Pipe Results**, **Fitting Results**, **Pump Results** and **Node Results** sections to determine which of the pipe system's calculation results are displayed in the Drawing pane.
3. Click **OK** to close the **Configuration Options** dialog and apply your changes to the results displayed in the Drawing pane.

To reconfigure the units used in a pipe system and its results:

1. Click the **Choose Units** button, , in the **Results** dialog or on the tool bar, or select **Specify Units**
2. from the **Units** menu to open the **Units** tab of the **Configuration Options** dialog.

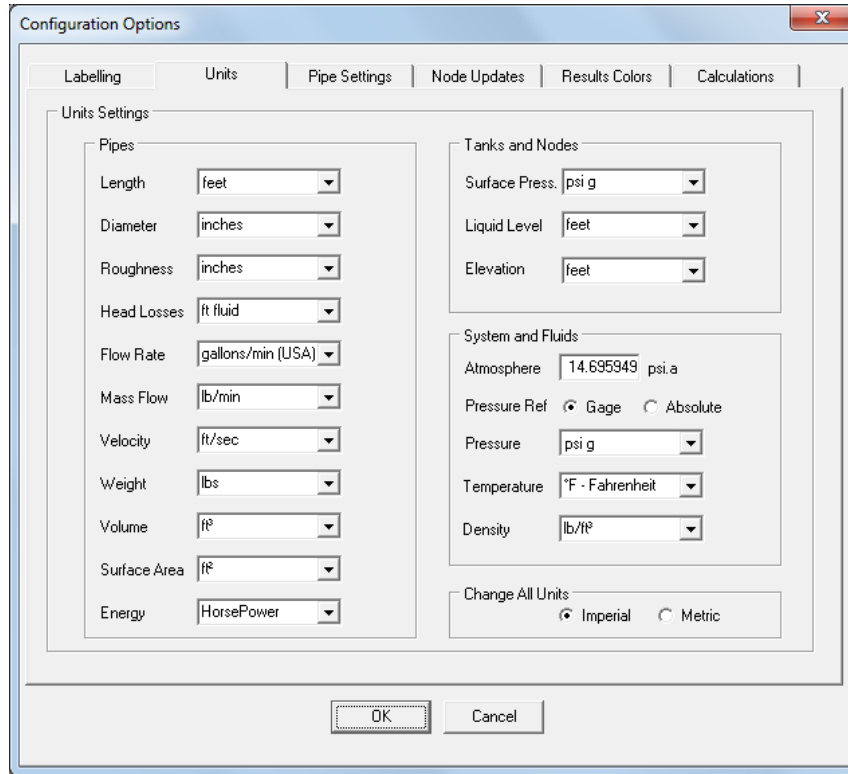


Figure 75 Configuration Options dialog – Units tab

3. Select or edit the applicable component units on the tab.

Do not click the **Imperial** or **Metric** option in the **Change All Units** section of the **Units** tab, unless you want to change the universal unit setting and reset all the values currently defined on the **Units** tab.

NOTE: When you change the universal unit setting, it converts all unit values to the unit type selected, and all values on the **Units** tab of the **Configuration Options** dialog are converted to the fields' default values. For example, if you are changing the universal setting from imperial to metric, all values, including any imperial units selected on the **Units** tab of the **Configuration Options** dialog, are converted to metric. All field values on the **Units** tab are also reset to their default metric value.

Click **OK** to close the **Configuration Options** dialog and apply the unit configurations to the pipe system and its results.

3. Click the **Save** button, , or select **File | Save to Excel** to open the **Save As** dialog.

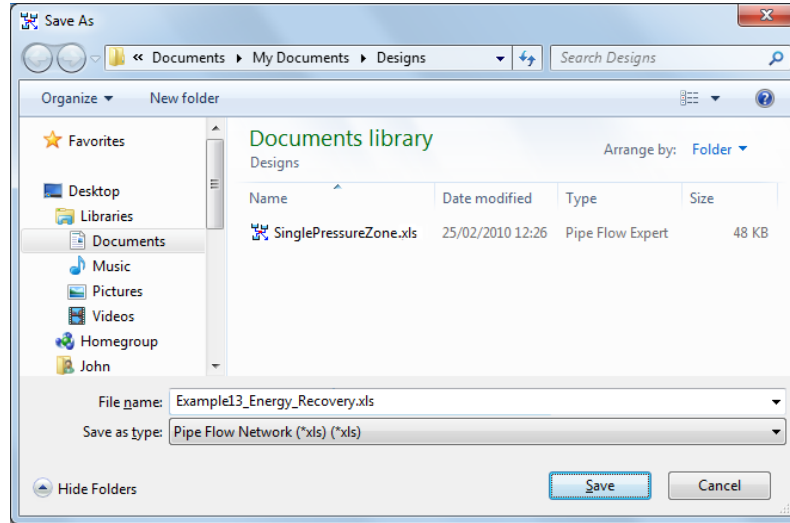



Figure 77 Save Results as Excel File dialog

4. Type a name for the file in the **File Name** field.
5. Select Pipe Flow Network (*.xls) from the Save as type list.
6. Click **Save** to save the pipe system results from the selected tab.

Exporting the System Results


The values displayed in the Results Tables can be exported directly into Microsoft Excel. When you are exporting to Microsoft Excel from the Results Tables, only the values displayed on the currently selected tab are exported. To export all the result values, click the All Results tab before exporting.

To export a pipe system's results into a .xls file:

1. After a pipe system has been calculated and solved, click the **Results** button on the tool bar or click **Yes** on the **Results Log** dialog to open the **Results Tables**.
2. Click the tab containing the values you want to export.
3. Click the Export to Excel button, , or select **File | Export to Excel**.
4. Clicking the **Export to Excel** button or menu selection opens the pipe system results from the selected tab in a worksheet in Microsoft Excel.

If Microsoft Excel is not available the results can be copied to the Windows clipboard, so that the data can be pasted into other spreadsheet applications.


Making changes to a group of pipes or nodes where an item of data has to be changed to the same diameter, length, pipe material or node elevation can reduce the time taken to amend your system.

The Selection tool button, , allows the user to select a group of items which are located in one area.


While holding down the left mouse button, drag the mouse to create a rectangle around the item(s) you want to select for cutting, copying, pasting, mirror, invert, zoom in, pipe data update, node data update, deleting or moving.



Amendments to groups of Pipes or Nodes can be made by setting the default pipe or node data and then clicking the appropriate option button to copy the required values to the selected pipes.

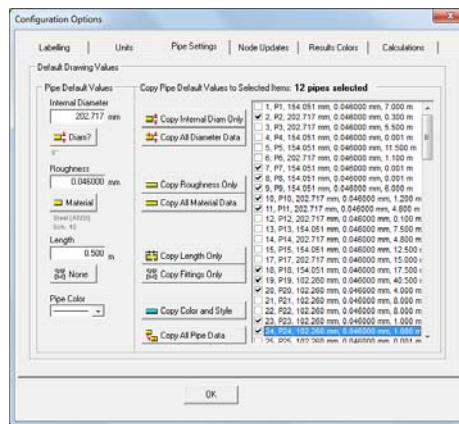

Where the items to be amended are not located in a rectangular area on the drawing grid, you can select pipes or nodes individually to be added to a group of selections.

The Individual Selection tool button, , allows the user to select a group of individually chosen pipes and nodes by clicking on each one in turn.



The characteristics for these individually selected group of items can be amended in one operation by using the pipe data update, node data update or delete options, in the same manner as if the items had been selected using the rectangular selection tool.

Create a PDF Report of the System Results

When a system has been solved successfully a customized PDF report can be created.

The report can contain a cover sheet with your logo, a scalable results drawing for high resolution printing and a selection of tabulated results data, which provides a detailed breakdown of the calculated results.

Note: First configure the results drawing labeling and the results units to be used, as described in the section 'Configuring the System Results'.

To display the Create PDF Report options dialog choose one of these actions:

- Click the 'Create PDF Report' button on the Results Log (after solving a system) OR
- Click the 'Results PDF' Tool Button in the tool bar at the top of the screen OR
- Click the 'Create PDF – Customized Report' option from the File menu

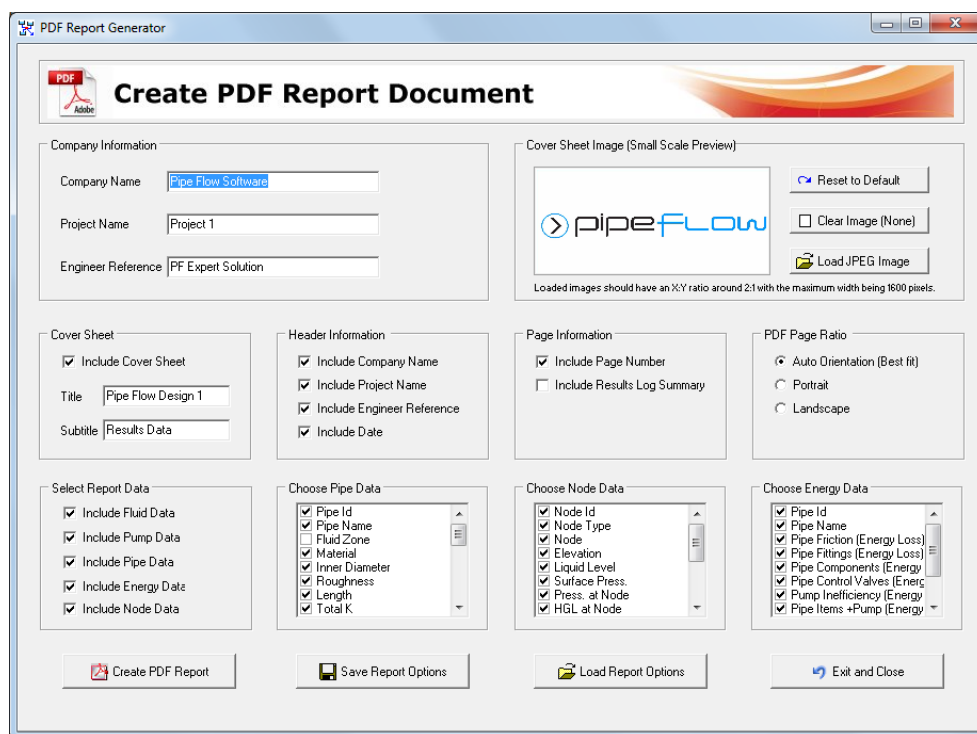


Figure 79 Create PDF Report Options

Choose the options for the PDF Report by selecting and checking the appropriate items from the PDF Report Generator screen.

The PDF report can include:

- A Cover Sheet including Company Logo, Title and Sub-Title.
- Page Header Information including Company Name, Project Name and Engineer Reference
- Page Information including page number
- Tabulated Results for Fluid Data
- Tabulated Results for Pump Data
- Tabulated Results for Pipe Data with up to 12 selected data items for each pipe

- Tabulated Results for Node Data with up to 12 selected data items for each node
- Tabulated Results for Energy Data
- Results Log Summary (if option selected)

The company information, the cover sheet image, and all the other selected options can be saved for future use. Click the 'Save Report Options' button to display the 'Save As' dialog.

Previously saved report options can be reloaded. Click the 'Load Report Options' button to display the 'Open dialog.



Figure 80 PDF Results Report Pages

To Create a PDF Report Document:

1. Enter the Company Information.
2. Load a cover sheet image.
3. Select the Cover Sheet, Header Information and Page Information options.
4. Select the Report Data options.
5. Choose the Pipe Data, Node Data and Energy Data to be included.
6. Click the Create PDF Report button to generate a PDF results document

The generated PDF report file will be displayed in your PDF Adobe Reader program. The PDF file will be automatically stored in the user's local temporary folder, however the user may wish to save a copy of this document to a different location using the 'Save a Copy' option from Adobe Reader file menu.

Example Systems

A number of example systems are supplied with Pipe Flow Expert to explain and demonstrate the capabilities of the software. By opening these example systems in turn, users will become familiar with the principle of flow and pressure balance in finding a steady flow condition within a pipeline network.

Each example is intended to introduce the user to a new feature of Pipe Flow Expert.

All of the example systems can be loaded and solved using the trial version of Pipe Flow Expert.

The following sub-sections describe each example system in detail.

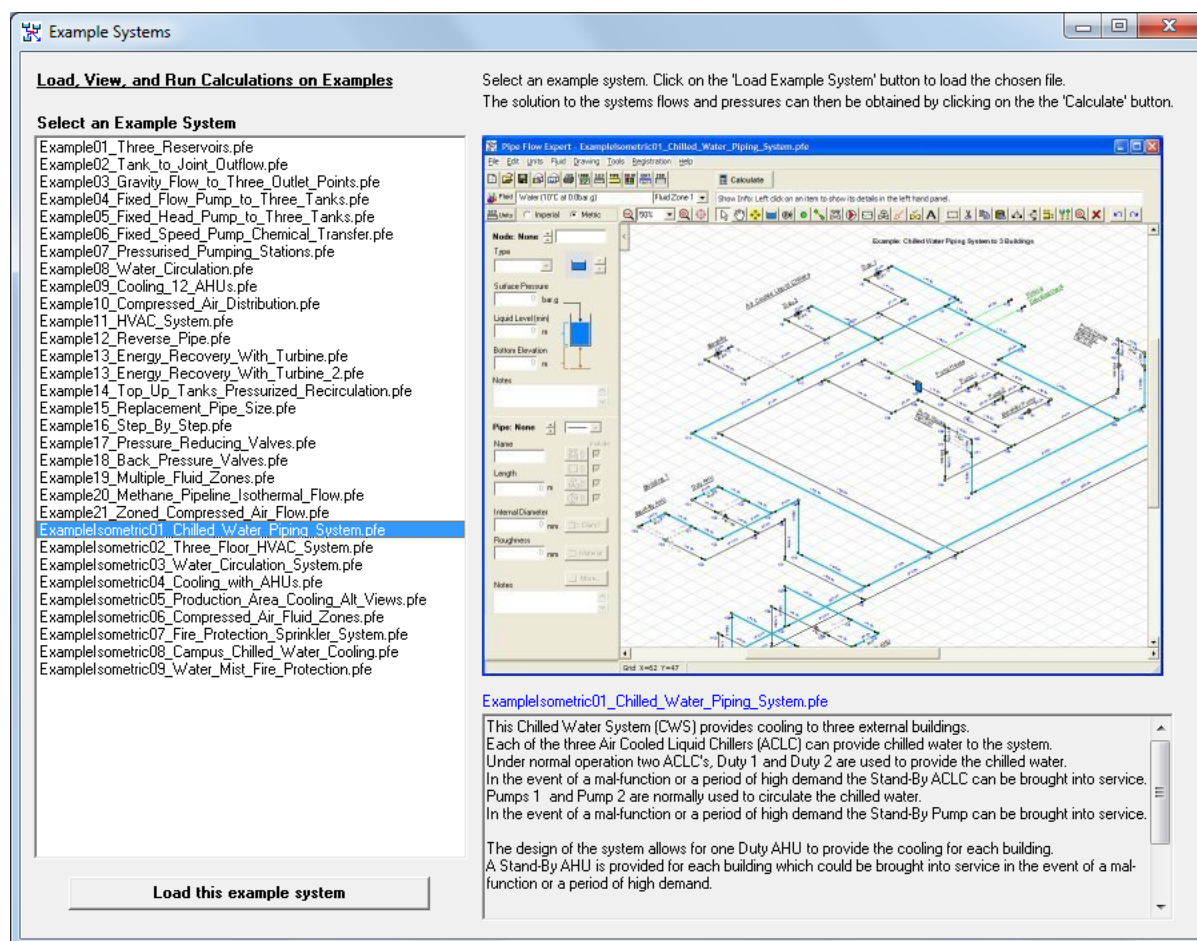


Figure 81 Example Systems Dialog

Example 01: Three Reservoirs

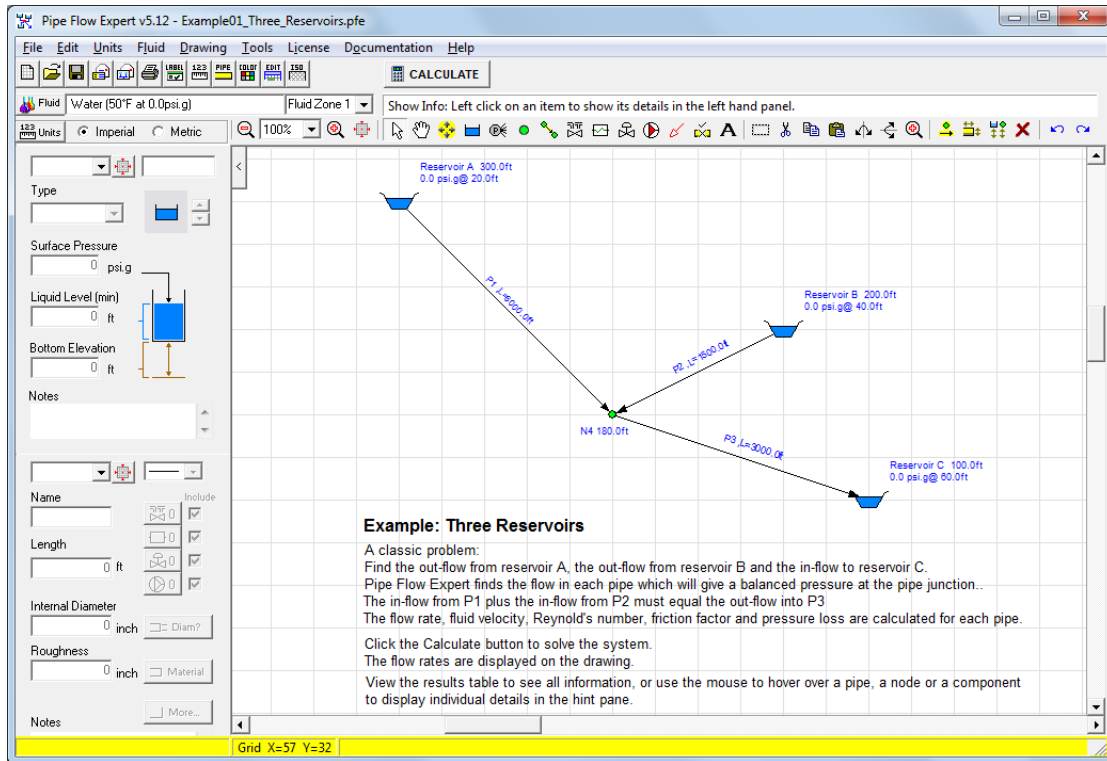


Figure 82 Example 01 – Three Reservoirs

This is a classic problem found in most text books on fluid mechanics and hydraulics. Three reservoirs are each located at different elevations and are joined at a common point by three pipes. Water will flow from the highest reservoir towards the join point. It is also likely that water will flow from the second highest reservoir towards the join point (This would not always be the case if the elevations and pipe sizes were changed). The flow into the join point must be equal to the flow out of the join point (Balanced flow).

The pressure at the join point can be calculated as follows:
Add (or subtract, if applicable) the fluid head difference, between the reservoir fluid surface and the join point elevation. Subtract (or add if applicable) the fluid head losses due to friction in the pipe. Convert the fluid head result to pressure (using the fluid density). Add any pressure at the reservoir fluid surface.

The pressure at the join point can be calculated by using the path from any one of the reservoirs. The pressure at the join point must be the same, irrespective of the path used in the calculation of the pressure (Balanced pressure).

Pipe Flow Expert uses the two principles of 'Balanced flow' and 'Balanced pressure', to calculate the flow rates that will give a steady flow condition in the system. If these two characteristics are within the chosen calculation tolerances the system is considered solved.

The Hydraulic Grade Line is the obtained as follows:
Convert the pressure at a node to fluid head (using the fluid density).
Add the elevation of the node.

Pipe Flow Expert calculates the Hydraulic Grade Line at each node in the system. This value can be measured directly by a piezometer tube inserted flush to the inside of a pipe, when analysis of the system is being carried out.

Example 02: Tank to Joint Outflow

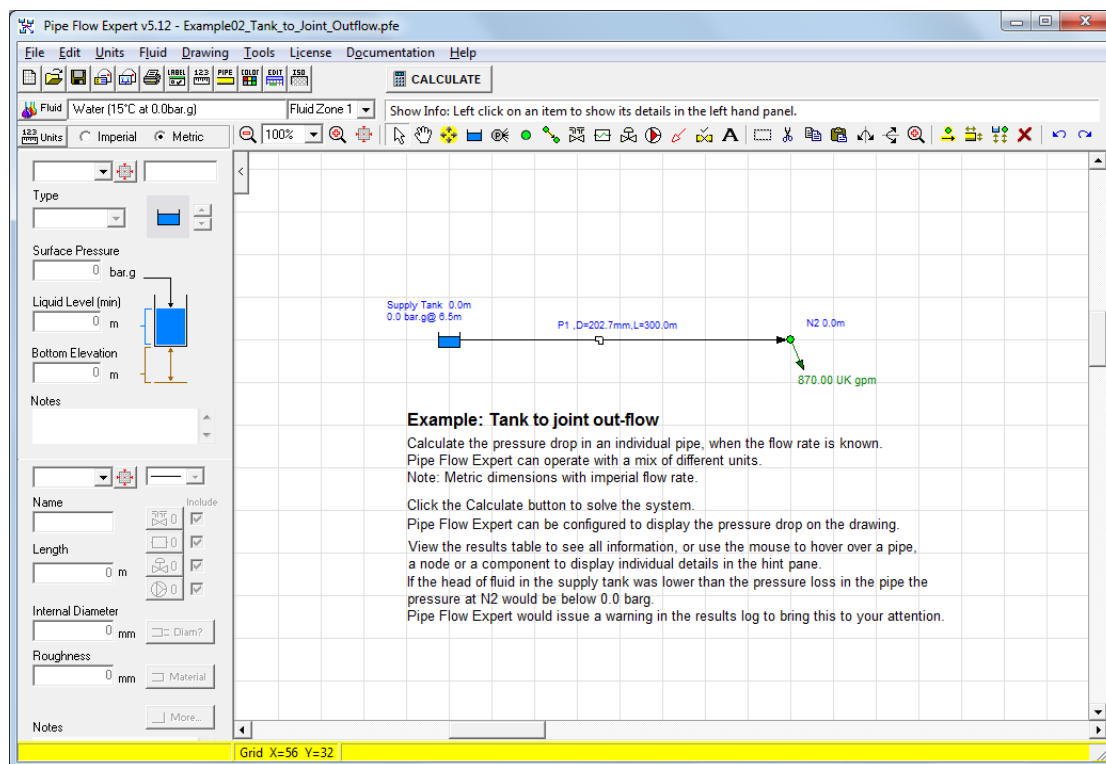


Figure 83 Example 02 – Tank to Joint Outflow

On occasion the characteristics of the flow in an individual pipe may be required. To model this situation Pipe Flow Expert will require a valid system design to be able to solve the flow balance and pressure balance. In this example, a tank is used as the source of the fluid entering the pipe. At the other end of the pipe a known flow rate is set by using a demand out-flow from the node. The system can now be solved and fluid velocity, Reynolds number, friction factor and pressure drop can be calculated.

Pipe Flow Expert calculates the pressure at each node in a system. If the calculation results in an absolute pressure below 0.0 bar or 0.0 psi, the system will not be solved.

Demand In-flows and Demand Out-flows can be set at a join point in a pipeline system. Demand In-flow and Demand Out-flow settings provide a useful way in which to represent the flow that may come from, or go to, parts of a system which is not part of the analysis.

Demand flow settings cannot be applied to points in the system where a pressure setting is also applied, such as a tank (which could have a fluid head) or an end pressure requirement.

Example 03: Gravity Flow to Three Outlet Points

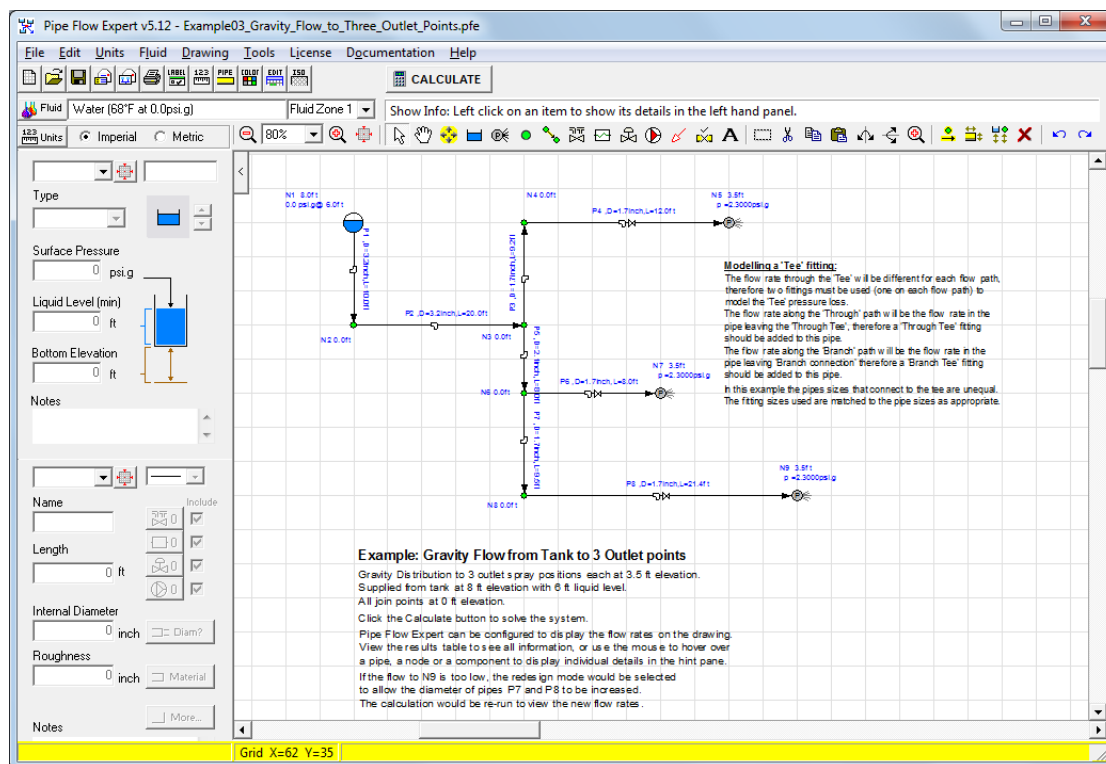


Figure 84 Example 03 – Gravity Flow to 3 Outlet Points

A tank placed higher than the outlet point of a system may provide the fluid head pressure to move the fluid through a system. The outlet points of the system could discharge to atmosphere, and therefore the end pressure requirement would be 0.0 bar g or 0.0 psi g.

In this example the discharge is to 3 outlet spray positions. Each spray nozzle requires a 2.3 psig pressure to produce the correct spray pattern. The pressure at each outlet point is set by changing the node type to End Pressure so that the pressure requirement can be entered.

The elevation of the tank has been set at 8 ft, the elevation of spray outlets has been set at 3.5 ft and the elevation of all other join points has been set at 0.0 ft.

Some of the pipes have been designed to include fittings and valves. The pressure drop through these fittings and valves will be modeled by Pipe Flow Expert while calculating a flow and pressure balance solution.

Pipe Flow Expert will calculate the flow rate that will reach each spray outlet position.

The fittings and valves on a pipe can be included or excluded from the calculations when solving the system by un-checking the appropriate check box on the Pipe Pane. To include the fittings and valves re-check the appropriate check box.

This example shows how to model a 'Tee' fitting by using a 'Through Tee' fitting and a 'Branch Tee' fitting on the pipes leaving the tee joint. The flow entering the joint will split in two directions.

By associating the appropriate type of 'Tee' fitting with the pipes leaving the joint, the correct flow rate will be used when calculating the pressure loss through each flow path.

Example 04: Fixed Flow Pumping to Three Tanks

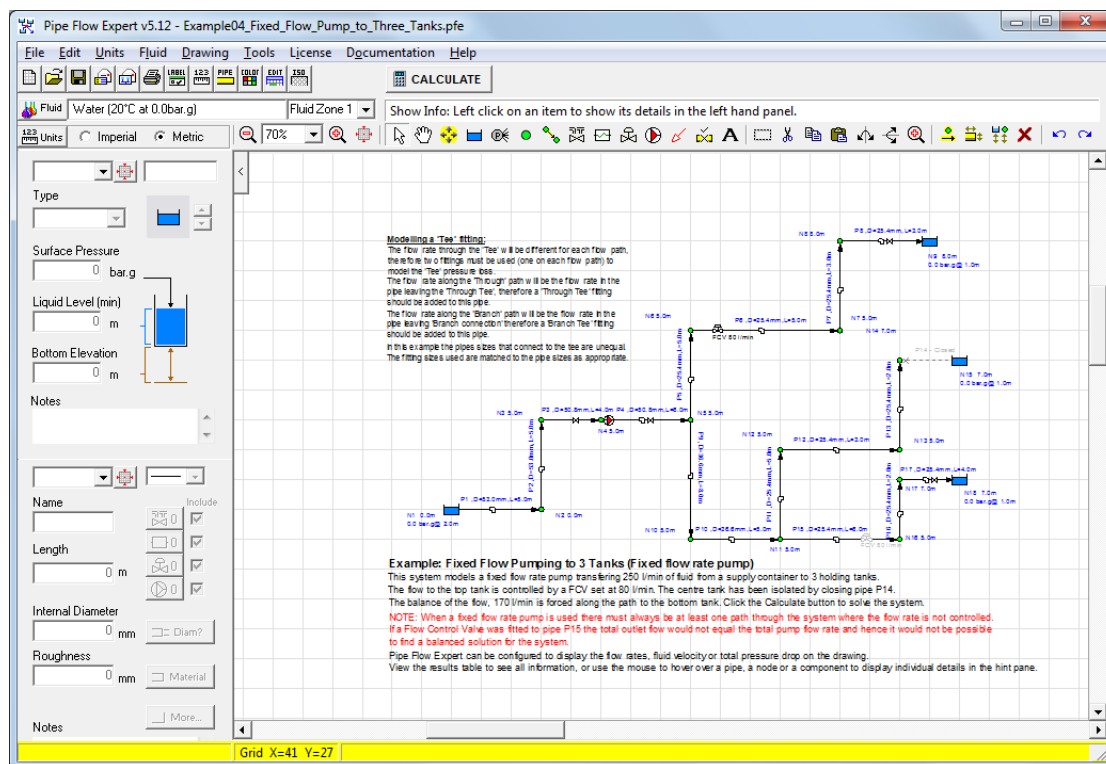


Figure 85 Example 04 – Fixed Flow Pumping to 3 Tanks

Fluid is to be transferred from a tank at low level to 3 tanks located at a higher level. A pump is needed as the motive force to provide the energy to move the fluid.

The system design includes a positive displacement pump which has a transfer rate 250 l/min. To model this arrangement a Fixed Flow Rate Pump has been included in the pipe network. The flow path leading to the center tank includes a Closed Pipe so that no flow will reach the center tank.

A Flow Control Valve has been installed on pipe P6, to control the flow to the top tank at 80 l/min. The balance of the flow, 170 l/min is forced along the path to the bottom tank.

NOTE: When a fixed flow rate pump is used there must always be at least one path through the system where the flow rate is not controlled.

If a Flow Control Valve was fitted to the pipe P15 feeding the bottom tank, the total outlet flow would not equal the total pumped flow rate and hence it would not be possible to find a balanced solution for the system. When this situation occurs the system is Over Controlled (there would be no part of the system which could vary), and the system can not be solved.

The labeling options have been set to display symbols for fittings (bends, tees, etc.) and valves. A small bend symbol and a small valve symbol are drawn on the pipe.

Pipe Flow Expert will calculate the flow rate that will reach each of the tanks. The pressure at the inlet to the pump, the Fluid Head added by the pump and the NPSHa will be calculated.

Note 2: If a Flow Control Valve flow rate setting is higher than the flow rate that would occur naturally in the pipe, the flow control valve will be unable to operate (a flow control valve cannot add fluid head to increase the flow rate). A warning will be issued in the Results Log: >>> System not solved. Flow control settings not met.

Either remove the flow control valve or reduce the specified flow rate of the control.

Example 05: Fixed Head Pumping to Three Tanks

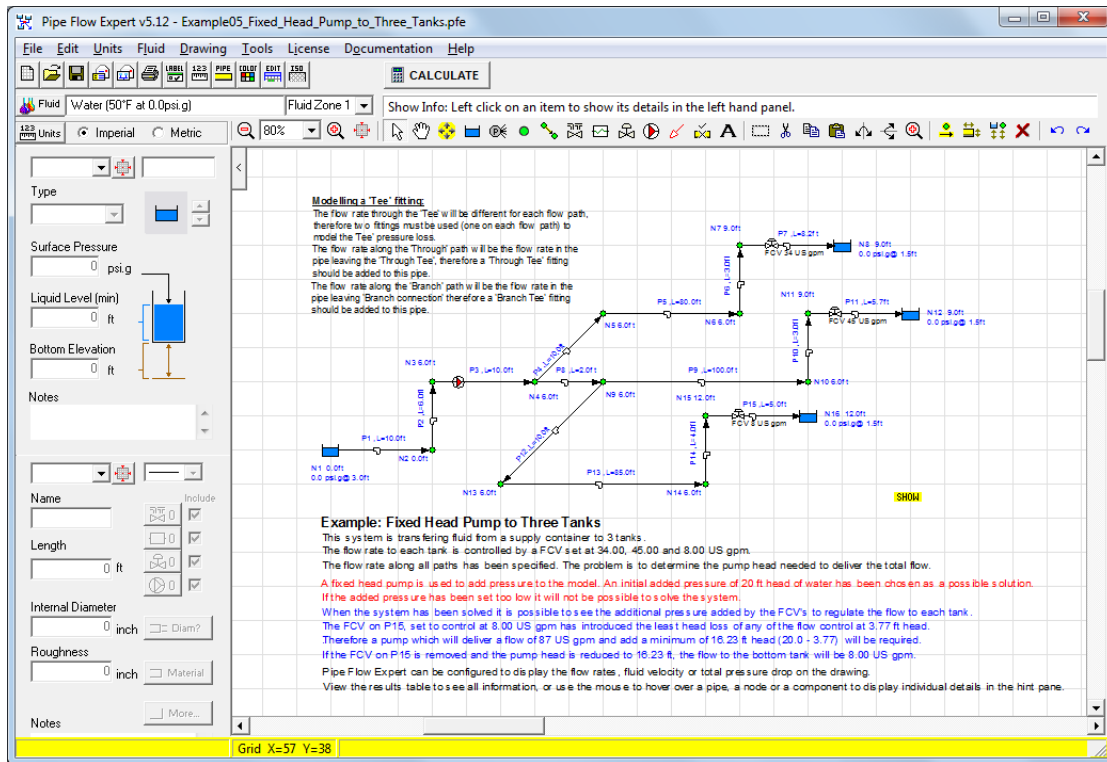


Figure 86 Example 05 – Fixed Head Pumping to Three Tanks

This example demonstrates a common situation encountered in fluid transfer situations where the required pump head has to be determined.

Fluid is to be transferred from a tank at low level to 3 tanks located at a higher level. The flow rate to each tank is controlled by a FCV set at 34.00, 45.00 and 8.00 gpm US.

The flow rate along all paths has been specified. The problem is to determine the pump head needed to deliver the total flow. A fixed head pump is used to add pressure to the model. An initial added pressure of 20 ft head of water has been chosen as a possible solution.

If the added pump head has been set too low it will not be possible to solve the system.

When the system has been solved it is possible to see the additional pressure added by the Flow Control Valves to regulate the flow to each tank.

The FCV on P15, set to a flow of 8.00 gpm US has introduced the least head loss of any flow control at 3.77 ft head. Therefore a pump is required that can deliver a flow of 87 gpm US and add a minimum of 16.23 ft head (20.0 – 3.77).

Example 06: Fixed Speed Pumping -Chemical Transfer System

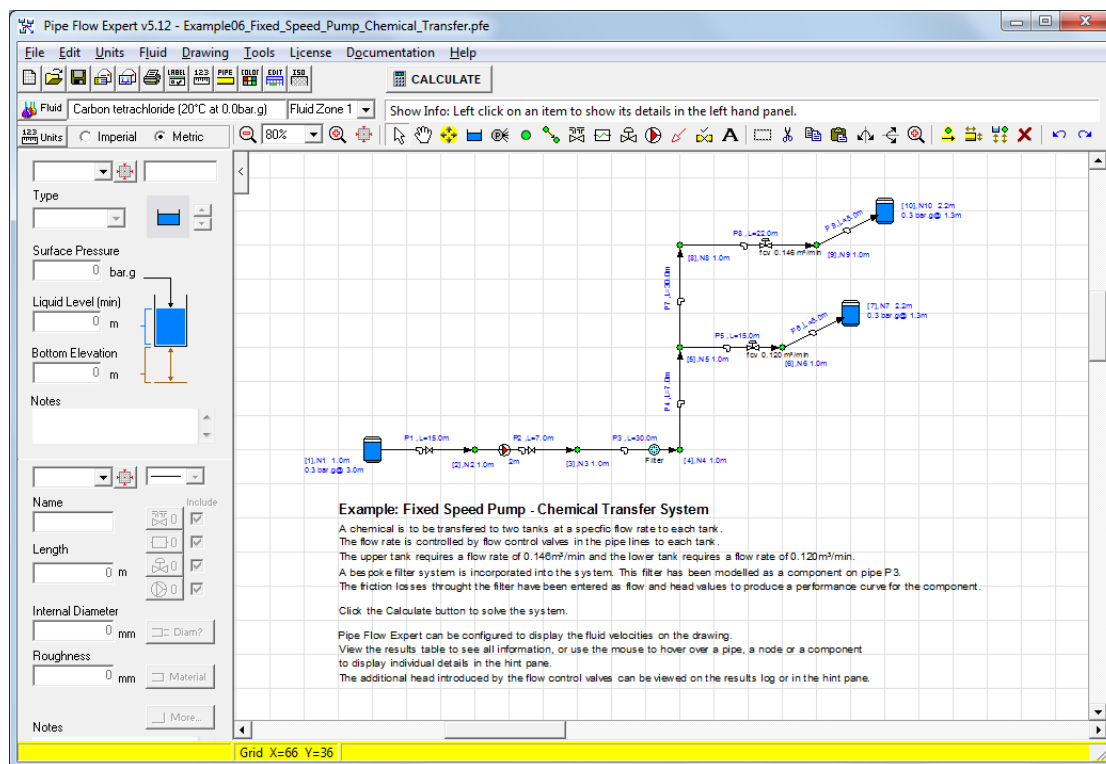


Figure 87 Example 06 – Fixed Speed Pumping - Chemical Transfer System

This system design includes a stainless steel pump used to transfer a chemical to two tanks at a set flow rate to each tank. The pump runs at a fixed speed producing a flow rate and pressure which will intersect with the system curve.

The flow to each tank is regulated by a flow control valve set to limit the flow rate. The system includes a special filter which has been modeled by adding a Component to pipe P3.

Component pressure losses can be a Fixed Loss (independent of flow rate), or can be modeled as a Component Curve Loss when the pressure loss will vary as the flow rate is changed.

All the flow rates in the system have been determined by the flow control valve setting. To find a 'Balanced Pressure' for the solution the fluid head provided by the pump (this will be constant for a specified flow rate) must be counter-acted by an additional resistance provided by the flow control valves.

Note: If a Flow Control Valve flow rate setting is higher than the flow rate that would occur naturally in the pipe, the flow control valve will be unable to operate (a flow control valve cannot add fluid head to increase the flow rate). A warning would be issued in the Results Log: >>> System not solved. Flow control settings not met. Either remove the flow control valve or reduce the specified flow rate of the control.

Generally it is not recommended that flow rate in all paths are controlled, although this is often done for expediency. A design based on limiting the flow in all paths is not an efficient design. The pump must be 'over-sized' in order for the system to work. If the developed pump head is not sufficiently great then Pipe Flow Expert will be unable to calculate a solution.

Example 07: Pressurized Pumping Stations

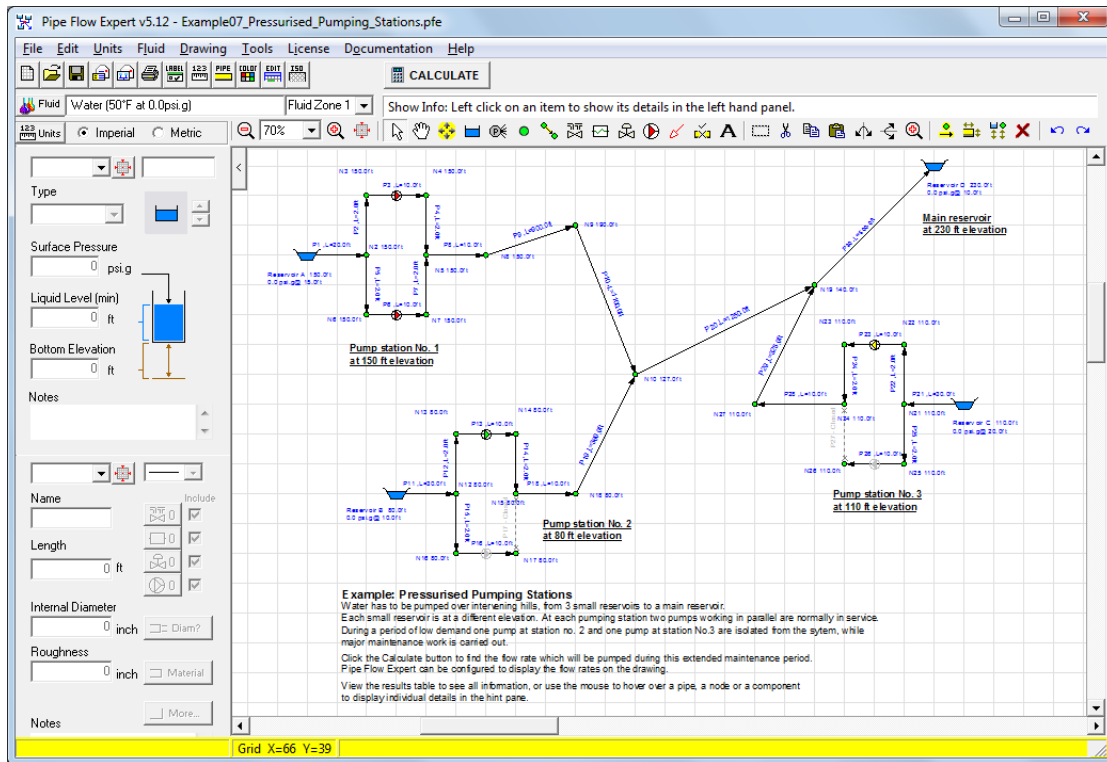


Figure 88 Example 07 – Pressurized Pumping Stations

This example demonstrates the power and flexibility of the Pipe Flow Expert software. Some pipes and pumps have been temporarily removed from the system, leaving isolated legs where flow will not occur. Pipe Flow Expert is able to identify this situation and find a solution for the remainder of the pipe network.

Water is to be transferred from 3 small reservoirs to a main reservoir. All the reservoirs are located at different elevations. The motive force is normally provided by 6 pumps, but two of the pumps have been taken out of service while major maintenance is carried out.

A Balanced Flow and a Balanced Pressure solution has to be found that coincides with a point on the performance curve of each pump that is in operation.

The pump performance is specified by entering the flow rate, fluid head, efficiency and NPSHr for a number of operating points. The Pump Data dialog allows this data to be entered and the Pump Performance Curve to be drawn.

Where a pump has been taken out of service a pipe has been closed to prevent recirculation of the flow, and the pump has been disabled by un-checking the pump check box on the Pipe Pane.

In results mode the Operating Point of a pump can be plotted on the pump performance graph. Limits may be set to define the Preferred Operating Range of a pump. If the operating point of the pump falls outside the preferred operating range, a warning will be shown in the results table.

Example 08: Water Circulation System

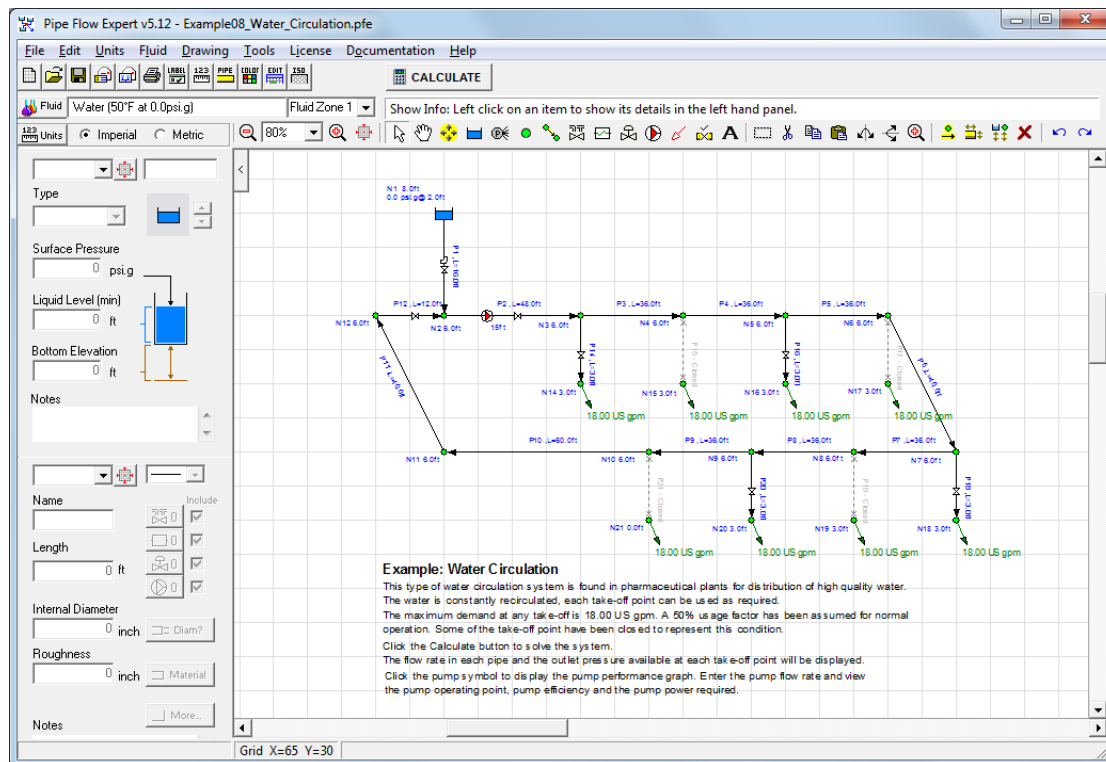


Figure 89 Example 08 – Water Circulation System

This system demonstrates a recirculation design where some of the fluid is returned to the start point to be circulated again and some of the fluid is removed. The fluid to be removed is specified by setting a Demand Out-flow from the system at various nodes.

This type of water circulation system is found in pharmaceutical plants for distribution of high quality water. The water is constantly circulated. Each take-off point can be used as required to draw water from the system.

To model the 50% normal usage factor some of the pipes have been closed using the 'Shut Off' option on the Pipe Pane. The isolated nodes are ignored to allow the system to be solved.

To reinstate the shut off pipes use the 'Re Open' option on the pipe pane.

By changing the shut-off / re-open status for each pipe, it is possible to create a series of snap-shots for the system under varying demand out flow conditions.

Example 09: Cooling – 12 Air Handling Units

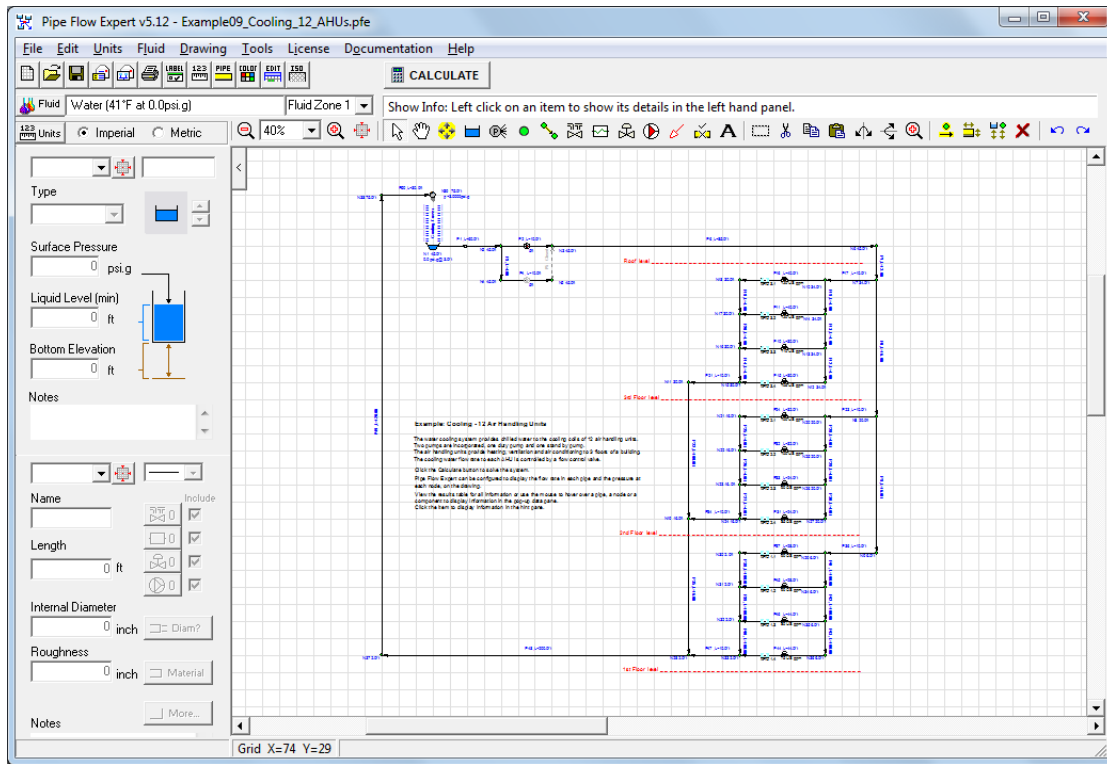


Figure 90 Example 09 – Cooling – 12 Air Handling Units

This system provides cooling water to the cooling coils of 12 AHU's located on 3 floors of a building. The cooling tower is located at the roof level.

The flow rate to each AHU is regulated by a Flow control Valve. Two pumps are included in the system design: One pump is the duty pump and the other pump is a standby pump. To even out the usage of the pumps, the duty and standby pumps are switched over every week.

Where the standby pump has been taken out of service, a pipe has been closed to prevent recirculation of the flow, and the pump has been disabled by un-checking the pump check box on the Pipe Pane.

The size of the pipework has been selected on a commercial basis for the design flow rates. When a solution has been calculated, the Results Tables will display a listing of the pipe, node, component, valve and pump data for the operating conditions. From this information it would be possible to judge if the velocities and pressure drops are within the anticipated limits.

The pressure losses introduced by the Flow Control Valves vary from around 80 ft head down to around 43 ft head. The pump adds around 143 ft head to the system. So it could be possible to reduce the operating speed of the pump by about 10% and still obtain the same total flow rate with a fluid head of about 100 ft added by the pump. The flow control valves would need to be reset to rebalance the flows, but the more efficient system would save around 27% of the energy previously used.

Example 10: Compressed Air Distribution

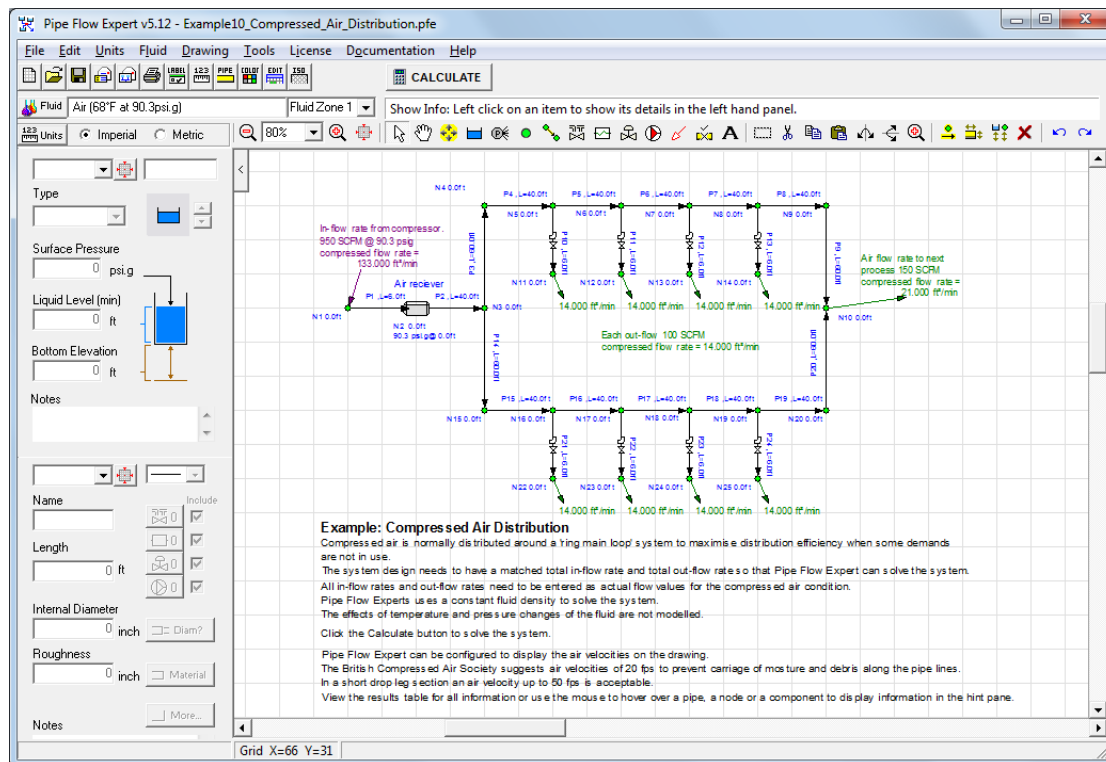


Figure 91 Example 10 – Compressed Air Distribution

Compressed air is normally distributed around a 'ring main loop' system to maximize distribution efficiency when some demands are not in use.

Pipe Flow Expert uses a constant fluid density to solve compressed gas systems. The effects of temperature and pressure changes of the compressed gas are not modeled.

All In-flow rates and Out-flow rates need to be entered as actual flow values for the compressed air condition.

The system design needs to have a matched total in-flow rate and total out-flow rate so that the mass flow continuity can be maintained to allow Pipe Flow Expert to solve the system correctly.

In this example a tank has been used as an 'Air Receiver'. This device acts as a buffer between the incoming supply and the remainder of the system. The fluid surface pressure in the 'Air Receiver' has been set at 90.3 psig to represent the compressed fluid pressure. The fluid density and viscosity has been set by using the Fluid Data Dialog to obtain these values for the fluid temperature and fluid pressure conditions.

See *section: Working with compressible fluids* for advice on how to interpret the results obtained.

Note: End Pressure demands, Flow Control Valves and Pumps should not be used in a system where compressed gas analysis is required, as these devices allow changes in fluid pressure which would conflict with the assumption of constant fluid density.

Example 11: HVAC System

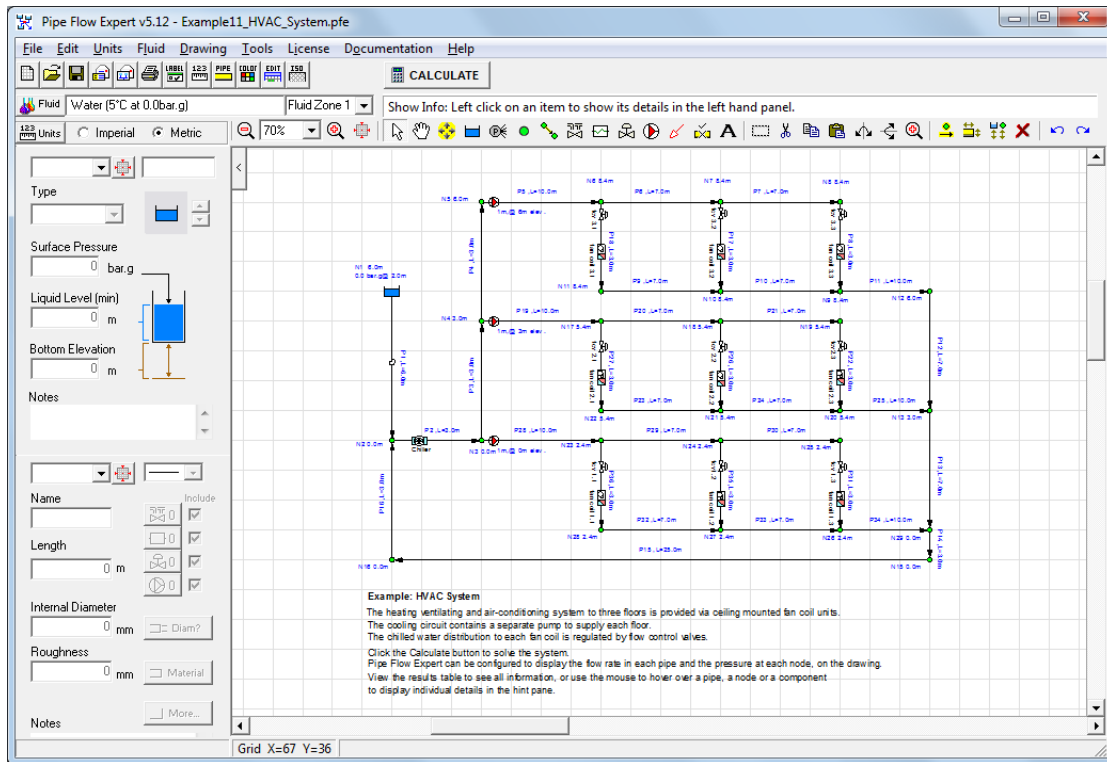


Figure 92 Example 11 – HVAC System

The heating, ventilating and air-conditioning system to three floors is provided via ceiling mounted fan coil units. The cooling circuit contains a separate pump to supply each floor.

The chilled water distribution to each fan coil is regulated by flow control valves. The fan coil units have been modeled as a Component Curve Loss when the pressure loss will vary as the flow rate is changed.

A water chiller unit is part of the common circuit of the system. This item has been modeled as a Component Curve Loss.

A header tank has been provided at N1, to increase the pressure at the pump inlets. The pump manufacturer recommends that the pumps should be used with a Flooded Suction inlet condition.

If a section of the system was to be isolated from the system, to carry out some other analysis (perhaps the top floor is unoccupied), it would be necessary to ensure that all the unused pipes are closed before a solution is calculated.

With this type of layout it would be easy to leave an un-solvable loop, if just the feed and return pipes from the top floor are closed. The unsolvable loop would contain Flow control valves which are modeled as Demand In-Flows and Demand Out-Flows (see *section: Calculation Theory*). This would mean that Pipe Flow Expert would include these Demand In-Flows and Demand Out-Flows in the calculation.

When a balanced solution cannot be found, Pipe Flow Expert will look for pipes where a solution can be found with a negative flow in the pipes. The user will be asked to confirm permission to reverse the direction of flow in some pipes.

Example 12: Reverse Pipe

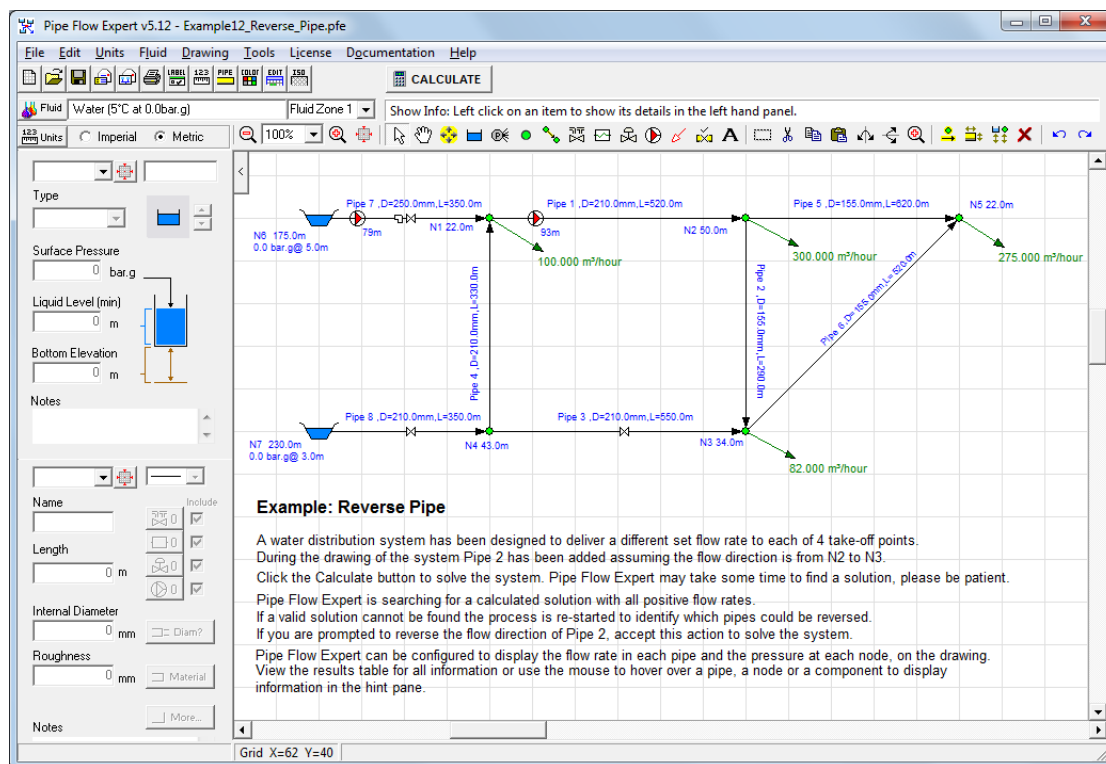


Figure 93 Example 12 – Reverse Pipe

A water distribution system has been designed to deliver a different set flow rate to each of 4 take-off points. During the drawing of the system, Pipe 2 has been added assuming the flow direction is from N2 to N3.

Pipe Flow Expert is searching for a calculated solution with all positive flow rates. If a valid solution cannot be found, the calculation process is restarted, but this time negative flow rates are accepted.

Pipe Flow Expert uses the negative flow rates to identify pipes where a reversed direction of flow might give a calculated solution with all positive flow rates. The calculations are complex and must be repeated over multiple iterations to find an acceptable solution.

If you are prompted to reverse the flow direction of Pipe 2, accept this action to solve the system.

Note: If you are prompted to reverse the direction of flow in more than one or two pipes it would be prudent to note the Pipe Id numbers which are to be reversed so that the original starting point could be re-created, if necessary.

Example 13: Energy Recovery with Turbine System

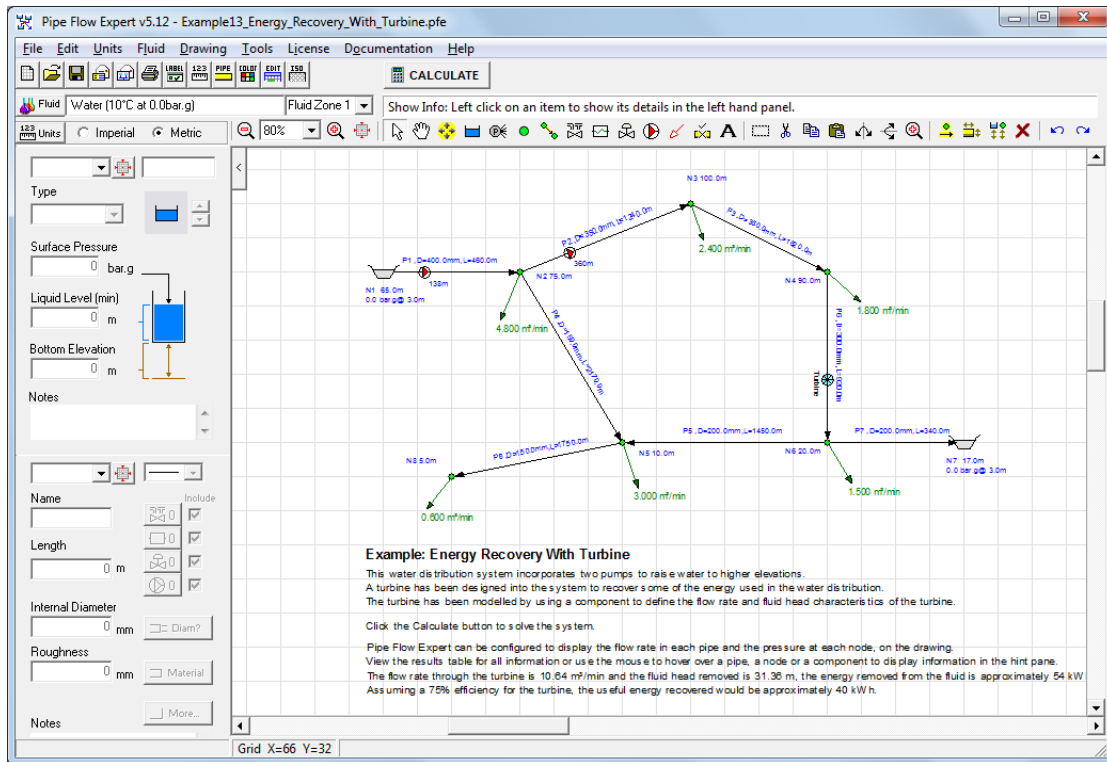


Figure 94 Example 13 – Energy Recovery with Turbine

This water distribution system incorporates two pumps to raise water to higher elevations. A turbine has been designed into the system to recover some of the energy used in the water distribution.

The turbine has been modeled by using a component and a component curve loss to define the flow rate and fluid head removal characteristics of the turbine.

The operation of a turbine is similar to a pump in reverse. Fluid head is removed from the system by the turbine (a pump adds fluid head to the system).

Note: A pump cannot be modeled with negative entries for flow or fluid head. This design has been adopted to try and reduce errors when pump performance data is being entered. Therefore it is not possible to use a pump component to model a turbine.

Even though the water distribution system has 3 take-off points, before the water flow enters the turbine it is still possible to recover a significant amount of energy from the turbine.

The flow rate through the turbine is 10.64 m³/min and the fluid head removed is 31.36 m.

The energy removed from the fluid is approximately 54 kWh. Assuming a 75% efficiency for the turbine the useful energy recovered would be approximately 40 kWh.

Note: Assuming 100 % efficiency

$KW = \text{mass flow (kg/s)} \times \text{energy gain (m hd)} \times g \div 1000$

$g = \text{acceleration due to gravity}$

$HP = \text{mass flow (lbs/min)} \times \text{energy gain (ft hd)} \div 33000$

$1 \text{ HP} = 33000 \text{ ft lbs/min}$

Example 14: Top-up Tanks – Pressurized Recirculation System

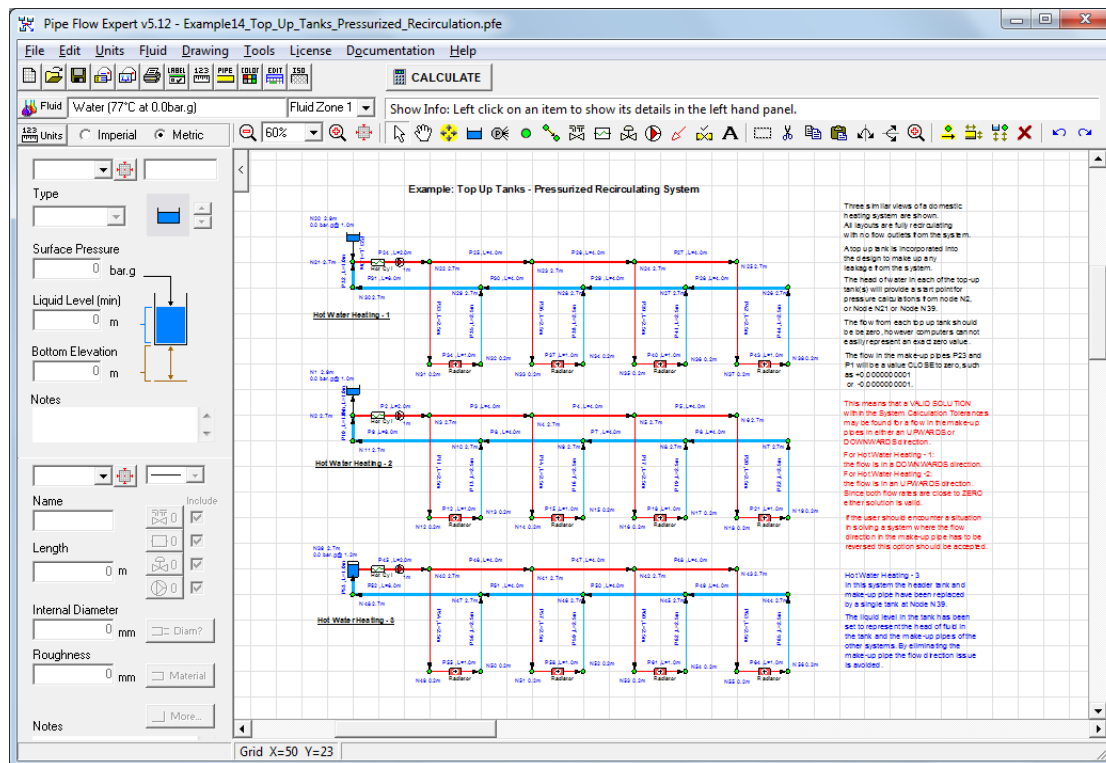


Figure 95 Example 14 – Top-up Tanks – Pressurized Recirculation System

Three similar views of a domestic heating system are shown. All layouts are fully recirculating with no flow outlets from the system. A top up tank is incorporated into the designs to make up any leakage from the system.

The head of water from the top up tank(s) will also provide a start point for pressure calculations.

The flow from each top up tank should be zero, however computers cannot easily represent an exact zero value. The calculated flow in the make-up pipe will be a value CLOSE to zero, such as +0.00000000000001 or -0.00000000000001.

This means that a SOLUTION WITHIN THE CALCULATION TOLERANCES may be found for flow in the make-up pipe in either an UPWARDS or DOWNWARDS direction.

Hot Water Heating-1: can be solved with make-up flow in a DOWNWARDS direction.

Hot Water Heating-2: can be solved with make-up flow in an UPWARDS direction.

Hot Water Heating-3: the header tank and the make-up pipe have been replaced with a single tank having an equivalent head of fluid. This eliminates the make-up flow direction issue.

The triple layout of the three systems shows a balanced flow/pressure result for each system.

If the user should encounter a situation where the flow direction in the make-up pipe has to be reversed this option should be accepted.

Example 15: Replacement Pipe Size

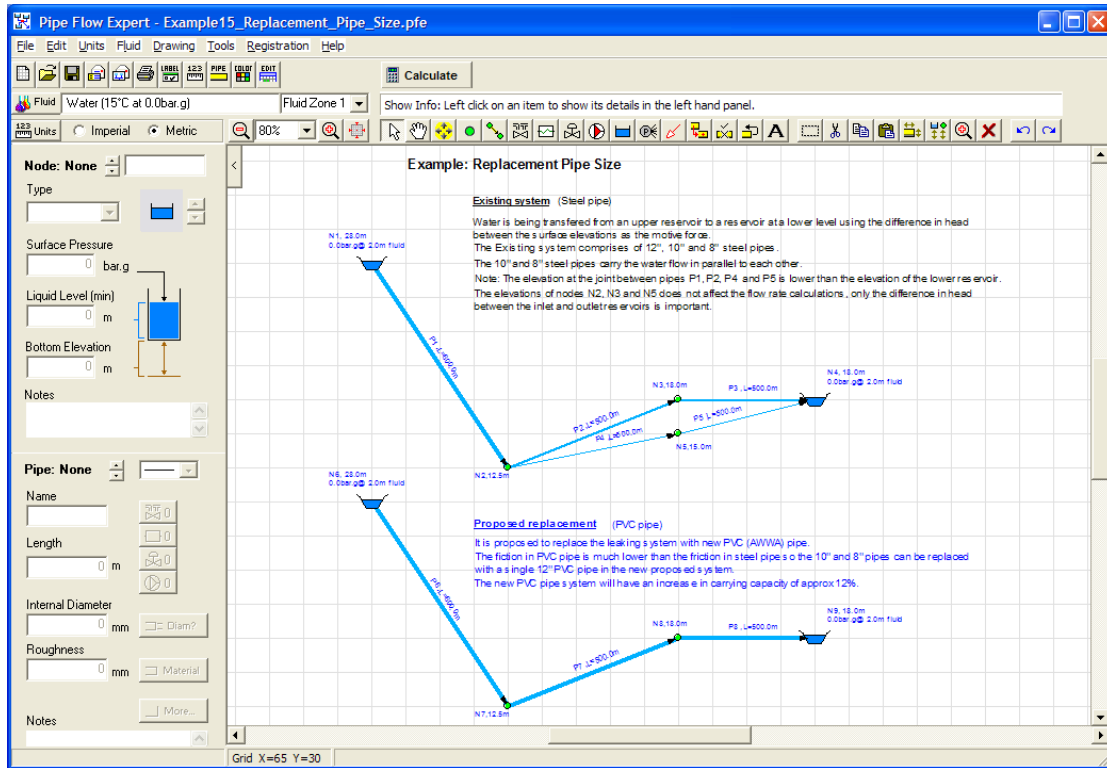


Figure 96 Example 15 – Replacement Pipe Size

Water is being transferred from an upper reservoir to a reservoir at a lower level using the difference in head between the surface elevations as the motive force.

The Existing system comprises of 12", 10" and 8" steel pipes. The 10" and 8" steel pipes carry the water flow in parallel to each other.

It is proposed to replace the leaking system with new PVC (AWWA) pipe.

The friction in PVC pipe is much lower than the friction in steel pipe so the 10" and 8" pipes can be replaced with a single 12" PVC pipe in the new proposed system.

The new PVC pipe system will have an increase in carrying capacity of approx 12%.

Example 16: Step-by-Step - Walkthrough Example

This section provides a step-by-step walkthrough example that shows how to create and solve a system which contains 5 pipes, 3 tanks and one pump. It will show how to design the system, calculate the solution and view the results.

Note: When Pipe Flow Expert is operating in trial mode, a maximum of pipes is allowed. And you cannot save a system. A licensed version of Pipe Flow Expert will allow up to 1000 pipes in a system.

Create a System using the following Step-by-Step Instructions

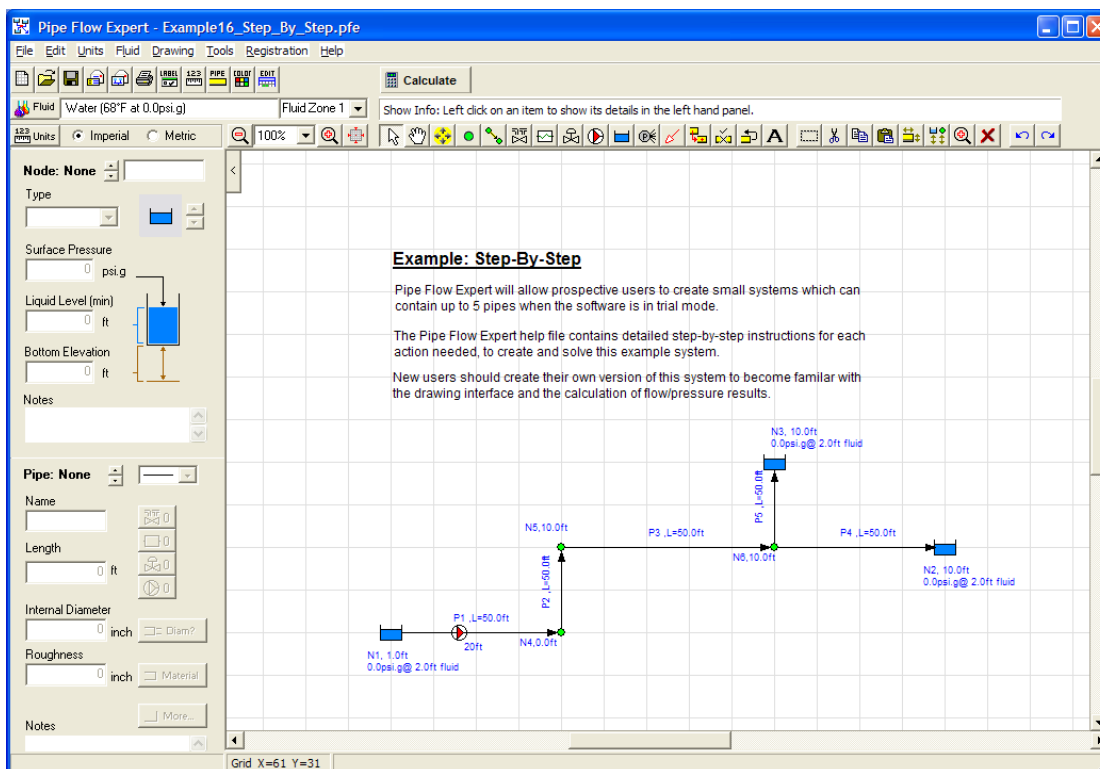




Figure 97 Example 16 – Step-by-Step



1. Select new grid – Click new grid tool button
2. Click yes at prompt to create a new grid.
3. Click the Imperial radio button to change the units to the imperial defaults.
4. Click yes to accept the Imperial default units.

Adding the tanks


5. Click the 'Tank' button on the tool bar, , the drawing cursor will change to a pointer and a tank symbol, .
6. Click on the grid, in the left hand quarter of the grid and about half way down the screen.
7. A tank will be drawn on the grid and the node pane will show the tank details.
8. Leave the tank surface pressure as 0.000 psig (the tank is open to atmosphere).

9. Edit the liquid level value, enter 2.000 (the liquid level in the tank is set to 2.000 ft).
10. Edit the bottom elevation value, enter 1.000 (the tank is located at 1.000 ft above your datum).
11. Move the cursor to a position about 12 grid intervals to the right and 2 grid intervals above the original tank position and click on the grid.
12. A second tank will be drawn on the grid and the node pane will show the tank details.
13. Leave the tank surface pressure as 0.000 psig (the tank is open to atmosphere).
14. Edit the liquid level value, enter 2.000 (the liquid level in the tank is set to 2.000 ft).
15. Edit the bottom elevation value, enter 10.000 (the tank is located at 10.000 ft above your datum).
16. Move the cursor to a position about 4 grid intervals to the left and 2 grid intervals above the second tank position and click on the grid.
17. A third tank will be drawn on the grid and the node pane will show the tank details.
18. Leave the tank surface pressure as 0.000 psig (the tank is open to atmosphere).
19. Edit the liquid level value, enter 2.000 (the liquid level in the tank is set to 2.000 ft).
20. Edit the bottom elevation value, enter 10.000 (the tank is located at 10.000 ft above your datum).

Adding the first pipe

21. Click the 'Add pipes button' on the toolbar, , the drawing cursor will change to a pointer with a node/pipe link symbol, .
22. Click the tank on the left of the drawing, to indicate that a pipe will be drawn from this node.
23. Move the cursor and the 'Rubber banding' line will appear to show where a pipe will be drawn.
24. Click at a grid intersection about 4 squares to the right of the tank.
25. A first pipe reminder message will appear, click yes to change the defaults.

Select the default pipe size

26. The Configuration Options – Pipe Defaults Tab is shown.
27. Click the Material button, , to display the list of pipe material types.
28. Scroll to choose Steel (ANSI) Sch. 40, highlight this line, click the 'Select' button (or double click on the Steel (ANSI) Sch. 40 line).
29. A list of pipe sizes will be displayed.
30. Scroll to choose 4" Nominal Size, highlight this line, click the 'Use selected size' button (or double click on the 4" Nominal Size line).
31. The chosen size is now displayed in the top pane of the Pipe diameter data window.
32. Click the 'Save Data to Pipe' button to set the default pipe values.
33. Edit the length value, enter 50 (the length of the default pipe is set to 50 ft)
34. Click the OK button to confirm the changes.
35. The details of Pipe 1 have now changed to match the default pipe details.

Add further pipes

36. Move the rubber band to a position about 2 grid intervals above the previous node and click on the grid to draw a vertical line in an upward direction.
37. Pipe 2 has been added, the details of Pipe 2 match the default pipe details.
38. Move the rubber band to a position about 4 grid intervals to the right of the previous node and click to draw a horizontal line.
39. Pipe 3 has been added, the details of Pipe 3 match the default pipe details.
40. Move the rubber band to draw a further horizontal line, click the grid when the cursor is on the tank at the right hand side of the grid.
41. Pipe 4 has been added, the details of Pipe 4 match the default pipe details.


Add a pipe at a new position

42. Right click the mouse to switch off the rubber banding and the pipe drawing.
43. Click the pipe node directly below the tank at the top of the grid (this should be N6).
44. The node will be highlighted and the rubber banding will re-appear.
45. Move the rubber band to draw a vertical line, click on the tank at the top of the grid.
46. Pipe 5 has been added, the details of Pipe 5 match the default pipe details.
47. Right click the mouse to switch off the rubber banding and the pipe drawing.



Note: If Pipe Flow Expert is operating in trial mode the maximum number of pipes allowed has been reached.

Setting the Node Elevations

As pipes are added, the elevations of the node at the **end** of each pipe, will have been set to match the elevation of the node at the **start** of the pipe.
The elevations of node N5 and node N6 need to be changed.



48. Click the 'Show item button' on the tool bar, .
49. Select Node 5, click node 5 on the drawing to choose this node. A highlight circle will be shown around the node. The node details will be displayed in the node pane.
50. Edit the Elevation of join value, enter 10.000 (the elevation is set to 10.000 ft).
51. Select Node 6, click node 6 on the drawing to choose this node. A highlight circle will be shown around the node. The node details will be displayed in the node pane.
52. Edit the Elevation of join value, enter 10.000 (the elevation is set to 10.000 ft).

Moving the Tanks and Nodes


53. To re-position items on the grid click the 'Drag and Move' button on the tool bar, .
54. All nodes, tanks, and text labels will be highlighted with a yellow circle.
55. Click on a yellow circle and drag the item to a new position.
56. Right click the mouse to turn off the 'Drag and Move' feature.
57. Note: Text labels associated with a node or a pipe can only be moved within in the area around a node. Pipe labels can only be moved within the pipes length.
58. To move more than one Tank or Node and the attached pipes click the 'Selection tool' button on the tool bar, .

59. Click on the grid, holding the mouse down drag the section rectangle to enclose the nodes to be moved, release the mouse. Click in the selection rectangle, holding the mouse down move the selected nodes to a new position.
60. Right click the mouse to turn off the 'Selection' feature.

Add a pump

61. Click the 'Show item button' on the tool bar, .
62. Select Pipe 1, click pipe 1 on the drawing to choose this pipe. A highlight bar will be shown around the pipe.
63. Click the pump symbol, , in the pipe pane to open the pump dialog.
64. Enter the performance data for the pump:

Details of pump on pipe 1, P1

Name	Along Pipe	at Elevation	Symbol
Step by Step	20.000 ft	1.000 ft	

Pump Type

☐ Variable Speed, Flow Set to 0.00 US gpm


☒ Fixed Speed, Running at 1700 rpm

Flow	Head	Efficiency	NPSHr
ft ³ /sec	ft.H ₂ O	%	ft.H ₂ O
0	20.000	0	0.570
0.2500	19.000	65	0.600
0.5000	16.500	72	0.650
0.7500	12.000	70	0.750
1.0000	5.000	60	0.950

Preferred Operating Region

From 80 % To 150 % of Flow at Best Efficiency Point

65. Click the 'Draw Graph' button to view the pump performance graph.

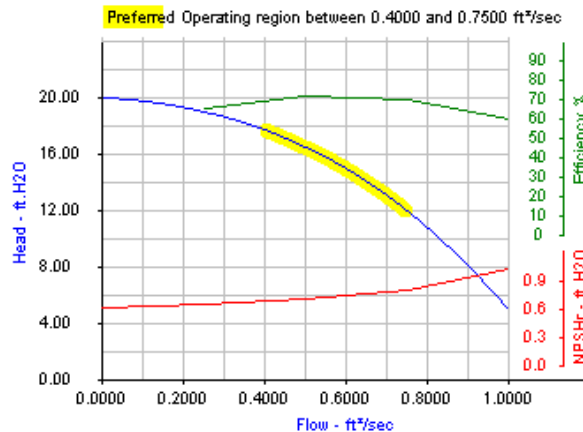


66. Click the 'Save to Pipe' button to close the Pump dialog.

The Pump symbol is now shown on Pipe 1.

Solving the system


67. Click the 'Calculate' button on the tool bar to find a balance flow and a balanced pressure state for the system.
68. The Results Log should appear and confirm that the network was solved successfully.
69. Click the 'View Results Sheet' button to view the Results tables.

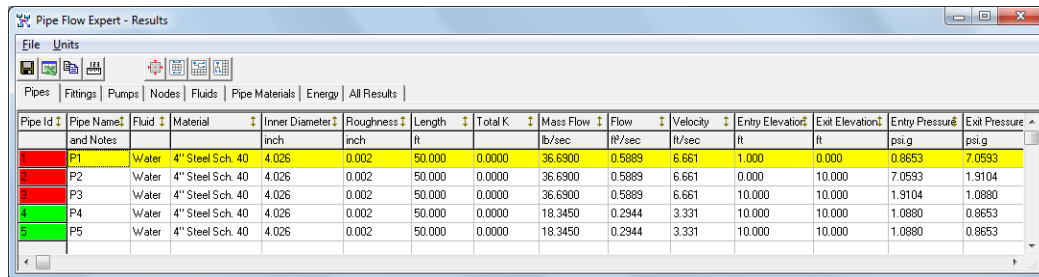

Pipe Id	Pipe Name	Fluid	Material	Inner Diameter	Roughness	Length	Total K	Mass Flow	Flow	Velocity	Entry Elevation	Exit Elevation	Entry Pressure	Exit Pressure
				inch	inch	ft		lb/sec	ft ³ /sec	ft/sec	ft	ft	psig	psig
1	P1	Water	4" Steel Sch. 40	4.026	0.002	50.000	0.0000	36.6900	0.5889	6.661	1.000	0.000	0.8653	7.0593
2	P2	Water	4" Steel Sch. 40	4.026	0.002	50.000	0.0000	36.6900	0.5889	6.661	0.000	10.000	7.0593	1.9104
3	P3	Water	4" Steel Sch. 40	4.026	0.002	50.000	0.0000	36.6900	0.5889	6.661	10.000	10.000	1.9104	1.0880
4	P4	Water	4" Steel Sch. 40	4.026	0.002	50.000	0.0000	18.3450	0.2944	3.331	10.000	10.000	1.0880	0.8653
5	P5	Water	4" Steel Sch. 40	4.026	0.002	50.000	0.0000	18.3450	0.2944	3.331	10.000	10.000	1.0880	0.8653

70. The results can also be viewed on the drawing. Click the 'View Results Drawing' button.
71. Close the results tables and hover over a pipe, node or tank on the drawing to display the results in the pop-up data panel, click an item to display data in the hint pane.
72. Click the pump symbol on Pipe 1 to view the pump operating point.

Re Design the system

73. To make amendments to the system design, click the Re-Design button.
74. Click the 'Show item button' on the tool bar, .
75. Select the tank at the right hand of the drawing (Node 2), click on the drawing to choose this tank. A highlight circle will be shown around the tank. The tank details will be displayed in the node pane.
76. Edit the Bottom Elevation of tank, enter 9.000 (the elevation is set to 9.000 ft), the pipe P4 will now be assumed to fall 1.000 ft over its length (from 10 ft elevation to 9 ft elevation). This will allow more water to flow along this pipe.
77. Click the 'Calculate' button on the tool bar to find a balance flow and a balanced pressure state for the new system design.

Example 17: Pressure Reducing Valves

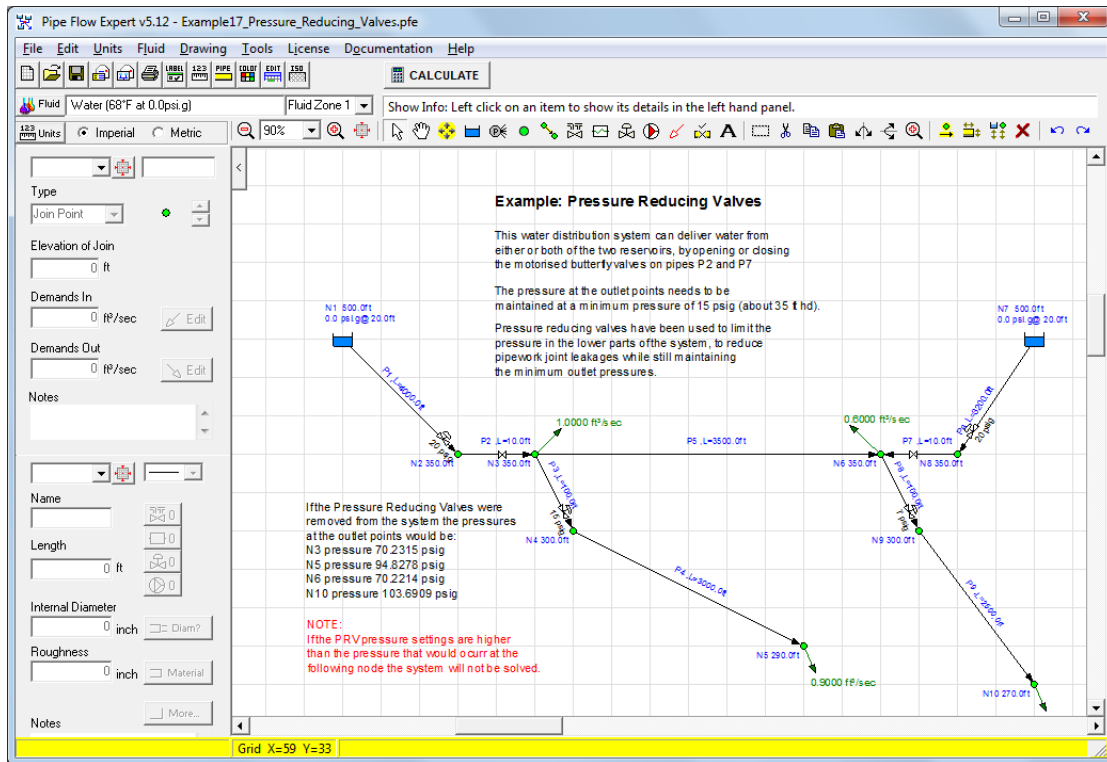


Figure 98 Example 17 – Pressure Reducing Valves

This water distribution system can deliver water from either or both of the two reservoirs, by opening or closing the motorized butterfly valves on pipes P2 and P7.

The pressure at the outlet points needs to be maintained at a minimum pressure of 15 psig (about 35 ft hd).

Pressure reducing valves have been used to limit the pressure in the lower parts of the system, to reduce pipework joint leakages while still maintaining the minimum outlet pressures.

Example 18: Back Pressure Valves

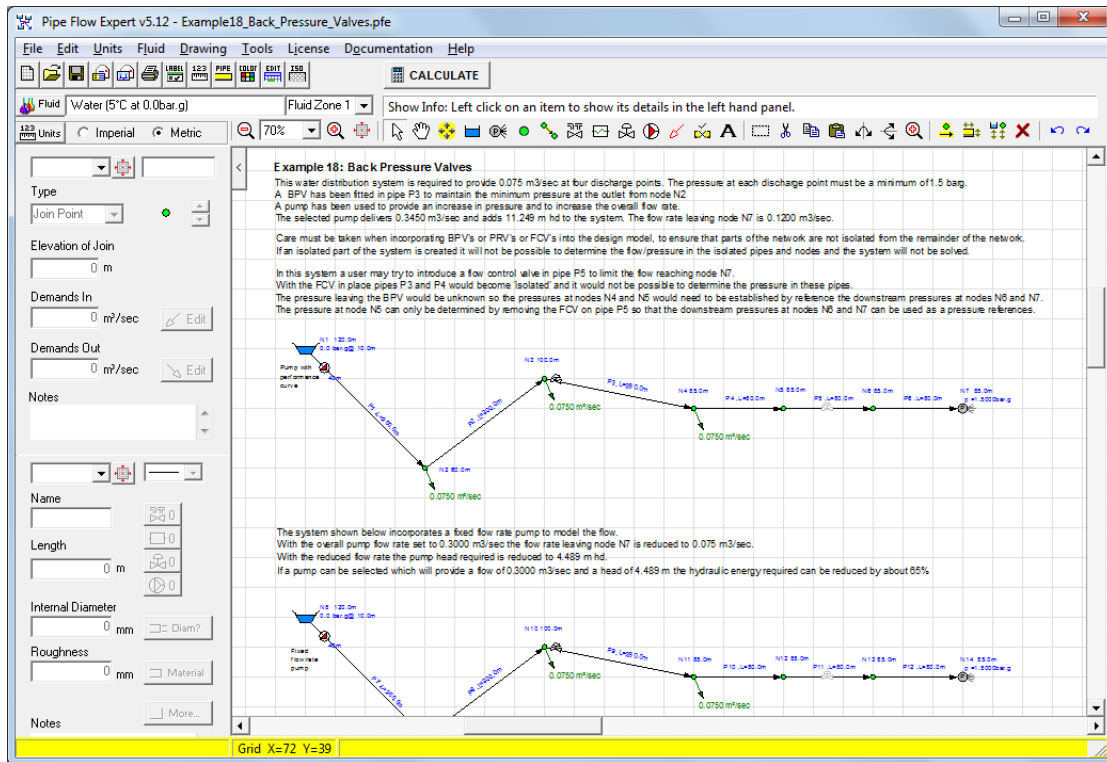


Figure 99 Example 18 – Back Pressure Valves

This water distribution system is required to provide a flow rate of 0.075 m³/sec, from each of four discharge points. The pressure at each discharge point must be a minimum of 1.5 barg.

A Back Pressure Valve (BPV) has been fitted in pipe P3 to maintain the minimum pressure at the outlet from node N2.

A pump has been used to provide an increase in pressure and to increase the overall flow rate. The selected pump delivers 0.3450 m³/sec and adds 11.249 m hd to the system. The flow rate leaving node N7 is 0.1200 m³/sec.

Care must be taken when incorporating BPVs or PRVs or FCVs into the design model, to ensure that parts of the network are not isolated from the remainder of the network.

If an isolated part of the system is created it will not be possible to determine the flow/pressure in the isolated pipes and nodes and the system will not be solved.

In this system a user may try to introduce a flow control valve in pipe P5 to limit the flow reaching node N7. With the FCV in place pipes P3 and P4 would become 'isolated' and it would not be possible to determine the pressure in these pipes.

The pressure leaving the BPV would be unknown so the pressures at nodes N4 and N5 would need to be established by reference the downstream pressures at nodes N6 and N7.

The pressure at node N5 can only be determined by removing the FCV on pipe P5 so that the downstream pressures at nodes N6 and N7 can be used as a pressure references.

Example 19: Multiple Fluid Zones

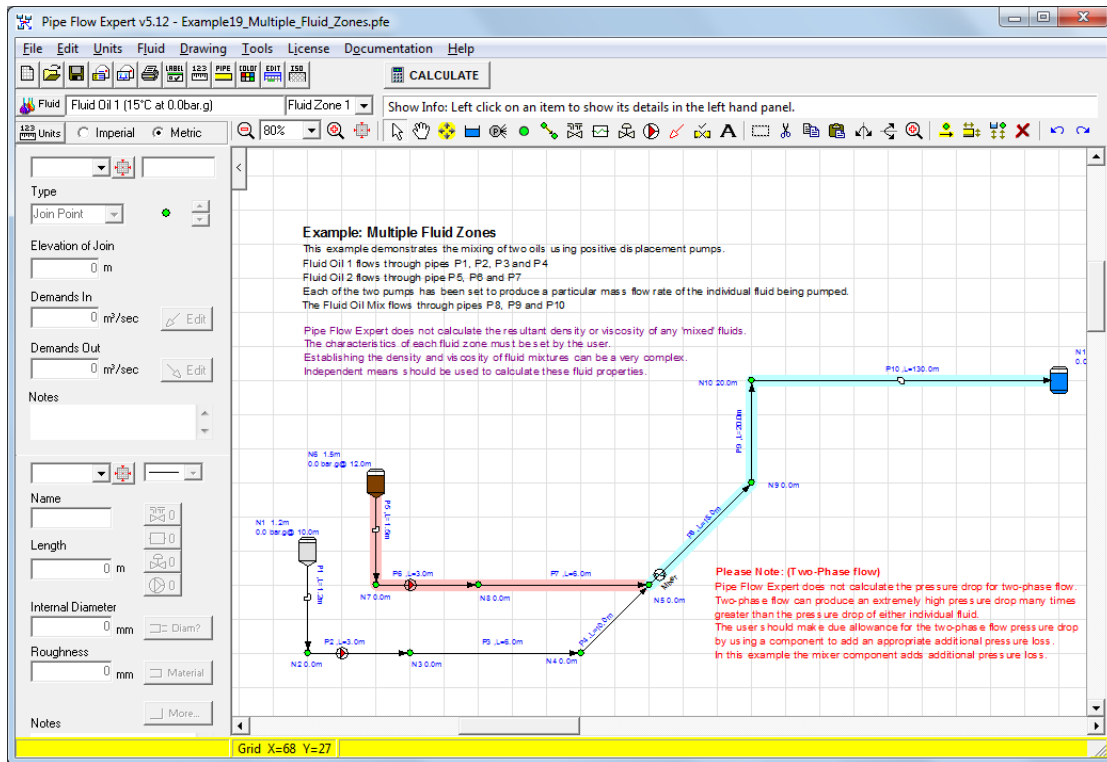


Figure 100 Example 19 – Multiple Fluid Zones

This example demonstrates the mixing of two oils using positive displacement pumps.

Fluid Oil 1 flows through pipes P1, P2, P3 and P4. Fluid Oil 2 flows through pipe P5, P6 and P7.

Each of the two pumps has been set to produce a particular mass flow rate of the individual fluid being pumped.

The Fluid Oil Mix flows through pipes P8, P9 and P10.

Please Note the following points:

Pipe Flow Expert does not calculate the resultant density or viscosity of any 'mixed' fluids.

The characteristics of each fluid zone must be set by the user.

Establishing the density and viscosity of fluid mixtures can be a very complex. Independent means should be used to calculate these fluid properties.

Pipe Flow Expert does not calculate the pressure drop for two-phase flow.

Two-phase flow can produce an extremely high pressure drop many times greater than the pressure drop of either individual fluid.

The user should make due allowance for the two-phase flow pressure drop by using a component to add an appropriate additional pressure loss.

In this example the mixer component adds additional pressure loss.

Example 20: Methane Pipeline Isothermal Flow

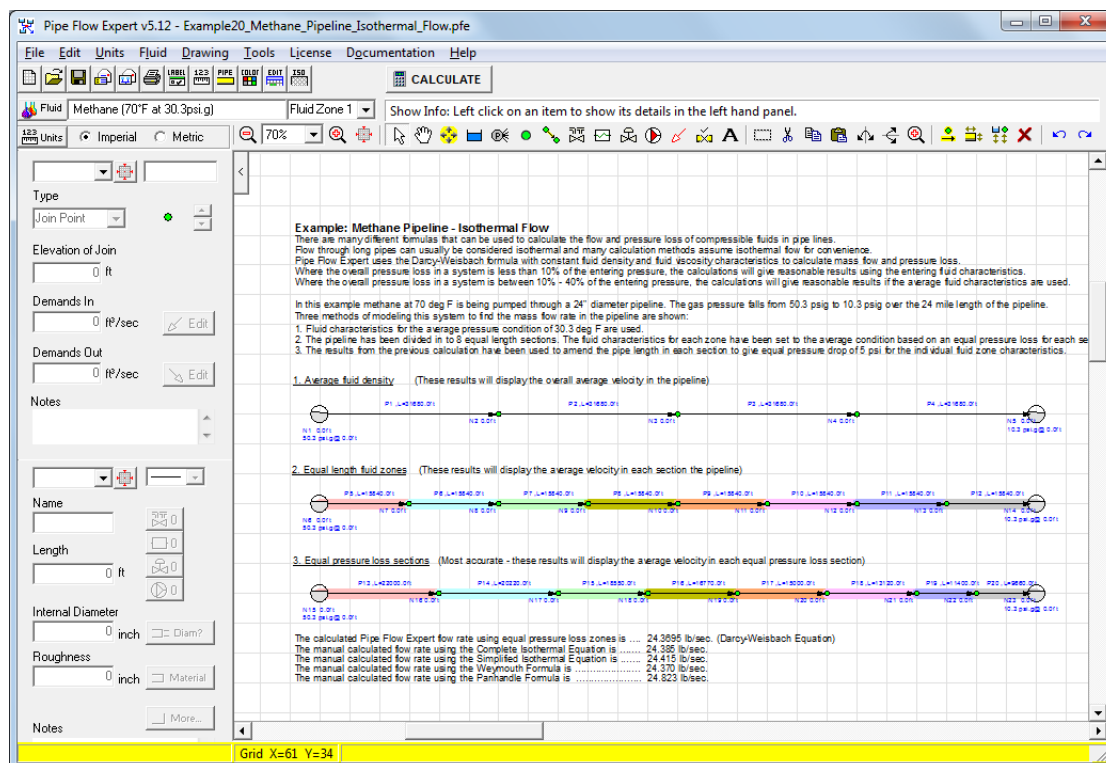


Figure 101 Example 20 – Methane Pipeline Isothermal Flow

There are many different formulas that can be used to calculate the flow and pressure loss of compressible fluids in pipe lines. Flow through long pipes can usually be considered isothermal and many calculation methods assume isothermal flow for convenience.

Pipe Flow Expert uses the Darcy-Weisbach formula with constant fluid density and fluid viscosity characteristics to calculate mass flow and pressure loss.

Where the overall pressure loss in a system is less than 10% of the entering pressure, the calculations will give reasonable results using the entering fluid characteristics. Where the overall pressure loss in a system is between 10% - 40% of the entering pressure, the calculations will give reasonable results if the average fluid characteristics are used.

In this example methane at 70 deg F is being pumped through a 24" diameter pipeline. The gas pressure falls from 50.3 psig to 10.3 psig over the 24 mile length of the pipeline.

Three methods of modeling this system to find the mass flow rate in the pipeline are shown:

- Method 1: Fluid characteristics for the average pressure condition of 30.3 deg F are used.
- Method 2: The pipeline has been divided in to 8 equal length sections. The fluid characteristics for each zone have been set to the average condition based on an equal pressure loss for each section.
- Method 3: The results from the previous calculation have been used to amend the pipe length in each section to give equal pressure drop of 5 psi for the individual fluid zone characteristics.

The calculated Pipe Flow Expert flow rate using equal pressure loss zones is 24.3695 lb/sec.
 The manual calculated flow rate using the Complete Isothermal Equation is 24.385 lb/sec.
 The manual calculated flow rate using the Simplified Isothermal Equation is 24.415 lb/sec.
 The manual calculated flow rate using the Weymouth Formula is 24.370 lb/sec.
 The manual calculated flow rate using the Panhandle Formula is 24.823 lb/sec.

Example 21: Zoned Compressed Air Flow

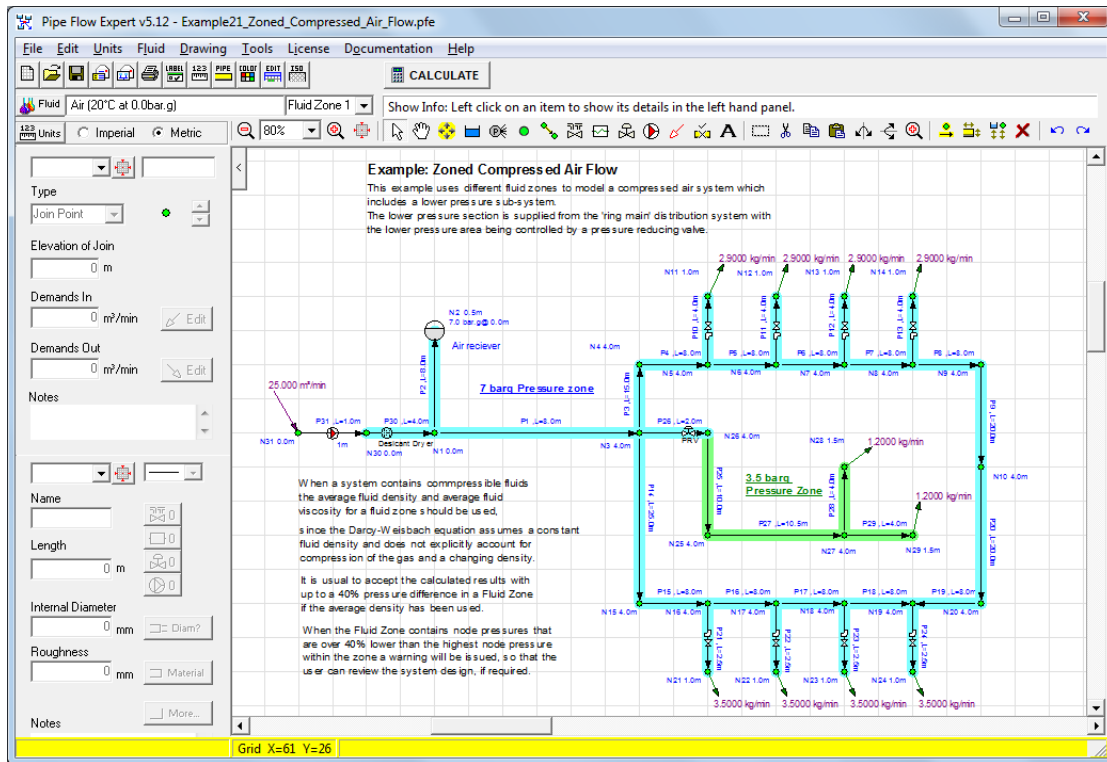


Figure 102 Example 21 – Zoned Compressed Air Flow

This example uses different fluid zones to model a compressed air system which includes a lower pressure sub-system.

The lower pressure section is supplied from the 'ring main' distribution system with the lower pressure area being controlled by a pressure reducing valve.

The inlet flow rates have been specified in m³/min.

The outlet flow rates have been specified in kg/min.

Colors are used to distinguish between the various fluid zones:

The air zone at 0.000 barg is not colored.

The air zone at 7.500 barg is colored aqua.

The air zone at 3.500 barg is colored green.

Example Isometric 01: Chilled Water Piping System

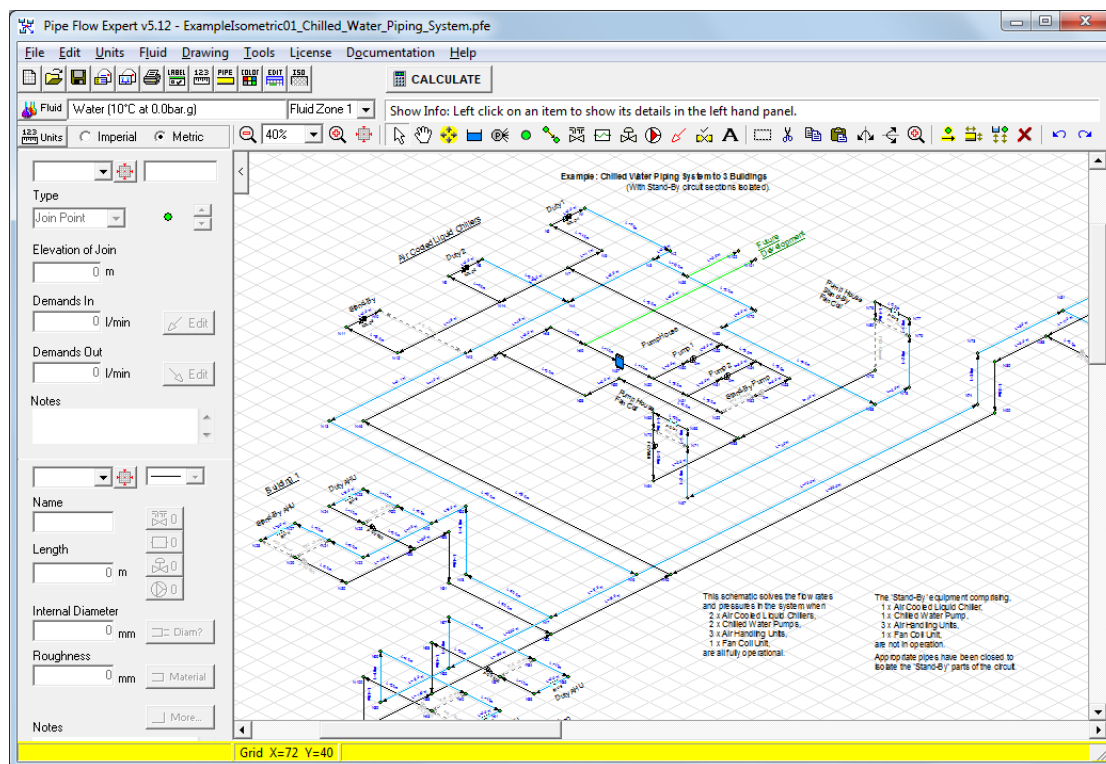


Figure 103 Example ISO 01 – Chilled Water Piping System

This Chilled Water System (CWS) provides cooling to three external buildings.

Each of the three Air Cooled Liquid Chillers (ALCL) can provide chilled water to the system.

Under normal operation two ACLC's, Duty 1 and Duty 2 are used to provide the chilled water. In the event of a mal-function or a period of high demand the Stand-By ACLC can be brought into service.

Pumps 1 and Pump 2 are normally used to circulate the chilled water. In the event of a mal-function or a period of high demand the Stand-By Pump can be brought into service.

The design of the system allows for one Duty AHU to provide the cooling for each building. A Stand-By AHU is provided for each building which could be brought into service in the event of a mal-function or a period of high demand.

The ambient temperature at the location of this installation may exceed the normal design parameters, for a few hours a day at certain periods during the year.

By opening or closing various pipes, selecting different Flow Control Valve setting, and closing or opening various valves it is possible to create a number of 'snap-shots' to represent the system operation over a wide range of possibilities.

Example Isometric 02: Three Floor HVAC System

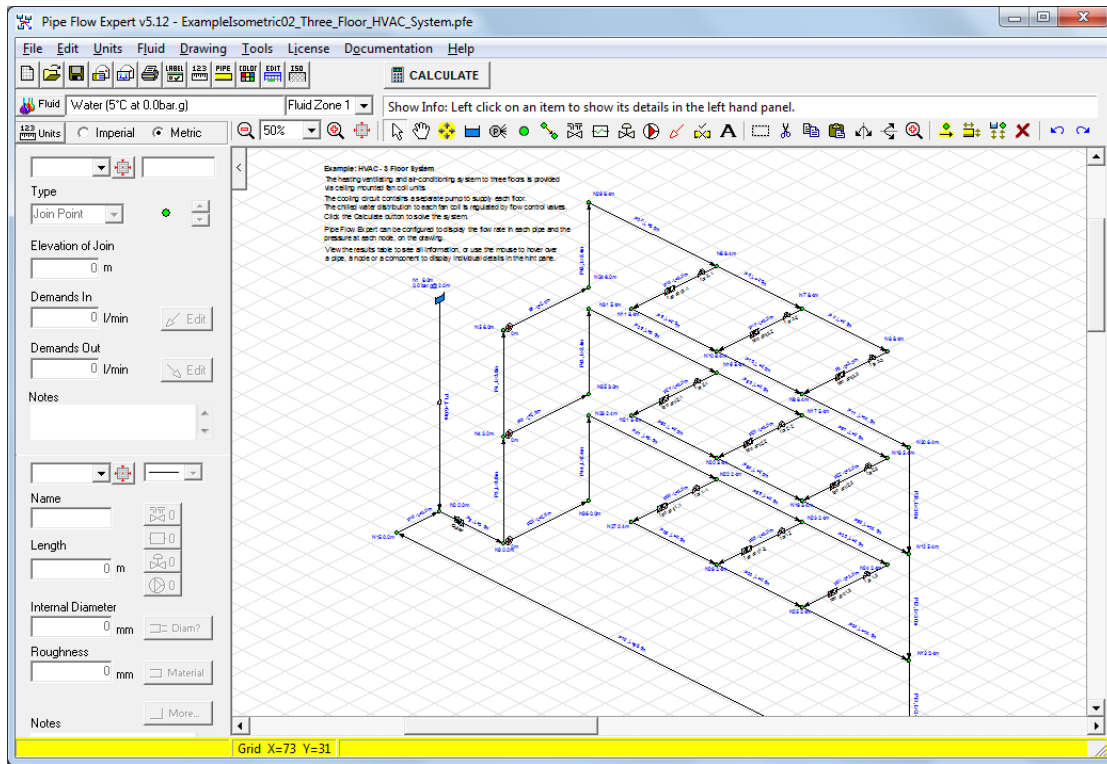


Figure 104 Example ISO 02 – Three Floor HVAC System

The heating ventilating and air-conditioning system to three floors is provided via ceiling mounted fan coil units. The cooling circuit contains a separate pump to supply each floor.

The chilled water distribution to each fan coil is regulated by flow control valves. The fan coil units have been modeled as a Component Curve Loss where the pressure loss will vary as the flow rate is changed. A water chiller unit is part of the common circuit of the system and this item has been modeled as a Component Curve Loss.

A header tank has been provided at N1, to increase the pressure at the pump inlets. The pump manufacturer recommends that the pumps should be used with a Flooded Suction inlet condition.

If a section of the system was to be isolated from the system, to carry out some other analysis (perhaps the top floor is unoccupied). It would be necessary to ensure that all the un-used pipes are closed before a solution is calculated.

Note: With this type of layout it would be easy to leave an un-solvable loop, if just the feed and return pipes from the top floor are closed. The un-solvable loop would contain Flow control valves which are modeled as Demand In-Flows and Demand Out-Flows (see section: Calculation Theory). Pipe Flow Expert would include these Demand In-Flows and Demand Out-Flows in the calculation. If a balanced solution cannot be found Pipe Flow Expert will look for pipes where a solution can be found with a negative flow in a pipe. It is possible to create a design which does not have a valid solution and this normally means that there is a real problem with your system design, as it is defined.

Example Isometric 03: Water Circulation System

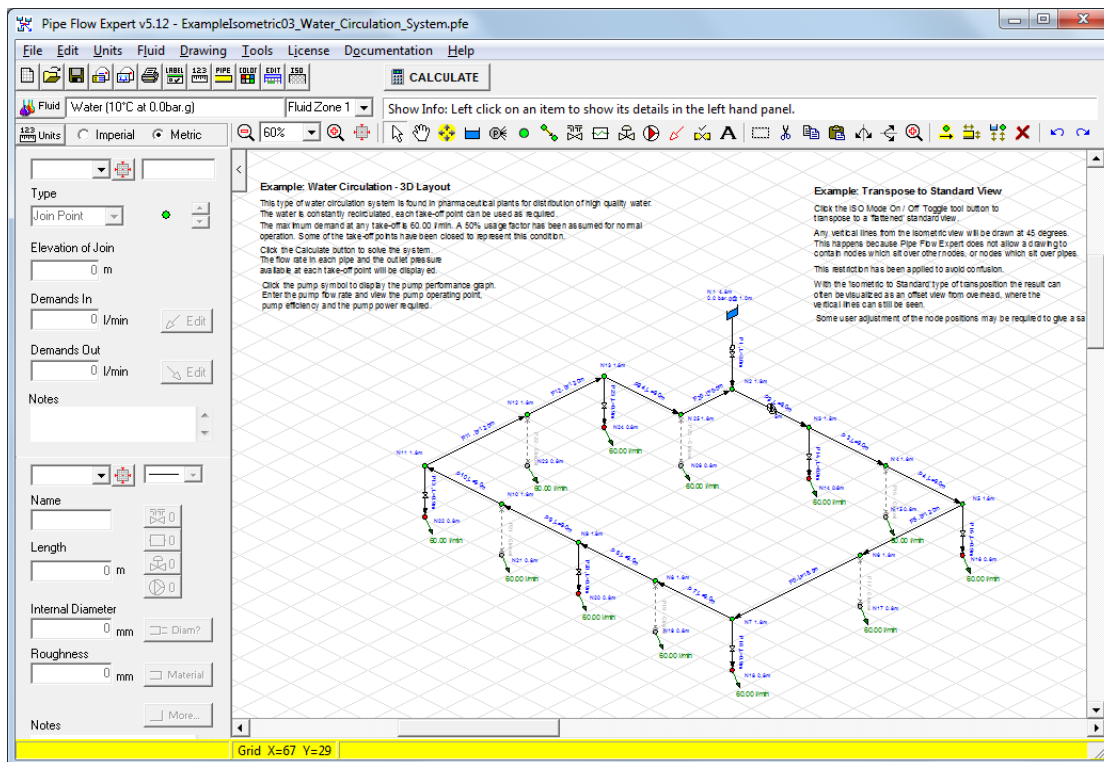


Figure 105 Example ISO 03 – Water Circulation System

This system demonstrates a recirculation design where some of the fluid is returned to the start point to be circulated again and some of the fluid is removed. The fluid to be removed is specified by setting a Demand Out-flow from the system at various nodes.

This type of water circulation system is found in pharmaceutical plants for distribution of high quality water. The water is constantly circulated, each take-off point can be used as required to draw water from the system.

To model the 50% normal usage factor some of the pipes have been closed using the 'Shut Off' option on the Pipe Pane. The isolated nodes are ignored to allow the system to be solved.

To reinstate the shut off pipes use the 'Re Open' option on the pipe pane.

By changing the shut-off / re-open status for each pipe, it is possible to create a series of snap-shots for the system under varying demand out flow conditions.

Example Isometric 04: Cooling with AHUs

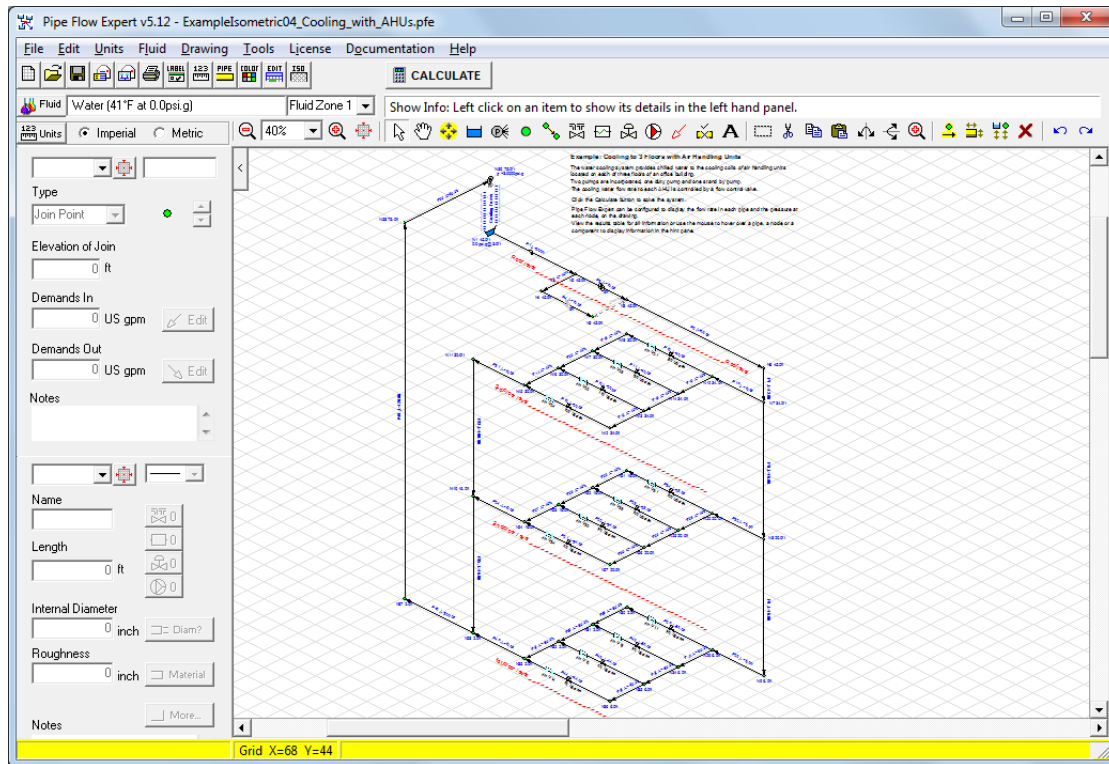


Figure 106 Example ISO 01 – Cooling With AHUs

This system provides cooling water to the cooling coils of 12 AHU's located on 3 floors of a building. The cooling tower is located at the roof level.

The flow rate to each AHU is regulated by a Flow control Valve. Two pumps are included in the system design, one pump is the duty pump and the other pump is a standby pump. To even out the usage of the pumps the duty and standby pumps are switched over every week.

Where the standby pump has been taken out of service a pipe has been closed to prevent recirculation of the flow, and the pump has been disabled by un-checking the pump check box on the Pipe Pane.

The size of the pipework has been selected on a commercial basis for the design flow rates. When a solution has been calculated the Results Tables will display a listing of the pipe, node, component, valve and pump data for the operating conditions. From this information it would be possible to judge if the velocities and pressure drops are within the anticipated limits.

The pressure losses introduced by the Flow Control Valves vary from around 80 ft head down to around 43 ft head. The pump adds around 143 ft head to the system. So it could be possible to reduce the operating speed of the pump by about 10% and still obtain the same total flow rate with a fluid head of about 100 ft added by the pump. The flow control valves would need to be reset to rebalance the flows, but the more efficient system would save around 27 % of the energy previously used.

Example Isometric 05: Production Area Cooling Alt Views

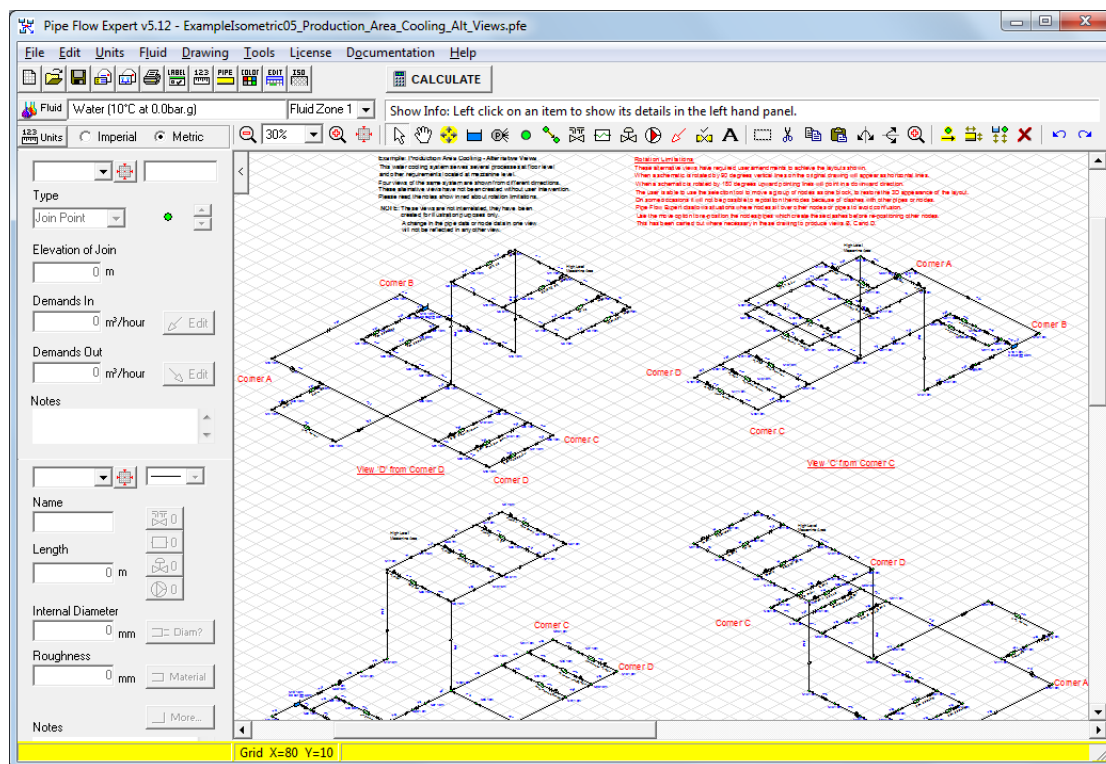


Figure 107 Example ISO 05 – Production Area Cooling Alt Views

This water cooling system serves several machines in a production area located at a ground level. Some ancillary services are located at a mezzanine level.

Four views of the same system are shown from different directions. These alternative views have been created by using the selection tool with the rotation and mirror options to create additional copies of the system from different view points. Some user intervention has been necessary to re-position nodes and labels to obtain these alternative views.

When a schematic is rotated by 90 degrees vertical lines on the original drawing will appear as horizontal lines. When a schematic is rotated by 180 degrees upward pointing lines will point in a downward direction. The user is able to use the selection tool to move a group of nodes as one block, to restore the 3D appearance of the layout.

On some occasion it will not be possible to reposition the nodes because of clashes with other pipes or nodes. Pipe Flow Expert disallows situations where nodes sit over other nodes or pipes to avoid confusion. Use the move option to re-position the nodes/pipes which create these clashes before re-positioning other nodes.

Example Isometric 06: Compressed Air Fluid Zones

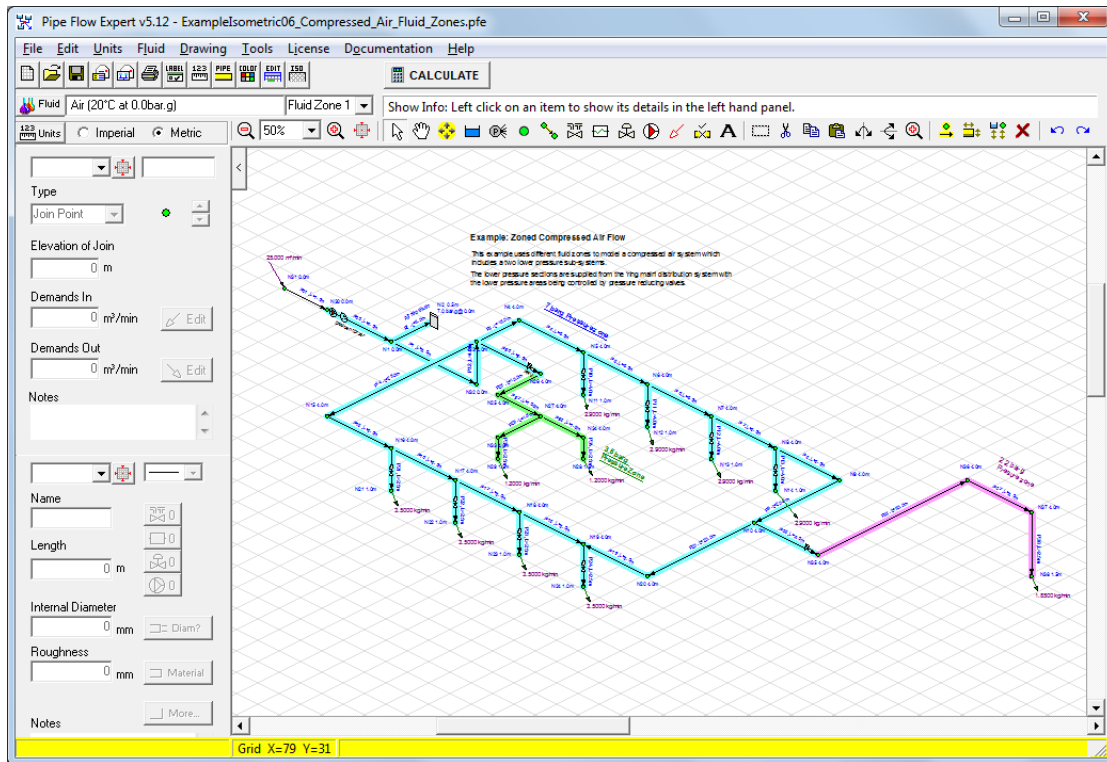


Figure 108 Example ISO 06 – Compressed Air Fluid Zones

This compressed air system has 3 different pressure zones. Pressure reducing valves are used to maintain lower pressure zones, which are fed from the higher pressure zone.

Pipe Flow Expert uses a constant fluid density and viscosity within a fluid zone to solve compressed gas systems. The effects of temperature and pressure changes of the compressed gas within a fluid zone are not modeled. Where significant fluid density and viscosity changes occur throughout a system, it is possible to use up to 9 different fluid zones to represent the changing conditions that may be encountered.

Within a flowing system the mass flow rate of the gas will remain constant, even though the volume flow rate may vary due to pressure or temperature changes of the compressed gas. For this reason it is recommended that the mass flow rates should be used in the system design, in preference to volumetric flow rates.

Where possible the average fluid density and the average fluid viscosity should be used within each fluid zone, to produce accurate results. The results may be considered to be acceptable where the pressure loss within a fluid zone is below 40% of the highest fluid pressure in that fluid zone.

In this example a tank has been used as an 'Air Receiver' and this device acts as a reservoir to take up the difference between the incoming supply and the demands from the system. The fluid surface pressure in the 'Air Receiver' has been set at 90.3 psig to represent the compressed fluid pressure. The fluid density and viscosity has been set by using the Fluid Data Dialog to obtain these values for the fluid temperature and fluid pressure conditions.

Example Isometric 07: Fire Protection Sprinkler System

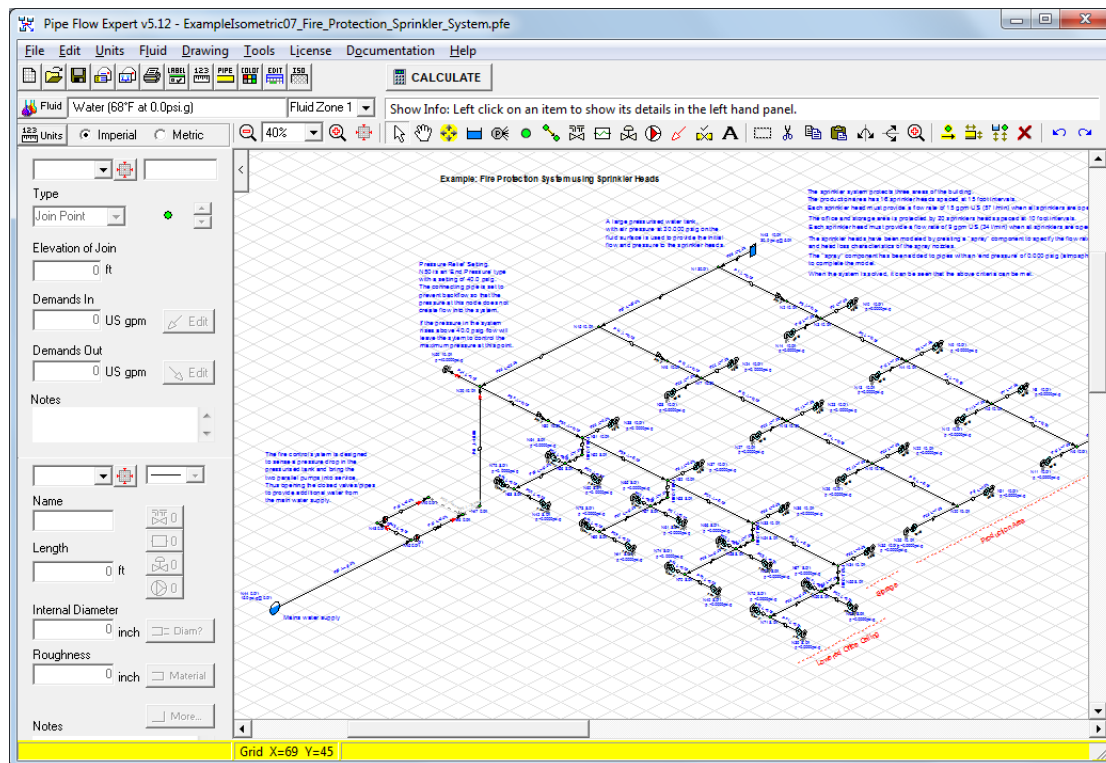


Figure 109 Example ISO 07 – Fire Protection Sprinkler System

The sprinkler system protects three areas of the building.

A large pressurized water tank, with air pressure at 30.000 psig on the fluid surface is used to provide the initial flow and pressure to the sprinkler heads. If the initial water flow does not extinguish the fire two pumps are brought into service provide water from the mains supply.

The production area has 16 sprinkler heads spaced at 15 foot intervals. Each sprinkler head must provide a flow rate of 15 gpm US (57 l/min) when all sprinklers are operating.

The office and storage area is protected by 20 sprinklers heads spaced at 10 foot intervals. Each sprinkler head must provide a flow rate of 9 gpm US (34 l/min) when all sprinklers are operating.

The sprinkler heads have been modeled by creating a "spray" component to specify the flow rate and head loss characteristics of the spray nozzles.

The "spray" component has been added to pipes with an 'end pressure' of 0.000 psig (atmospheric pressure) to complete the model.

When the system is solved, it can be seen that the above criteria can be met.

Example Isometric 08: Campus Chilled Water Cooling

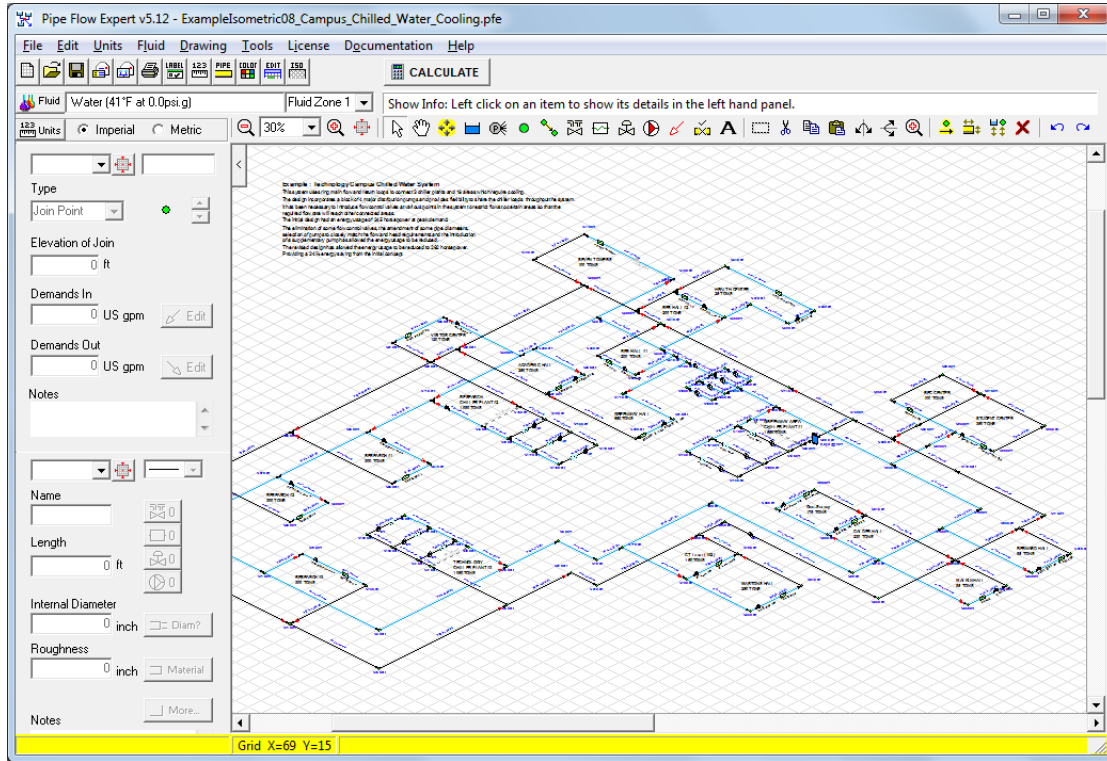


Figure 110 Example ISO 08 – Campus Chilled Water Cooling

This system uses ring main flow and return loops to connect 3 chiller plants and 18 areas which require cooling.

The design incorporates a block of 4 major distribution pumps and provides flexibility to share the chiller loads throughout the system. It has been necessary to introduce flow control valves at various points in the system to restrict flows to certain areas so that the required flow rate will reach other connected areas.

The initial design had an energy usage of 345 horsepower at peak demand. The elimination of some flow control valves, the amendment of some pipe diameters, selection of pumps to closely match the flow and head requirements and the introduction of a supplementary pump has allowed the energy usage to be reduced.

The revised design has allowed the energy usage to be reduced to 262 horsepower. Providing a 24% energy saving from the initial concept.

Example Isometric 09: Water Mist Fire Protection

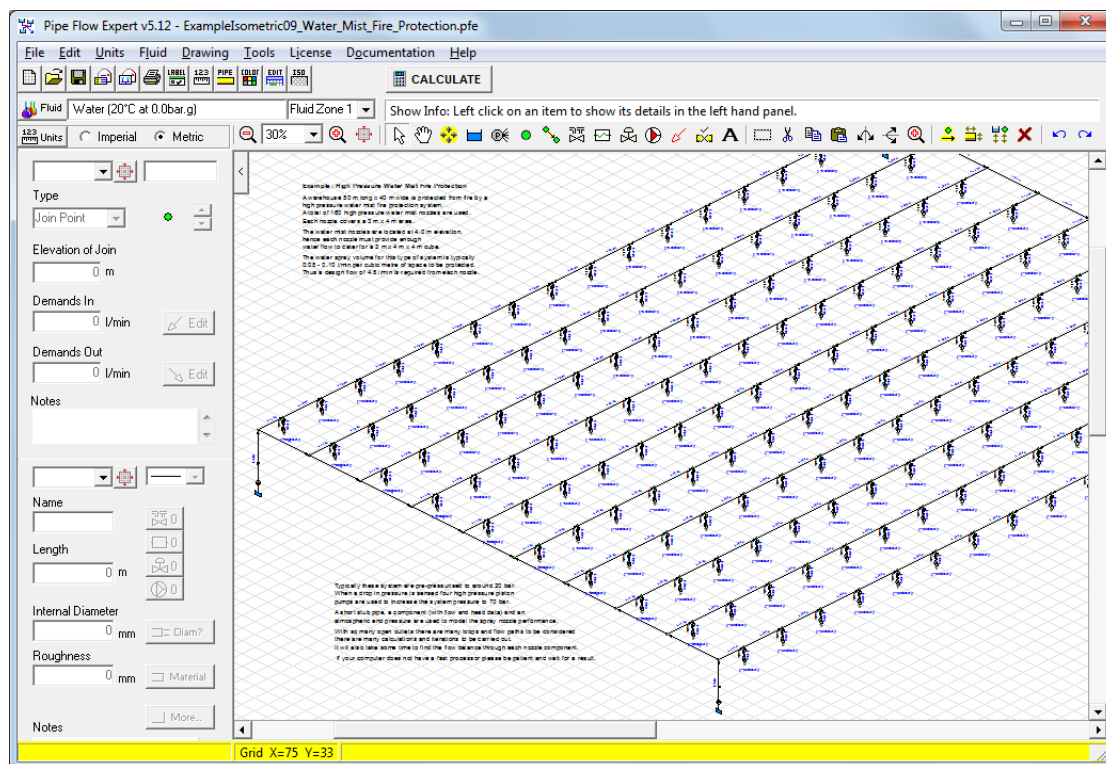


Figure 111 Example ISO 09 – Water Mist Fire Protection

A warehouse 50 m long x 40 m wide is protected from fire by a high pressure water mist fire protection system.

A total of 160 high pressure water mist nozzles are used. Each nozzle covers a 3 m x 4 m area.

The water mist nozzles are located at a 4.0 m elevation, hence each nozzle must provide enough water flow to cater for a 3 m x 4 m x 4 m cube. The water spray volume for this type of system is typically 0.08 - 0.10 l/min per cubic meter of space to be protected.

Thus a design flow of 4.8 l/min is required from each nozzle.

Typically these systems are pre-pressurized to around 20 barg. When a drop in pressure is sensed four high pressure piston pumps are used to increase the system pressure to 70 barg. A short stub pipe, a component (with flow and head data) and an atmospheric end pressure are used to model the spray nozzle performance.

With so many open outlets there are many loops and flow paths to be considered there are many calculations and iterations to be carried out.

It will also take some time to find the flow balance through each nozzle component.

If your computer does not have a fast processor please be patient and wait for a result.

Calculation Theory and Method of Solution

The Pipe Flow Expert program will allow you to draw a complex pipeline system and analyze the features of the system when flow is occurring. Pipe Flow Expert calculates the balanced steady flow and pressure conditions of the system. The reported results include the flow rates for each pipe, the fluid velocities for each pipe, Reynolds numbers, friction factors, friction pressure loss for each pipe, fittings, pressures losses, pressure at join points (nodes), HGL (Hydraulic grade line), pump operating points and more.

The pipeline system is modeled by drawing the join points and the connecting pipes on a drawing pane. Horizontal, vertical or sloping lines can be used to connect one node to another node.

The physical data about the system is then entered, and typically this includes:

- The internal size, internal roughness and length of each connecting pipe.
- The elevation of each join point (node).
- The In-flow and the Out-flow at each join point (if applicable).
- The elevation, liquid level and surface pressure data for each tank.
- The performance data for each pump.

Fluid flow states

Fluids in motion are subjected to various resistance forces, which are due to friction. Friction may occur between the fluid and the pipe work, but friction also occurs within the fluid as sliding between adjacent layers of fluid takes place.

The friction within the fluid is due to the fluid's viscosity. When fluids have a high viscosity, the speed of flow tends to be low, and resistance to flow becomes almost totally dependant on the viscosity of the fluid. This condition is known as 'Laminar flow'.

Fluids which have a low viscosity are usually moved at higher velocities. The flow characteristics change, small eddy currents occur within the flow stream, and the friction between the pipe work and the fluid becomes a factor to be considered. This type of flow is known as 'Turbulent flow'.

Fluid viscosity

A fluid viscosity can be described by its Dynamic viscosity (sometimes called Absolute viscosity), or it's Kinematic viscosity. These two expressions of viscosity are not the same, but are linked via the fluid density.

Kinematic viscosity = Dynamic viscosity / fluid density

Dynamic Viscosity

Water @ 20°C has a viscosity of 1.00×10^{-3} Pa • s or 1.00 Centipoise

Water @ 70°F has a viscosity of 2.04×10^{-5} lb • s/ft²

Kinematic Viscosity

Water @ 20°C has a viscosity of 1.004×10^{-6} m /s² or 1.004000 Centistokes

Water @ 70°F has a viscosity of 10.5900×10^{-6} ft /s²

Pipe Flow Expert has a database of viscosities and densities for common fluids.

Reynolds numbers

Reynolds numbers (Re) describe the relationship between a fluid's velocity, the Internal pipe diameter and the fluid's Kinematic viscosity.

Reynolds number = Fluid velocity x Internal pipe diameter / Kinematic viscosity

Note : Kinematic viscosity (not Dynamic viscosity) must be used to calculate Reynolds numbers. It is generally accepted that the 'changeover' point between laminar flow and turbulent flow, in a circular pipe, occurs when the Reynolds number (Re) is approximately 2100.

i.e. Laminar flow occurs when the Re is less than 2100. Turbulent flow occurs when the Re is greater than 2100.

Friction factors

Many formulas have been developed to model the flow of fluids. The Hazen-Williams formula has been a popular method of estimating the head loss in piping systems for a number of years. However, this empirical formula will only give reasonable accuracy if the fluid is water at 60°F or similar. The Hazen-Williams formula is therefore not useful in analyzing a complex pipe system.

The Colebrook-White formula may be used with confidence to calculate an accurate friction factor applicable to the turbulent flow of fluids. The Colebrook-White formula is applicable over a whole range of fluid densities and viscosities, provided that the fluid flow is turbulent.

Colebrook-White Formula

The Colebrook-White formula:

$$1/\sqrt{f} = 1.14 - 2 \log_{10} [e/D + 9.35/(Re \times \sqrt{f})]$$

f = friction factor

e = internal roughness of pipe

D = internal diameter of pipe

Re = Reynolds number

Friction factors for turbulent flow calculated by Pipe Flow Expert are based on the Colebrook-White formula.

The friction factor for Laminar flow is calculated from $f = 64/Re$

Friction Losses (resistance to flow)

The resistance to fluid flow is usually expressed in fluid head. This is the height of a column of fluid which would exert enough pressure on the fluid at the bottom of the column to make the fluid flow within the system.

If the level of fluid (fluid head) is increased in a supply container, the volume of fluid entering the system from the supply container will increase due to the increase in pressure (force).

Darcy-Weisbach Formula

Fluid head resistance can be calculated by using the Darcy-Weisbach formula.

$$h_{\text{fluid}} = f (L/D) \times (v^2/2g)$$

f = friction factor

L = length of pipe work

D = inner diameter of pipe work

v = velocity of fluid

g = acceleration due to gravity

Fluid head loss calculated by Pipe Flow Expert is based on the Darcy-Weisbach formula.

Fitting head loss

The fluid head resistance through various pipe work fittings can be calculated if the 'K' factor of the fitting is known. Many manufacturers of pipe work fittings and valves publish 'K' factors for their products.

'K' Factor fitting head loss calculation

Fluid head loss through fitting and valves can be calculated from:

$$h_{\text{fluid}} = 'K' \times v^2 / 2g$$

'K' = manufacturer's published 'K' factor for the fitting

v = velocity of fluid

g = acceleration due to gravity

In many systems where pipe lengths are relatively long, the effect of the fitting losses may be considered to be minor losses, and could be ignored during initial assessment.

If a partially open valve is part of the design, the effect of the valve should always be considered as the valve loss may be large.

Pipe Flow Expert has a database of valve and fittings 'K' factors and calculation wizards for:

- gradual enlargements
- gradual contractions
- sudden enlargements
- sudden contractions
- rounded entrances
- long pipe bends

For further information on this subject please refer to 'Flow of Fluids through valves, fittings and pipe'
- Crane Technical Paper No. 410

Calculate total pressure loss

The fluid head resistance can also be expressed a pressure.

Metric units:

$$\text{bar} = h_{\text{fluid}} \times \rho \times g / 100000$$

h = head loss (m)

ρ = fluid density (kg/m³)

g = acceleration due to gravity (m/s²)

Imperial units:

$$\text{psi} = h_{\text{fluid}} \times \text{SG} \times 2.311$$

h = head loss (ft)

SG = specific gravity of the fluid

Energy and Hydraulic Grade Lines

The Energy Grade Line is a plot of the sum of the three terms of the Work-Energy equation or Bernoulli theorem: Fluid Head = The Kinetic energy + The Flow energy + The Potential energy.

$$\text{EGL} = v^2/2g + P/\rho + \text{elevation}$$

v = velocity

g = acceleration due to gravity

P = pressure

ρ = fluid density

The Hydraulic Grade Line is a plot of the sum of two of the terms of the Bernoulli theorem: Fluid Head = The Flow energy + The Potential energy.

$$\text{HGL} = P/\rho + \text{elevation}$$

P = pressure

ρ = fluid density

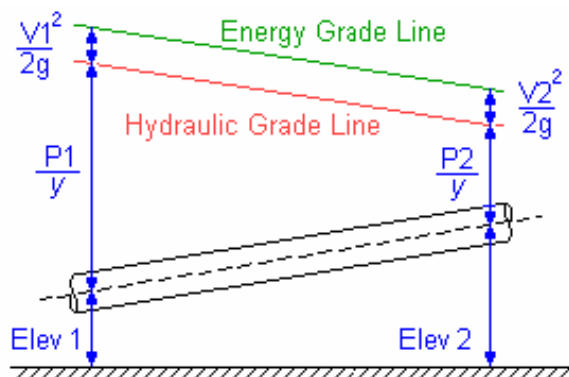


Figure 112 Hydraulic Grade Line

Balanced flow state

Network analysis is based on two major principles:

Mass flow into a joint in the network must be equal to mass flow out of the joint. Assuming that the fluid density does not change, the total flow rate entering the node must equal the total flow rate leaving the node.

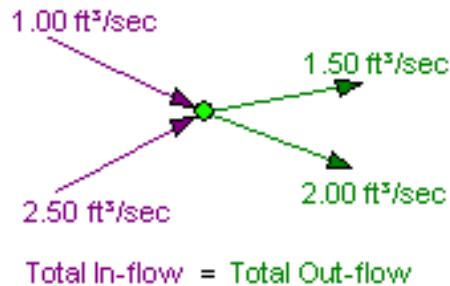


Figure 113 Flow balance at a join point

The pressure drop in the pipes around a loop must be equal to zero. In a recirculation loop the pressure loss in each pipe must be the total of the fluid head energy being provided by the driving force (normally a pump). In a loop where the flows are in opposite directions, the total pressure loss in each pipe with a clockwise flow must equal the total pressure loss in each pipe with an anticlockwise flow.

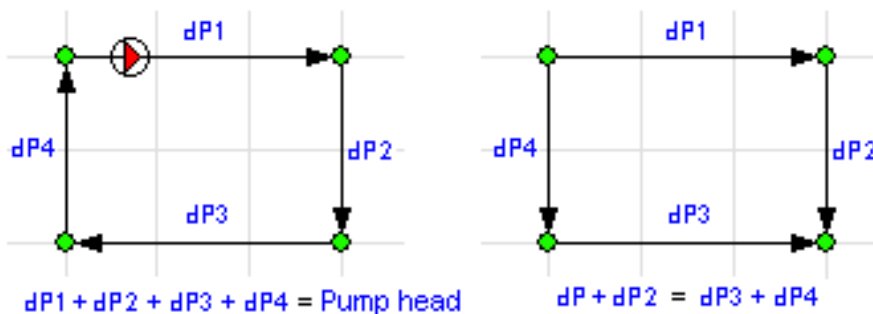


Figure 114 Pressure balance around a loop

Loops, Nodes and Pipes

To solve the unknowns in any pipeline network, a system of nonlinear equations must be developed to mathematically describe the pipeline network in terms of the flows and pressures that must balance at specific points within the system. These equations must be solved simultaneously in order to find a balanced solution.

Loops within a pipeline network consist of a series of connected pipes that return to the start point (the node where the loop started), however pseudo loops can exist between a supply or discharge source, between two supply sources or between two discharge sources.

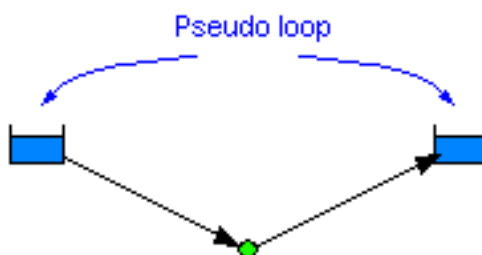


Figure 115 Pseudo Loop

A series of pressure equations describing the pressure loss in each loop must be generated. The same pipe may be included in many different loops.

Where a loop includes a number of different fluid zones the elevation differences of the nodes and the density of the fluid in each pipe along the path in the loop must be used to establish the difference in pressures due to fluid density at the end points of the loop. This pressure difference is used together with the fluid surface pressure difference to establish the net pressure difference around the loop.

A series of mass flow continuity equations must be generated for the mass flow rate balance at each node in the pipeline system.

Pipe Flow Expert will automatically analyze a system, identify all loops and pseudo-loops, generate the pressure equations throughout the network and remove redundant loop equations (those which are already fully described by combining other equations). It will also generate the mass flow balance equations for each node in a pipeline system.

Solving the unknown values

Pipe Flow Expert generates initial estimates for the flow rate at each outlet point in the pipeline system. The Out-flows are used to estimate the flow rate in each pipe. The pressure losses within the system are calculated using friction factors obtained from the Colebrook-White equation, and the friction pressure loss for each pipe is obtained from the Darcy-Weisbach equation. The initial estimates are unlikely to give a balanced pressure result over the whole system and must be adjusted using a variation on the Newton method to converge to a final result where all of the flow rates and pressures within the system are balanced. Pipe Flow Expert defines the elements of the pipeline system in a series of non-linear matrix equations. Once an approximate solution has been obtained, the results are refined using a variation on the Newton method algorithm to ensure the results converge to a balanced flow and pressure result.

System Calculation Tolerances

Pipe Flow Expert uses a two step approach to calculate a balance steady flow state for a system.

An initial approximate solution is obtained using Linear Theory methods and an iterative approach to adjust the flow rates until an approximate pressure balance is achieved.

An alternative approach is to use estimates for the out-flows and to use these estimates to set an initial flow rate in each pipe, with the total in-flow to each join point matching the total out-flow from each join point. The initial flow estimates are unlikely to give a balanced pressure result over the whole system and must be further refined using an iterative approach to adjust the flow rates until an approximate pressure balance is achieved.

Pipe Flow Expert defines the elements of the pipeline system in a series of matrix equations and uses the Newton method to adjust the estimates for the flow rate in each pipe.

Once an approximate solution has been obtained, the results are refined using a variation of the Newton method to ensure convergence until a balanced pressure result is obtained.

A flow balance tolerance and an approximate pressure balance tolerance are used to allow Pipe Flow Expert to find an approximate solution quickly. This approximate solution is then refined until the system is solved within the final pressure balance tolerance.

The flow and pressure balance tolerances and the maximum number of iterations allowed, have been carefully chosen to provide the best overall performance in finding a solution. It is recommended that these values are not changed, as most systems will solve without adjustment to these parameters.

System Components

The user is able to enter the flow rate and head loss information about a component which is to be included in the pipeline system. Pipe Flow Expert generates a performance curve for the component to allow the effect of the component to be modeled.

Cv and Kv Flow Coefficients

Many manufactures of control valves choose to publish a Cv flow coefficient or a Kv flow coefficient to describe the flow / pressure loss characteristics of their control valves in a standardized manner.

Cv Flow Coefficients:

A Cv flow coefficient specifies the amount of water at 60°F (15.55 °C) in US gpm that will flow through a valve and produce a 1.0 psi pressure drop. Thus a Cv flow coefficient of 10 indicates that a 1.0 psi pressure drop will occur with a 10 US gpm of water throughput through the valve.

The Cv flow coefficient of a control valve can be calculated from the flow rate and the pressure drop through the valve. For liquids other than water the ratio of the fluid density to the density of water must also be used in the calculation.

$$C_v = \frac{Q}{\sqrt{\frac{\Delta P}{SG}}}$$

Where:

C_v = flow coefficient

Q = flow rate in US gpm

ΔP = pressure loss in psi across the valve

SG = the ratio of the fluid density to the density of water

With a known C_v flow coefficient the above formula can be re-arranged to calculate the pressure loss for a particular flow rate thus:

$$\Delta P = \frac{SG \times Q^2}{C_v^2}$$

Where:

C_v = flow coefficient

Q = flow rate in US gpm

ΔP = pressure loss in psi across the valve

SG = the ratio of the fluid density to the density of water

The pressure loss through a fitting or valve may also be calculated from:

$$h_{\text{fluid}} = \frac{K \times V^2}{2g}$$

Where:

h_{fluid} = head of fluid in ft.

K = flow coefficient of a valve or fitting

V = fluid velocity entering the fitting in ft/s

g = acceleration due to gravity in ft/sec²

also

$$p = \frac{h_{\text{fluid}} \times D}{144}$$

Where:

P = pressure in psi

h_{fluid} = head of fluid in ft.

D = density of fluid in lbs/ft³

Thus a 1.0 psi pressure drop is equivalent to 2.31 ft head of water at Normal Temperature & Pressure (NTP) or 62.3 lbs/ft³.

When a pipe diameter is known it is possible to establish a flow velocity from the C_v flow coefficient in US gpm for a 1 psi pressure drop. Thus it is possible to calculate an equivalent fitting 'K' factor which will produce the same pressure loss as the control valve C_v rating.

Pipe Flow Expert uses the equivalent fitting 'K' factor method to model the flow and pressure loss through a control valve where a Cv flow coefficient is used to specify the control valve characteristics.

A change to the pipe diameter would result in a change to the value of the equivalent fitting 'K' factor. Pipe Flow Expert re-calculates the equivalent fitting 'K' factor for the current pipe diameter and the fluid density at the start of the solution calculation.

The calculation helper provided on the Cv component dialog uses the flow rate and pressure loss entered by the user, together with the current fluid density to calculate a Cv value to match the specified requirements.

$$Cv = 0.865 Kv \quad (\text{or more accurately } Cv = 0.86497767 Kv)$$

Kv Flow Coefficients:

A Kv flow coefficient specifies the amount of water at 20°C (68 °F) in m³/hour that will flow through a valve and produce a 1.0 bar pressure drop. Thus a Kv flow coefficient of 10 indicates that a 1.0 bar pressure drop will occur with a 10 m³/hour of water throughput through the valve.

The Kv flow coefficient of a control valve can be calculated from the flow rate and the pressure drop through the valve. The density of the liquid in kg/m³ must also be used in the calculation.

$$K_v = Q \sqrt{\frac{D}{1000 \times \Delta P}}$$

Where:

Kv = flow coefficient

Q = flow rate in m³/hr

ΔP = pressure loss in bar across the valve

D = the density of the fluid in kg/m³

1000 = the density of water in kg/m³

The usual arrangement of the formula for calculation of Kv is shown above.

It can be seen that this formula is similar to the one which is used for calculation of Cv values.

With a known Kv flow coefficient, the above formula can be re-arranged to calculate the pressure loss for a particular flow rate thus:

$$\Delta P = \frac{D \times Q^2}{1000 \times K_v^2}$$

Where:

Kv = flow coefficient

Q = flow rate in m³/hr

ΔP = pressure loss in bar across the valve

D = the density of the fluid in kg/m³

1000 = the density of water in kg/m³

The pressure loss through a fitting or valve may also be calculated from:

$$h_{\text{fluid}} = \frac{K \times V^2}{2g}$$

Where:

h_{fluid} = head of fluid in meters.

K = flow coefficient of a valve or fitting

V = fluid velocity entering the fitting in m/s

g = acceleration due to gravity in meters/sec²

also

$$p = \frac{h_{\text{fluid}} \times D \times g}{100000}$$

Where:

P = pressure in bar

h_{fluid} = head of fluid in meters

D = density of fluid in kg/m³

g = acceleration due to gravity in meters/sec²

When a pipe diameter is known it is possible to establish a flow velocity from the Kv flow coefficient in m³/hr for a 1 bar pressure drop. Thus it is possible to calculate an equivalent fitting 'K' factor which will produce the same pressure loss as the control valve Kv rating.

Pipe Flow Expert uses the equivalent fitting 'K' factor method to model the flow and pressure loss through a control valve where a Kv flow coefficient is used to specify the control valve characteristics.

A change to the pipe diameter would result in a change the matching equivalent fitting 'K' factor. Pipe Flow Expert re-calculates the equivalent fitting 'K' factor for the current pipe diameter and the fluid density at the start of the solution calculation.

The calculation helper provided on the Kv component dialog uses the flow rate and pressure loss entered by the user, together with the current fluid density to calculate a Kv value to match the specified requirements.

$$1.000 \text{ Kv} = 1.156 \text{ Cv}$$

The user should be aware that the Cv or Kv flow coefficient specifies the flow rate of water for a particular pressure loss.

When the fluid density is greater or less than water, a different flow rate will be required to produce a 1.00 psi or a 1 bar pressure loss through the valve.

CAUTIONS:

Choked Flow:

If the fluid is a gas and the pressure drop exceeds 50% of the inlet pressure to the valve, **the flow will become choked and it will not be possible achieve the calculated flow rate.**

Pipe Flow Expert does not model changes in the gas characteristics due to pressure or temperature changes.

To correctly model the pressure drop for the entered Cv or Kv value the density of the gas used in the calculation must be the density of the gas at the outlet of the valve/component.

In effect this means that the fluid data for the fluid zone associated with the control valve must be defined for the approximate pressure condition at the outlet of the valve/component.

The pressure drop for the gas flow rate through the valve, based on the entered Cv or Kv flow coefficient and the fluid zone density in the pipe will be calculated.

The calculated pressure drop accounts for the effect of the expansion of the gas through the valve since using the approximate fluid density of the gas at the valve outlet (as specified in the fluid zone associated with the pipe) during calculation of the solution, caters for this characteristic.

If the fluid zone associated with the control valve does not represent the pressure condition at the outlet of the valve/component, it may be necessary to use an adjusted Cv (or Kv) value for valve selection to take in to account the effect of the gas expansion.

The adjusted Cv (or Kv) value should be based on the Cv or Kv formula for sub critical gas pressure drop.

A simplified version of the Cv formula for sub critical gas pressure drop is shown below:

$$C_v = \frac{SCFH}{1360} \sqrt{\frac{D_n \times (^{\circ}F + 460)}{\Delta p \times p_o}}$$

Where:

Cv = flow coefficient

SCFH = flow rate in ft³/hr (NTP)

D_n = the gas density in lbs/ft³ at 0.00 psig

°F = gas temperature

Δp = pressure loss in psi absolute

p_o = valve outlet pressure in psi absolute

A simplified version of the Kv formula for sub critical gas pressure drop is shown below:

$$K_v = \frac{Q}{514} \sqrt{\frac{D_n \times (^{\circ}C + 273)}{\Delta p \times p_o}}$$

Where:

Kv = flow coefficient

Q = flow rate in m³/hr (NTP)

D_n = the gas density in kg/m³ at 0.00 barg

°C = gas temperature

Δp = pressure loss in bar absolute

p_o = valve outlet pressure in bar absolute

Please refer to an appropriate text book for a more detailed formula to take account of piping geometry or gas compressibility, should this be necessary.

Control valve selection:

The Cv (or Kv) flow coefficient of a control valve is usually stated for the fully open flow condition. The Cv (or Kv) flow coefficient will be less when the valve is partly closed.

In an actual system it is important to select a control valve which has an appropriate Cv (or Kv) flow coefficient for the actual valve position that will be used. A control valve that is too small or too large will never be able to provide the correct control in a system.

Most control valve manufactures recommend that you should select a valve where the required Cv (or Kv) value falls between 20% - 80% of the port opening. Some control valve manufactures recommend that an allowance of 30% should be added to the calculated Cv (or Kv) flow coefficient to obtain the minimum full flow Cv (or Kv) flow coefficient rating which the selected valve should have (when fully open).

Please check your control valve selection with the control valve manufacturer.

Flow Control Valves

Flow Control Valves allow the user to set a flow rate in a particular pipe. Pipe Flow Expert removes the pipe from the system and sets an Out-flow demand at the 'From node' and an equal In-flow demand at the 'To node'. Thus the pipe is replaced by these flow demands while the system is being solved.

No other pipe which connects to a pipe with a Flow Control Valve fitted can contain a control valve (FCV, PRV or BPV).

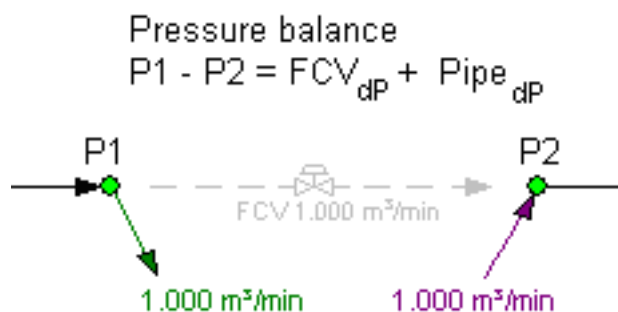


Figure 116 Flow Control Valve replacement

The pressure difference between the 'From node' and the 'To node' must equal the pressure loss introduced by the flow control valve plus the pressure loss that the flow in the pipe will produce, plus the pressure loss that any other component on the pipe produces. The system balance will be maintained when the pipe is reinstated along with the pressure loss introduced by the flow control valve.

If the pressure difference between the 'From node' and the 'To node' is not great enough then the pressure loss in the pipe and the flow control valve pressure loss cannot be set. A warning will be displayed that the pressure in the pipe is not sufficient to deliver the set flow.

Pressure Reducing Valves

Pressure Reducing Valves allow the user to set a pressure at the node downstream of the valve (i.e. at the end of the pipe). The pressure reducing valve (PRV) introduces an additional pressure loss in the pipe to control the pressure at the node downstream of the valve to the value specified by the user.

A pipe with a Pressure Reducing Valve fitted cannot have a tank or pressure demand set on either end. No other pipe which connects to a pipe with a Pressure Reducing Valve fitted can contain a control valve (FCV, PRV or BPV).

Pipe Flow Expert removes the pipe from the system and sets the pressure at the downstream node (P2) by replacing it with an appropriately defined system tank. The tank elevation is set to equal the node elevation, the liquid level is set to zero and the fluid surface pressure is set to the pressure reducing valve setting. At the upstream node, an out-flow demand is then set equal to the flow from P2. Hence the pipe is replaced by a tank at the downstream node and an out-flow at the upstream node while the system is being solved. The outflow at the upstream node must equal the flow rate from the downstream node that is now represented by the tank.

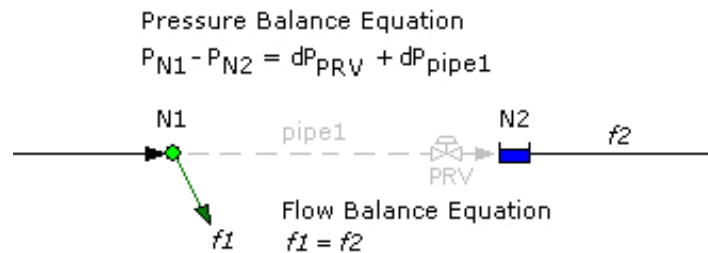


Figure 117 Pressure Reducing Valve replacement

The pressure difference between the upstream node P1 and the downstream node P2 must equal the pressure loss through the pipe, fittings and any components on the pipe plus the pressure loss introduced by the PRV. The pressure balance is then maintained after the system is solved, when the pipe is reinstated along with the pressure loss introduced by the pressure reducing valve.

MODES OF OPERATION: A PRV can operate under three different conditions: (1) regulating, (2) fully closed, and (3) fully open. How the valve operates depends on the defined set pressure value for the valve. The fully open and fully closed positions represent the extreme operations of the valve. Each of the valve positions is described below:

- (1) Regulating** The valve maintains the downstream pressure to the set value by introducing a pressure loss across the valve, thus throttling the flow rate through the PRV.
- (2) Fully Closed** This mode of operation occurs if the valve's set pressure is less than the pressure downstream of the valve for the case where the valve is closed. When this occurs in an actual pipe system, the flow through the PRV reverses and the PRV acts as a check valve, closing the pipe. In PipeFlow Expert, this method of operation is detected and reported but the system is not then solved for this scenario. The user must decide if this method of operation is what they intended and if so then they can close the pipe and continue to solve the system.
- (3) Fully Open** This mode of operation occurs if the valve's set pressure is greater than the pressure upstream of the valve for the case where the valve is fully open. When this occurs in an actual pipe system, the PRV maintains a fully open position and it has no effect on the flow conditions (except to add a frictional loss through

the valve). In PipeFlow Expert, this method of operation is detected and reported. But the system is not solved because the differential pressure across the valve would have to be negative, i.e. the valve would be acting like a pump rather than a pressure control.

Pipe Flow Expert will only solve a system when the PRV is operating in Regulating mode.

AVOIDING PRV OPERATION PROBLEMS: In general, PRV operation problems can be avoided by finding the valve's pressure regulating range and specifying the valve's set pressure to a value within this range, such that the mode of operation is 'Regulating'. First, solve the system without the PRV control and note the pressure at the node downstream of the pipe which previously contained the PRV. This is the maximum pressure the PRV can be set to (i.e. it is equivalent to finding the valve's inlet pressure for the case where the valve is fully open). Secondly, solve the system after closing the pipe that contains the PRV and note the pressure at the node downstream of the closed pipe. This is the minimum pressure the PRV can be set to (i.e. it is equivalent to finding the pressure downstream of the valve for the case where the valve is fully closed).

Back Pressure Valves

Back Pressure Valves allow the user to set a pressure at a node upstream of the valve (i.e. at the start of the pipe). The back pressure valve (BPV) introduces an additional pressure loss in the pipe to control the pressure at the node upstream of valve to the value specified by the user.

A pipe with a Back Pressure Valve fitted cannot have a tank or pressure demand set on either end. No other pipe which connects to a pipe with a Back Pressure Valve fitted can contain a control valve (FCV, PRV or BPV).

Pipe Flow Expert removes the pipe from the system and sets the pressure at the upstream node (P1) by replacing it with an appropriately defined tank. The tank elevation is set to equal the node elevation, the liquid level is set to zero and the fluid surface pressure is set to the back pressure valve setting. . At the downstream node, an in-flow demand is then set equal to the flow into the upstream node P1. Hence the pipe is replaced by a tank at the upstream node and an in-flow at the downstream node while the system is being solved. The in-flow at the downstream node must equal the flow rate into the upstream node that is now represented by a pressurized tank.

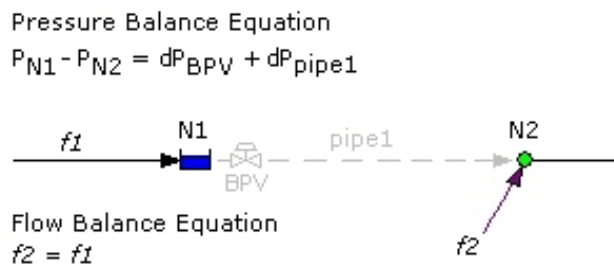


Figure 118 Back Pressure Valve replacement

The pressure difference between the upstream node P1 and the downstream node P2 must equal the pressure loss through the pipe, fittings and any components on the pipe plus the pressure loss introduced by the BPV. The pressure balance is then maintained after the system is solved, when the pipe is reinstated along with the pressure loss introduced by the pressure reducing valve.

MODES OF OPERATION: A BPV can operate under three different conditions: (1) regulating, (2) fully closed, and (3) fully open. How the valve operates depends on the defined set pressure value for the valve. The fully open and fully closed positions represent the extreme operations of the valve. Each of the valve positions is described below:

- (1) Regulating** The valve maintains the upstream pressure to the set value by introducing a pressure loss across the valve, thus reducing the flow rate through the BPV.
- (2) Fully Closed** This mode of operation occurs if the valve's set pressure is greater than the pressure upstream of the valve for the case where the valve is closed. When this occurs in an actual pipe system, the flow through the BPV reverses and the BPV acts as a check valve, closing the pipe. In PipeFlow Expert, this method of operation is detected and reported but the system is not then solved for this scenario. The user must decide if this method of operation is what they intended and if so then they can close the pipe and continue to solve the system.
- (3) Fully Open** This mode of operation occurs if the valve's set pressure is less than the pressure downstream of the valve for the case where the valve is fully open. When this occurs in an actual pipe system, the BPV maintains a fully open position and it has no effect on the flow conditions (except to add a frictional loss through the valve). In PipeFlow Expert, this method of operation is detected and reported but the system is not solved because the differential pressure across the valve would have to be negative, i.e. the valve would be acting like a pump rather than a pressure control.

Pipe Flow Expert will only solve a system when the BPV is operating in Regulating mode.

AVOIDING BPV OPERATION PROBLEMS: In general, BPV operation problems can be avoided by finding the valve's pressure regulating range and specifying the valve's set pressure to a value within this range, such that the mode of operation is 'Regulating'. First, solve the system without the BPV control and note the pressure at the node upstream of the pipe which previously contained the BPV. This is the minimum pressure the BPV can be set to (i.e. it is equivalent to finding the pressure at the valve outlet for the case where the valve is fully open). Secondly, solve the system after closing the pipe that contains the BPV and note the pressure at the node upstream of the closed pipe. This is the maximum pressure the BPV can be set to (i.e. it is equivalent to finding the pressure at the valve inlet for the case where the valve is fully closed).

Pumps (with Flow versus Head Curve)

The user is able to enter flow rate and head loss information about a pump which is to be used in the pipeline system. Pipe Flow Expert generates a performance curve for the pump to allow the pump performance to be modeled as part of the pipeline system.

Fixed Flow Rate Pumps

The user is able to elect to enter a fixed flow rate for a pump. This situation may occur when the natural flow distribution to different parts of the network has to be determined, or when the system has a variable speed pump that has been set to produce a set flow rate. The Fixed Flow Rate Pump is modeled in a similar manner to the Flow Control Valve described above. Pipe Flow Expert removes the pipe on which the pump is mounted and sets an Out-flow demand at the 'From node' and an equal In-flow demand at the 'To node'. The pipe and the pump are replaced by these flow demands while the system is being solved.



Figure 119 Fixed Flow Rate Pump replacement

Since the head pressure provided by the pump is unknown, the system balance cannot be 'tuned' by iterating along the pump performance curve. For this reason it is not possible to include pressure control devices such as flow control valves on all outlet paths through the system when a fixed flow rate pump has been selected (this would result in an over-controlled system).

Fixed Head / Pressure Rise Pumps

The user is able to elect to enter a fixed head or pressure rise for a pump. This situation may be useful when trying to estimate the pump head required to produce the flow distribution to different parts of the network, where a pump flow versus head curve has not been established.

The flow rates would be set by flow control valves on the outlet legs.

The minimum pump head would be determined by subtracting the smallest pressure introduced by the flow control valves from the fixed head supplied by the pump.

Net Positive Suction Head available

Pipe Flow Expert is able to calculate the pressure available at a pump inlet. This pressure will change if the mounting position of the pump along a pipe is changed. The vapor pressure of the fluid being pumped is subtracted from the pump inlet pressure to obtain the Net Positive Suction Head available. The NPSHa must be higher than the pump manufacturer's NPSHr (Net Positive Suction Head requirement for the flow rate) in order to prevent gas bubbles forming in the fluid.

Two Phase Flow

Pipe Flow Expert is not able to model two phase flow, such as gas/liquid mixtures.

When two different fluids are mixed together it is possible that two-phase flow may occur at some point in a system. Pipe Flow Expert does not calculate the pressure drop for two-phase flow.

Two-phase flow can produce an extremely high pressure drop many times greater than the pressure drop of either individual fluid. The user should make due allowance for the two-phase flow pressure drop by using a component to add an appropriate additional pressure loss.

Slurries

Slurries which have a constant density and a constant viscosity are able to be modeled, provided the minimum velocity to keep the solids in suspension is maintained throughout the pipeline system. The density and viscosity of the slurry mixture must be entered as the fluid data.

Working with compressible fluids

Pipe Flow Expert has been designed for the analysis of pipeline systems using the Darcy-Weisbach equation to calculate friction loss. The Darcy-Weisbach equation is normally applicable to incompressible Newtonian fluids, since the density of these fluids can be considered to be constant.

The system calculations do not take account of any compression or expansion of the fluid that may occur due to pressure changes in the fluid and therefore the results obtained for compressible fluids may only be acceptable under certain conditions.

It is however common practice for the Darcy-Weisbach equation to be used to calculate the friction losses for compressible fluids within a pipeline system, if certain constraints about the system being modeled are understood.

It is up to the pipe systems engineer to be familiar with good engineering practice and to use their own judgment about the accuracy of results for a system that contains a compressible fluid.

Considerations when using compressible fluids

For systems that contain compressible fluids the following should be noted:

The density of each fluid zone in the system must reflect the density of the compressed fluid condition in that fluid zone.

The mass flow rates entering the system and the mass flow rates leaving the system must be balanced. Normally In-Flow or Out-Flow values are entered using a mass flow rate units, such as lb/sec, lb/min, lb/hour, kg/sec, kg/min or kg/hour, for a system which involve compressible fluids.

Where volumetric In-Flow rates entering the system have to be used these values must be entered as the 'actual' flow rate of the fluid for that particular fluid zone applicable to the pipe from which the fluid will enter, i.e. the flow rate of the fluid must be based on the density of the fluid zone (and not on the uncompressed volumetric flow rate of the fluid).

Where volumetric Out-Flow rates leaving the system have to be used these values must be entered as the 'actual' flow rate of the fluid for that particular fluid zone applicable to the pipe from which the fluid will leave, i.e. the flow rate of the fluid must be based on the density of the fluid zone (and not on the uncompressed volumetric flow rate of the fluid).

The pressure at all In-Flow points for an individual fluid zone must be the same to the degree that the pressure does not change the volume and density of the fluid zone significantly.

Devices which change the volume/density of the fluid should not be included as part of the system analysis.

Pipe Flow Expert uses a constant value for the compressible fluid density throughout each individual fluid zone in the pipeline system. Where volumetric flow rates are used to specify the In-Flows and Out-Flows to the system, the individual density for each fluid zone is used to convert from volumetric flow rate units to the mass flow rate units used internally by Pipe Flow Expert. The calculations are performed using the mass flow rates to achieve mass flow rate continuity and balance within the pipeline system. The results are then converted back to the appropriate volumetric units for each pipe, based on the fluid zone data associated with the pipe.

The effects of pressure changes and temperature changes on the fluid density are not modeled.

If the calculated pressure drop in an individual fluid zone in the system is less than 10% of the pressure at the compressible fluid entry points into the individual fluid zone, then a reasonable accuracy of the results may be expected.

If the calculated pressure drop in an individual fluid zone in the system is greater than 10% but less than 40% of the pressure at the compressible fluid entry points into the individual fluid zone then the Darcy-Weisbach equation will give a reasonable accuracy provided that the calculations are repeated using the average density of the individual fluid zone.

Note 1:

The Fluid density at the compressed fluid condition can be calculated using the normal density of the compressible fluid and the fluid pressure.

Compressed fluid density =
Normal fluid density x (Fluid pressure + Atmospheric. pressure) / Atmospheric pressure

Example: If a volume of 10 m³ of air at normal temperature and pressure is compressed to 6 bar g

The Fluid density would be:

$$1.2047 \times (6.000 + 1.01325) / 1.01325 = 8.3384 \text{ kgs/m}^3$$

Note 2:

The Actual flow rate of the fluid at the compressed fluid condition can be calculated using the uncompressed volume of the fluid and the fluid pressure.

Actual flow rate =
Uncompressed fluid volume x Atmospheric pressure

$$(\text{Fluid pressure} + \text{Atmospheric pressure})$$

Example: If a flow of 10 m³/s of air at normal temperature and pressure is compressed to 6 bar g the Actual flow rate would be:

$$10 \times 1.01325 / (6.000 + 1.01325) = 1.445 \text{ m}^3/\text{s}$$

Glossary

Term	Description
Absolute pressure	Pressure measured with respect to zero pressure.
Atmosphere	A standard atmospheric pressure of 1.01325 bar a or 14.696 psi a.
Centipoise	Absolute viscosity of a fluid expressed in $\text{Pa} \cdot \text{s} \times 10^{-3}$
Centistokes	Kinematic viscosity of a fluid expressed in $\text{m}^2/\text{s} \times 10^{-6}$ Note: Pipe Flow Expert requires fluid viscosity to be entered in Centipoise.
Colebrook-White equation	An equation used to calculate accurate friction factors from the internal diameter and internal roughness of a pipe and the Reynold's number for the flow conditions.
Darcy-Weisbach equation	An equation used to calculate the frictional head loss due to fluid flow from the friction factor, the length and diameter of the pipe, the velocity of the fluid and the gravitational constant.
Demand flow	The In-Flow entering the system or the Out-Flow leaving the system.
Demand pressure	The pressure at a point of exit from the system.
Discharge	Out-Flow leaving the system.
Dynamic viscosity	The absolute viscosity of a fluid.
Friction factor	A factor to be used in the Darcy-Weisbach equation. Either calculated from the Colebrook-White equation or read from the Moody diagram.
Elevation	The height above sea level of a node or tank.
End pressure	The pressure at a point where fluid leaves the system.
Fixed pressure	A static pressure loss which is independent of the flow rate.
Fluid head	The resistance to flow expressed in height of fluid as a motive force.
Gage pressure	Pressure measured with respect to atmospheric pressure.
Hydraulic grade line	The pressure at a point in the system expressed in height of fluid plus the elevation above sea level of the node or the tank.
in Hg	Height of a column of mercury in a barometer expressed in inches.
K value	Coefficient of frictional loss through valve or pipe fittings.
Kinematic viscosity	The absolute viscosity of a fluid divided by the fluid density.
Moody diagram	A graphical representation of the relationship between Reynold's number, relative roughness and Friction factor.
mm Hg	Height of a column of mercury in a barometer expressed in millimeters.
NPSHa	Net Positive Such Head available.
NPSHr	Net Positive Such Head requirement.
Pressure loss	The friction loss due to fluid flow expressed in fluid head or Gage pressure.
Pump head	The motive force developed by a pump expressed in height of fluid. (Pump performance graphs usually show pump head for water).
Relative roughness	A dimensionless number expressing the internal roughness of a pipe divided by the internal diameter of a pipe.
Reynold's number	A dimensionless number derived from the fluid velocity, the internal diameter of the pipe and the Kinematic viscosity of the fluid.
Supply	In-Flow entering the system.
Vapor pressure	The absolute pressure at which a liquid will start to evaporate.
Viscosity	A measure of a fluid's resistance to flow. See absolute viscosity and Kinematic viscosity.

Index

- .pfco files, 95
- .pfpm files, 103
- Adding Text Items, 113
- Adding Text to the Drawing, 113
- back pressure valves, 184
 - adding, 102
 - understanding, 102
- balanced flow state, 175
- BPV
 - adding, 99
- Calculating and Solving
 - calculating, 125
- calculating pipe system results, 124
- Calculation, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170
- calculation theory, 136, 171
- Change attributes of more than one node, 69
- Change attributes of more than one pipe, 68
- Change the system view, 58
- Changing the fluid Density and Viscosity, 73
- choosing item labeling, 62
- choosing pipe drawing defaults, 64
- choosing system units, 63
- Choosing units, 61
- Colebrook-White Formula, 172
- component pressure losses
 - .pfco file, 95
 - adding, 89
 - based on a data curve, 95
 - deleting, 122
 - fixed, 95
 - more than one on a pipe, 95
 - saving data to a file, 95
 - viewing and modifying, 117
- components
 - adding, 95
 - pressure loss, 95
 - understanding, 95
- Compressed fluid condition
 - Actual flow rate, 188
 - fluid density, 188
- compressible fluids, 187
 - considerations, 187
- computer minimum requirements, 14
- Configuration Options dialog
 - Calculations tab, 51
 - Default Values tab, 47
 - Labelling tab, 45
 - Units tab, 46
- Configuration Options screen, 44
- configuring
 - calculation parameters, 71
 - imperial units, 61
 - metric units, 61
 - results, 124, 128
 - units, 63
- control valves
 - deleting, 123
- Copying between drawing, 120
- Create a PDF Report, 134
- creating
 - pipe systems, 56
- Creating a system, 152
- Cv flow coefficient, 177
- Cv Flow Coefficient, 39
- Cv Flow Coefficients, 97
- Cv Value, 177
- Cv Values, 97
- Darcy-Weisbach Formula, 173
- Daxesoft Ltd.
 - contacting, 17
- Defining Fluid Zones, 73
- demand flows
 - adding, 81, 109
 - deleting, 122
 - understanding, 109
 - viewing and modifying, 117
- demand in-flows
 - adding, 109
- demand out-flows
 - adding, 109
- demand pressures
 - adding, 111
 - deleting, 121
 - understanding, 111
 - viewing and modifying, 117
- Documentation menu, 23
- Drawing menu, 22
- Drawing pane, 43
 - cutting, copying, and pasting nodes, 118
 - inverted view, 116
 - mirror view, 115
 - moving components, 117
 - panning pipe system, 115
 - undo and redo functions, 120
 - view whole of the pipe system, 115
 - zoom in, 114
 - zoom out, 114
- Edit menu, 20
- end pressure. See demand flows, See demand flows

- End Pressure Data, 31
- Example Systems
 - Example 01, 137
 - Example 02, 138
 - Example 03, 139
 - Example 04, 140
 - Example 05, 141
 - Example 06, 142
 - Example 07, 143
 - Example 08, 144
 - Example 09, 145
 - Example 10, 146
 - Example 11, 147
 - Example 12, 148
 - Example 13, 149
 - Example 14, 150
 - Example 15, 151
 - Example 16, 152
 - Example 17, 157
 - Example 18, 158
 - Example 19, 159
 - Example 20, 160
 - Example 21, 161
 - Example ISO 01, 162
 - Example ISO 02, 163
 - Example ISO 03, 164
 - Example ISO 04, 165
 - Example ISO 05, 166
 - Example ISO 06, 167
 - Example ISO 07, 168
 - Example ISO 08, 169
 - Example ISO 09, 170
- FCV
 - adding, 99
- File menu, 19
- fitting head loss, 173
- fittings
 - adding, 89
 - adding pressure loss, 89
 - adding to the database, 91
 - calculated K value, 91
 - deleting, 122
 - viewing and modifying, 117
- Fixed flow rate pump
 - Limited application, 107
- flow control valves, 182
 - adding, 101
 - understanding, 101
- flow controls
 - viewing and modifying, 117
- fluid
 - adding to the database, 76
 - defining for a fluid zone, 75
 - viscosity, 171
- fluid flow states, 171
- Fluid menu, 21
- Fluid Zones, 73
- fluids compressible
 - working with, 187
- friction factors, 172
- Friction Losses, 172
- Gas data
 - adding to the database, 77
- Help menu, 24
- hydraulic grade line
 - energy grade line, 174
- imperial units, 61, 63
- Interface and Menus, 18
- Isometric Mode Toggle, 58
- Isometric System Options, 56
- Join Point Data, 32
- join points
 - adding, 80
 - adding demand flows, 81
 - deleting, 121
 - viewing and modifying, 117
- K factor fitting head loss calculation, 173
- Keyboard shortcuts, 28
- Kv flow coefficient, 177
- Kv Flow Coefficient, 39
- Kv Flow Coefficients, 97
- Kv Value, 177
- Kv Values, 97
- License menu, 23
- loops nodes pipes, 175
- Menu bar, 18
- metric units, 61, 63
- Microsoft Excel, 131
- minimum computer requirements, 14
- Moving a pipe to link at a new position, 120
- net positive suction head, 186
- New pipe system
 - creating, 56, 57
- Node pane, 29
 - for demand pressures, 31
 - for join points, 32
 - for tanks, 30
- Node Types, 29
- Node Updates Tab, 49
- nodes
 - adding, 78, 80
 - cutting, copying, and pasting, 118
 - deleting, 121
 - viewing and modifying, 117
- PDF Report of System Results, 134
- Pipe
 - Finding a pipe or node, 115

- Pipe diameter data dialog, 35, 47, 64
 - for material, 35
 - for size, 37
- Pipe features, 34
- Pipe fitting friction coefficients dialog, 38
- Pipe Flow Expert
 - about, 13
- Pipe Pane, 33
- pipe system
 - adding a Fixed Flow Rate pump, 106
 - adding a Fixed Head / Pressure Rise pump, 107
 - adding a pump, 103, 104
 - adding back pressure valves, 102
 - adding components, 95
 - adding control valves, 99
 - adding demand flows, 81, 109
 - adding demand pressures, 111
 - adding fittings and valves, 89
 - adding flow controls, 101
 - adding join points, 80
 - adding pipes, 82
 - adding pressure Reducing Valves, 101
 - adding tanks, 78
 - calculating, 124
 - configuring results, 128
 - defining fluid for a fluid zone, 75
 - deleting components, 120
 - Emailing a screen image, 60
 - exporting results, 131
 - inverted view, 116
 - mirror view, 115
 - modifying, 114
 - moving components, 117
 - panning, 115
 - printing, 59
 - redesigning, 132
 - saving, 57
 - Saving a screen image, 60
 - saving as an enhanced metafile, 60
 - saving results, 130
 - sending via e-mail, 59
 - tanks, 78
 - view whole of the pipe system, 115
 - viewing, 114
 - viewing results, 130
- Pipe System
 - deleting a group of items, 121
- pipe systems
 - creating, 56
- PipeFlow.co.uk
 - contacting, 17
- pipes
 - adding, 82
 - adding materials to the database, 85
 - adding sizes to the database, 85
 - defining material, 83
 - defining size, 83
 - deleting, 121
 - Preventing backflow in a pipe, 88
 - reversing pipe flow, 86
 - shutting off a pipe, 86
 - Use as default pipe feature, 88
 - Using the pipe sub-menu while drawing, 87
 - viewing and modifying, 117
- pressure reducing valves, 183
 - adding, 101
 - understanding, 101
- printing
 - pipe systems, 59
 - pump data and graphs, 106
- Properties of Mixed Fluids, 74
- PRV
 - adding, 99
- Pump Data dialog, 41
- pumps
 - .pfpm file, 103
 - adding, 103, 104
 - adding a pump curve, 105
 - adding Fixed Flow Rate, 106
 - adding Fixed Head Pump, 107
 - deleting, 123
 - printing data and graphs, 106
 - pump curve graph, 106
 - saving data to a file, 103
 - viewing and modifying, 117
- Pumps
 - example pumps, 108
 - Fixed flow rate, 185
 - Fixed Head / Pressure Rise Pumps, 186
 - Performance Curve, 185
- redo function, 120
- Registration and Licensing Information, 15
- results
 - calculating, 124, 125
 - configuring, 128
 - exporting, 131
 - saving, 130
 - viewing, 130
- Results Colors Selection, 70
- Results Colors Tab, 50
- Results dialog, 124
- Results Printing using PDF Report, 134
- Results tables, 53
- ResultsLogForm dialog, 124
- Reynolds number, 172
- Rotating a group of items, 119
- Selected Area
 - zoom in, 114
- Set Component Pressure Loss dialog, 39
- Set Control Valve dialog, 40
- Set Flow Demands dialog, 33
- Setting System Options, 61
- slurries, 186
- solving a pipe system, 125
- Step, 152

- system
 - calculation tolerances, 177
 - components, 177
- Tank Node Data, 30
- tanks
 - adding, 78
 - deleting, 121
 - info, 78
 - viewing and modifying, 117
- theory calculation, 136, 171
- tool bar buttons, 25
- Tools menu, 23
- total pressure loss, 174
- two phase flow, 186
- Two phase flow additional pressure loss, 74
- undo function, 120
- Units menu, 21
- unknown values, 176
- valves
 - adding, 89
- Viewing and Modifying System Components, 117
- Viewing and Modifying System Data, 116
- Viewing Individual Results, 54
- Walkthrough, 152
- zoom function, 114